



Tube Chassis Layout

PARTS LIST

DECK COMPONENTS

- 63-009 Belt, Capstan
- 88-111 Belt, Counter
- 88-585 Bearing, Ball, Flywheel
- 88-114 Pinch Roller, Solenoid Assy.
- 88-108 Brake, Band
- 88-587 Bushing, Capstan Belt, Roller
- 62-72 Cap, Pinch Wheel
- 88-113-1 Capstan, Flywheel and Shaft
- 88-122 Capstan, Motor Assy.
- 88-624 Fan, Capstan Motor
- 88-626 Head, Erase
- 88-627 Head, Play
- 88-628 Head, Record
- 88-630 Assy., Head
- 88-094 Counter, Index (Tape)
- 88-698 Motor, Supply
- 88-704 Motor, Take-up

- 88-148 Pinch Wheel

- 88-659 Table, Reel
- 88-507 Spring, Hold-Down Rec/Rev
- 88-508 Spring, Hold-Down Function
- 88-510 Spring, Pre-amp Tube Hold-Down
- 88-711 Spring, 6 x 4
- 88-682 Spring, Record Eq. Plug
- 88-683 Spring, Brake Adj. Screw
- 88-684 Spring, Brake Band Lever
- 88-377 Spring, Remote Control Cover
- 88-746 Cover, Head
- 88-099 Coil, Hum Bucking

SWITCHES, JACKS, BUTTONS & KNOBS

- 88-588 Button, Monitor Switch
- 88-589 Button, Push to Record
- 29-7315 Jack, 3 Pole, Stereo Headset
- 29-7260 Jack, 2 Pole, In./Out.
- 88-631 Knob, Mic./Line/Loudness Rt.
- 88-632 Knob, Mic./Line/Loudness Lt.
- 88-633 Knob, Base and Treble
- 88-105 Knob, Track Selector
- 88-104 Knob, Speed Change
- 88-102 Knob, Pushbutton, Power
- 88-636 Knob, Pushbutton, Stop/Rew./Play
- 88-071 Switch, Micro for Brake Solenoid
- 88-100 Switch, Rotary Track Selector
- 88-685 Switch, Monitor Pre-amp.

- 88-687 Switch, Slide, DPDT Speed Ch.
- 88-688 Switch, Pushbutton, Rec. Pre-amp.
- 13-998 Switch, A.C. Power
- 88-691 Switch, Leaf, Auto-Stop
- 88-692 Switch, Leaf, Fast-Forward/Rev.
- 88-693 Switch, Leaf, Stop
- 88-694 Switch, Leaf, Play
- 88-686 Switch, Speaker, On/Off, Phase Eq. 50-60 CPS

GRILLES AND PANELS

- 11-256 Grille, Cover
- 11-258 Grille, Cover Bottom
- 11-258-1 Grille, Cover Top
- 22-819 Panel, Cover, Right
- 22-819-1 Panel, Cover, Left

PRE-AMP COMPONENTS

- 88-225 Tube, 12AD7
- 17-380 Tube, 12AU7
- 17-386 Tube, 12AT7
- 17-379 Tube, 12BW7A
- 17-381 Tube, 6 x 4
- 88-369 Transformer, Power Pre-amp.
- 17-432 Thermister, M 904-101
- 88-528 Solenoid, Break & Pinch Wheel
- 88-101 Meter, VU
- 88-591 Capacitor, Ele., 1000 x 1000 MFD x 50V
- 14-783 Capacitor, Ele., 1000 MFD x 25V
- 14-789 Capacitor, Ele., 1000 MFD x 3V
- 88-304 Coil, Audio Choke
- 88-609 Coil, Bias Oscillator, 60 Kc
- 88-610 Coil, Bias Oscillator, 90 Kc
- 88-611 Coil, Peaking, 20 MH

MISCELLANEOUS

- 27-335 Cord, A.C. Interlock Type
- 25-103-4 Fuse, 3 amp.
- 29-7349 Fuseholder
- 624-02 Lamp, Pilot, Bayonet
- 88-639 Lamp, Pilot, Screw Base
- 88-280 Lamp, Neon

POWER AMPLIFIER (OPTIONAL)

- 88-95 Transformer, Power
- 17-423 Transistor, 42-06
- 17-424 Transistor, 42-05, 2N647
- 17-425 Transistor, 42-04, 2N591
- 25-234 Amplifier, Power
- 17-422 Diode, CER 67
- 17-394 Diode, Silicon, 400 PIV, Top Hat
- 88-125 Diode, SW-05
- 88-616 Diode, S2A20

NOTE: Specify color when ordering painted parts.

RELEVANT SERVICE BULLETINS
(Referenced to Service Manual A-1)

Number	Number	Number	Number