



- NOTE:**
- S1-1 ~ S1-6 ..... Record/Playback Selector Switch (Shown in Playback position).
  - S2 ..... Amplifier/Motor Power ON/OFF Switch (ON in Record/Playback/FF, OFF in Stop mode only).
  - S3 ..... Power ON/OFF Switch.
  - S4-1 ~ S4-2 ..... Tape/Radio Selector Switch (Shown in Tape position).
  - S5 ..... Monitor Switch (Shown in Monitor/OFF position).
  - Resistors are 1/4 watt unless specified otherwise.  
K = 1,000Ω, M = 1,000,000Ω.
  - Capacitors are microfarad (μF) unless specified otherwise.  
P = Micro-microfarads.
  - Values indicated in   are DC voltages between the chassis and electrical parts.  
Upper value for playback.  
Medium value for recording.  
Lower value for radio.

Fig. 5-42. Panasonic Model RQ-233S cassette tape recorder with AM radio. (Courtesy Matsushita Electric Corp. of America)