

SCHEMATIC DIAGRAM-4


B DVD MODULE (2) CIRCUIT

— : +B SIGNAL LINE

⬡ : CD-DA SIGNAL LINE


TO DVD
MODULE (1)
CIRCUIT
(FP5202) ON
SCHEMATIC
DIAGRAM-3

A

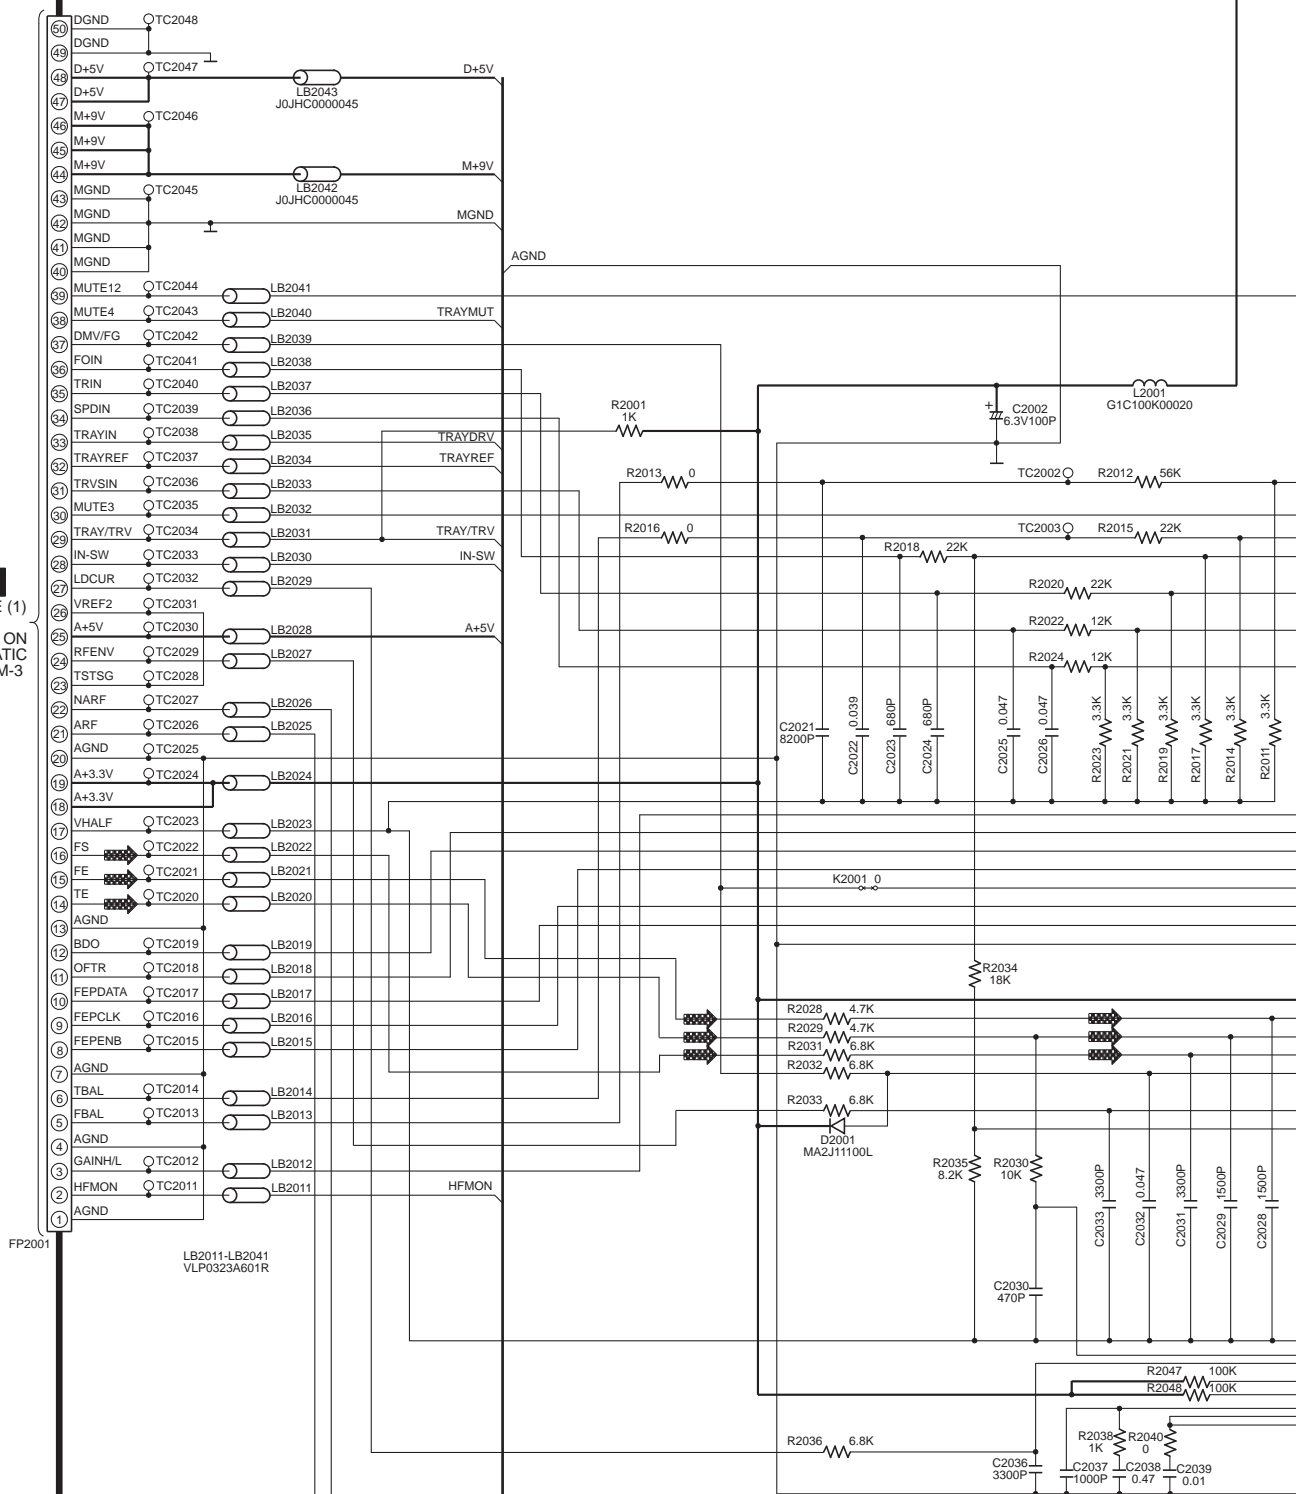


B DVD MODULE (2) CIRCUIT

 : CD-DA SIGNAL LINE

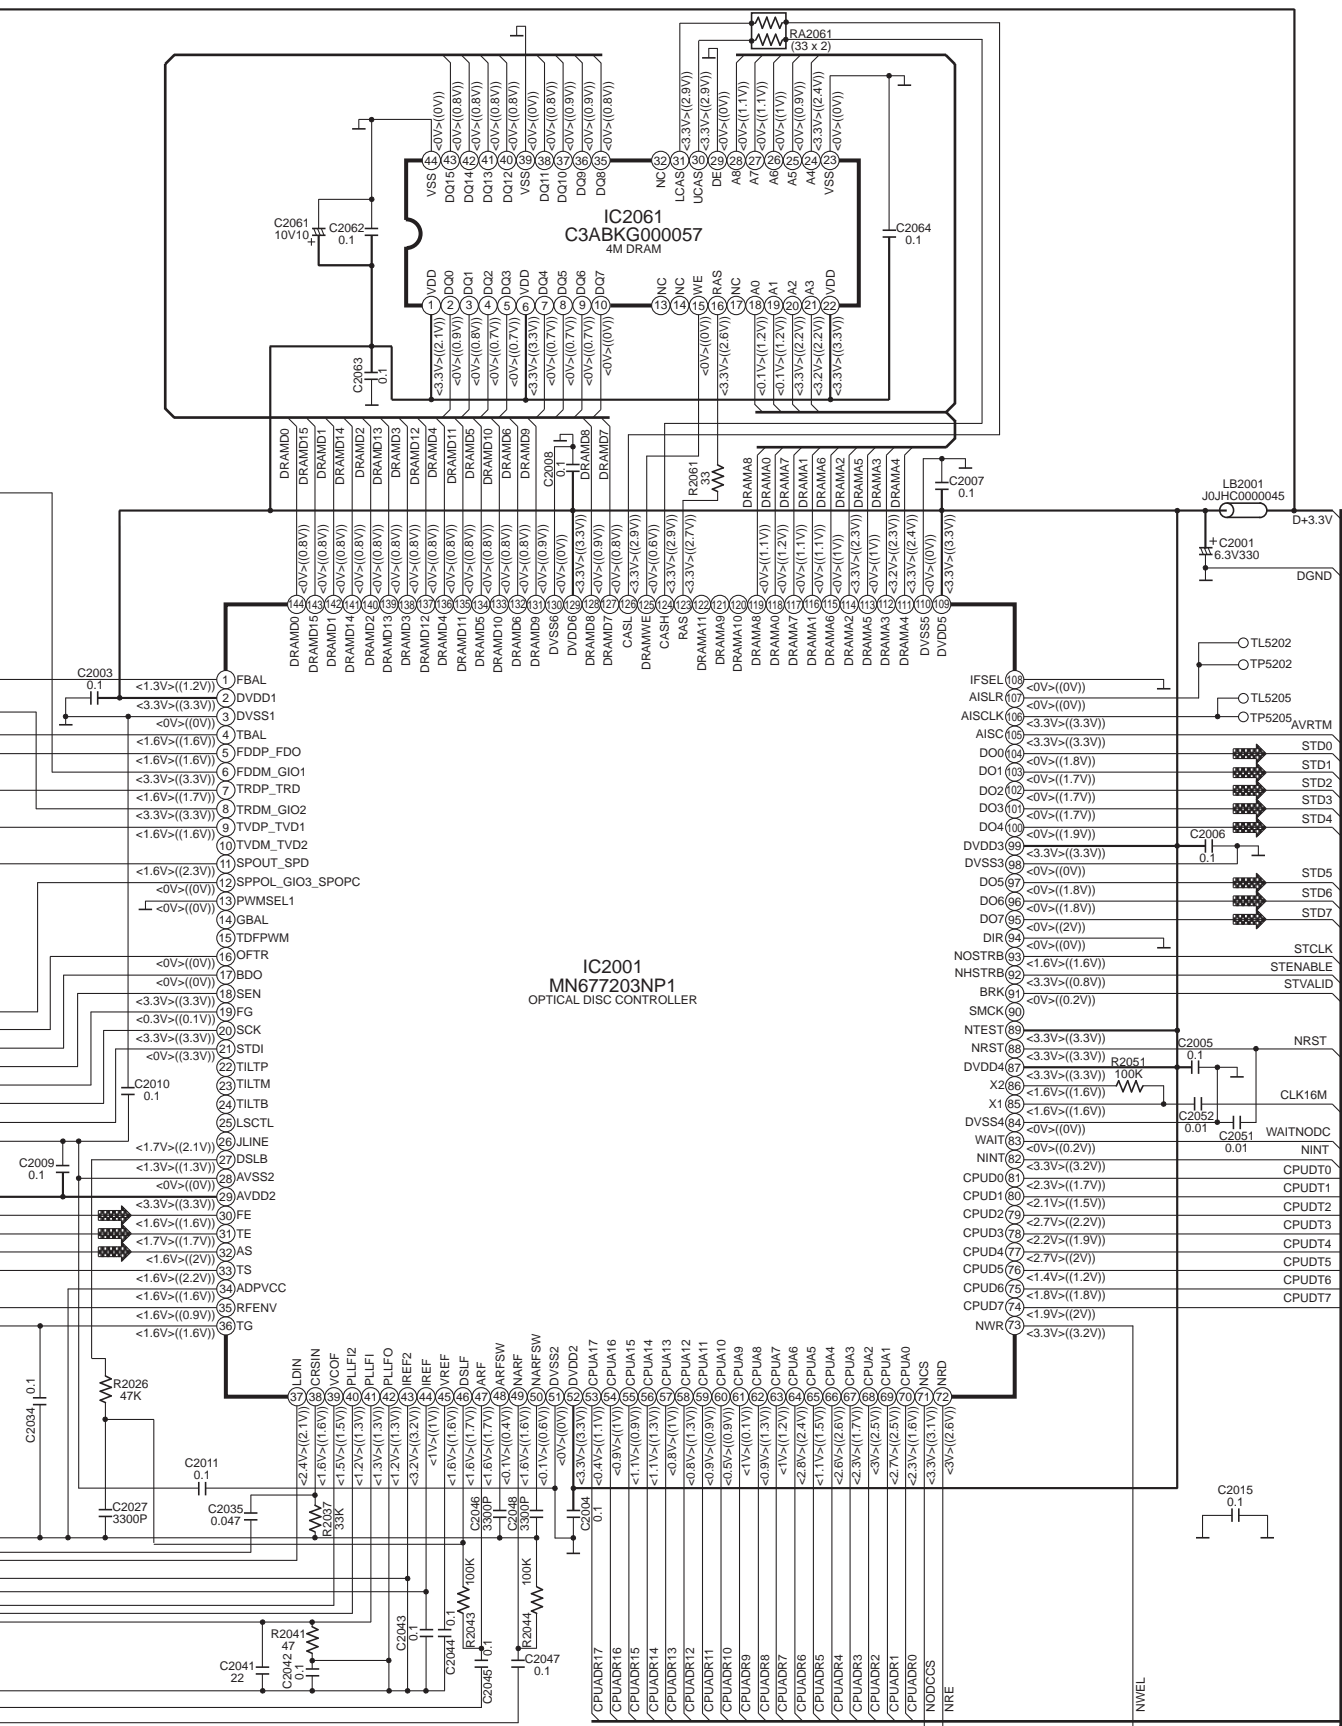


B DVD MODULE (2) CIRCUIT

———— : +B SIGNAL LINE

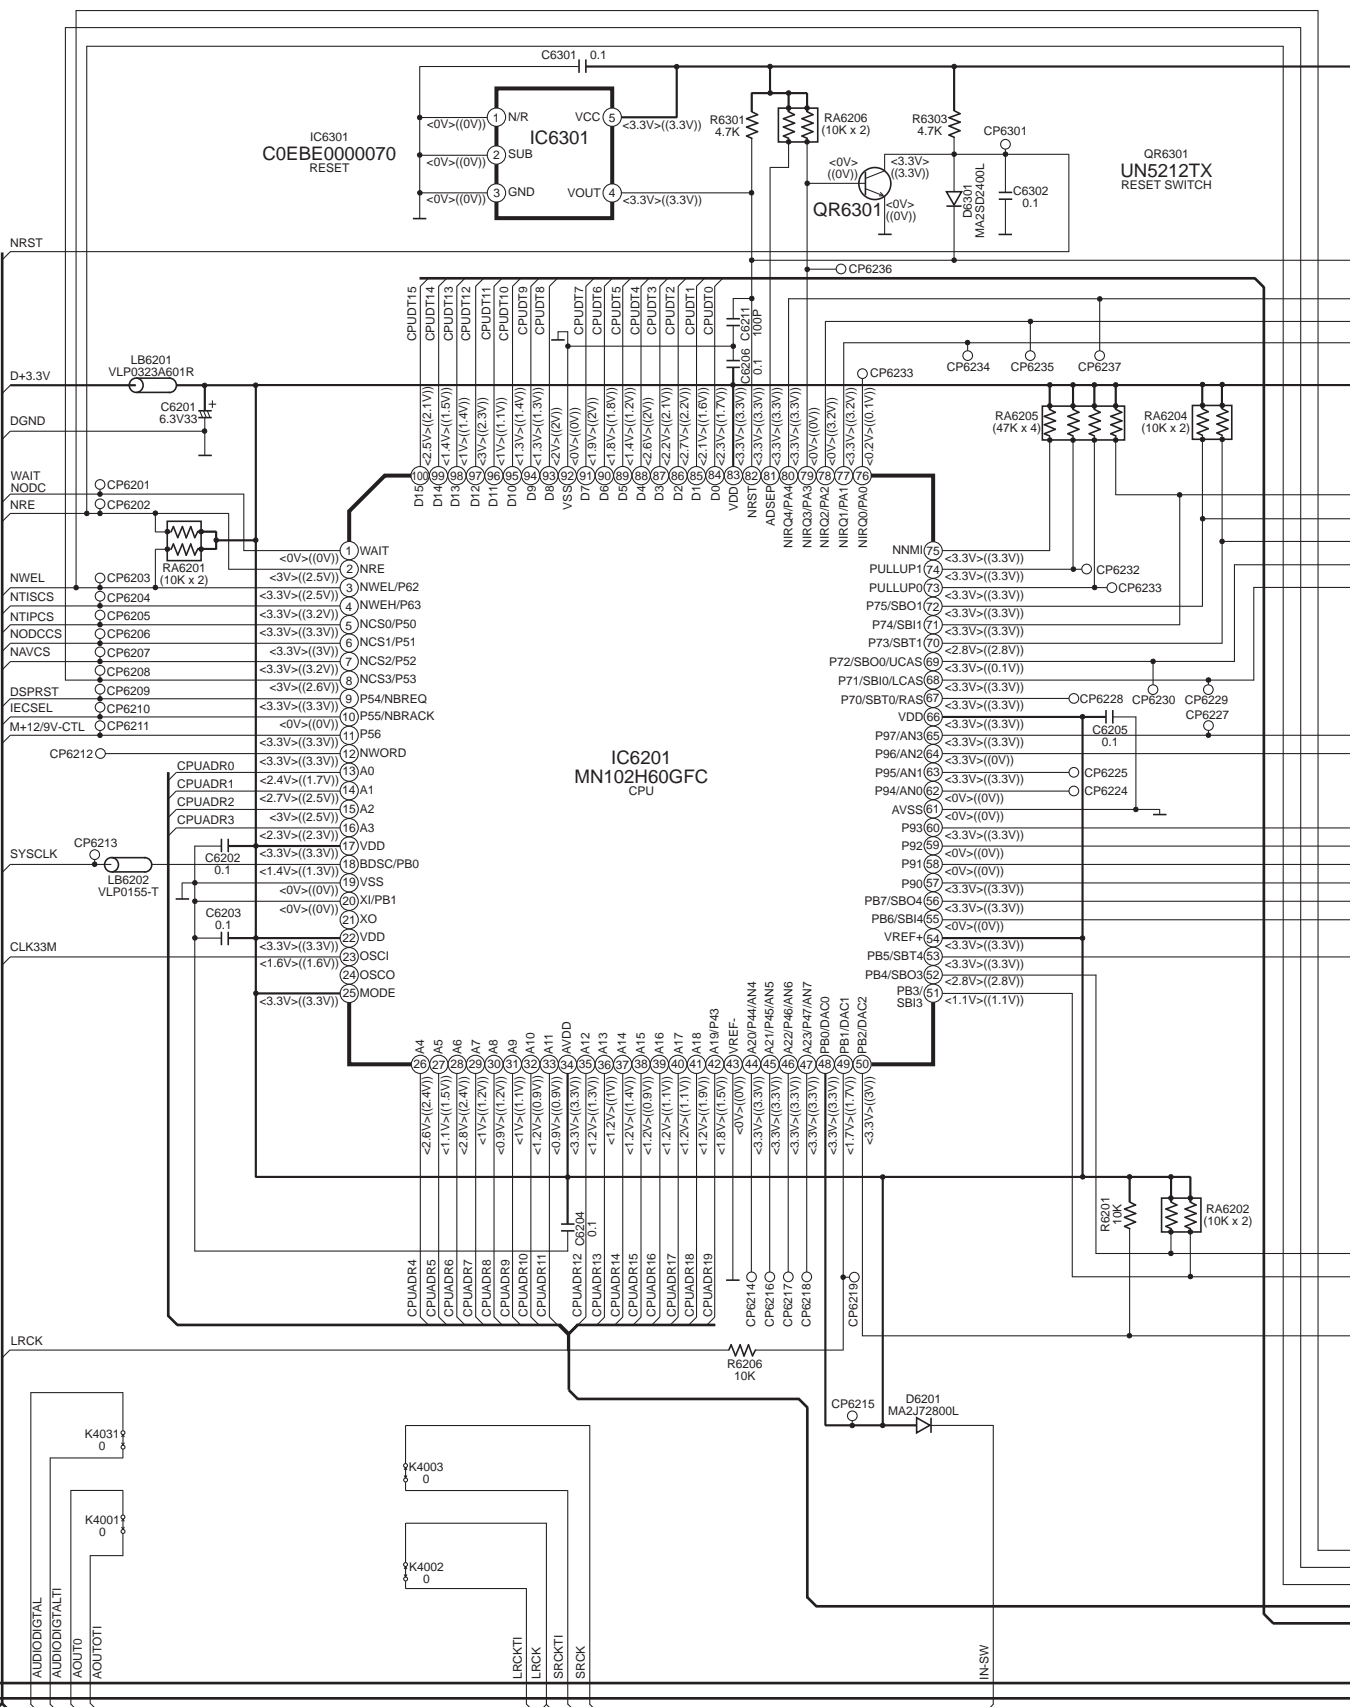


B

• : +B SIGNAL LINE

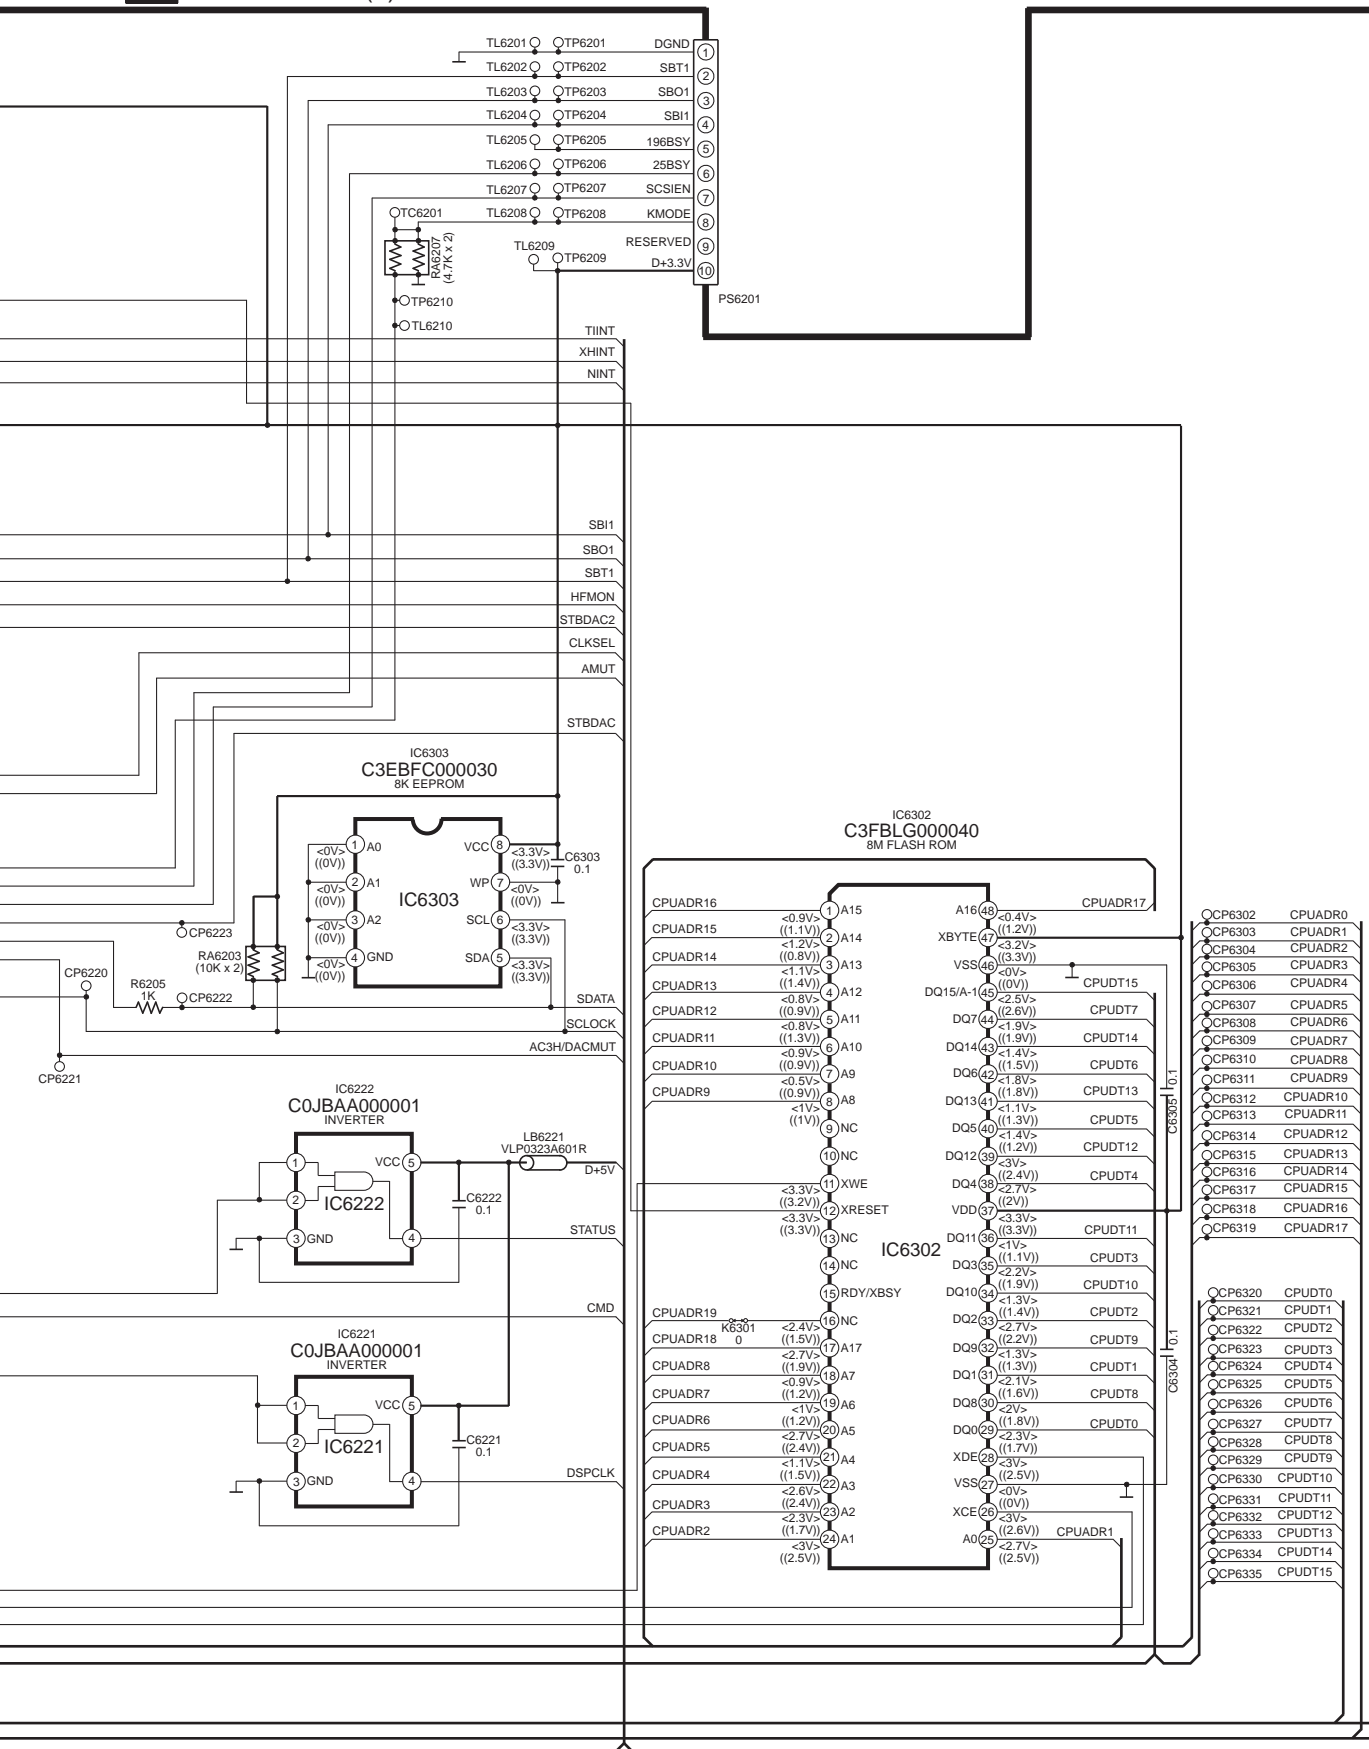


B DVD MODULE (2) CIRCUIT

 : CD-DA SIGNAL LINE

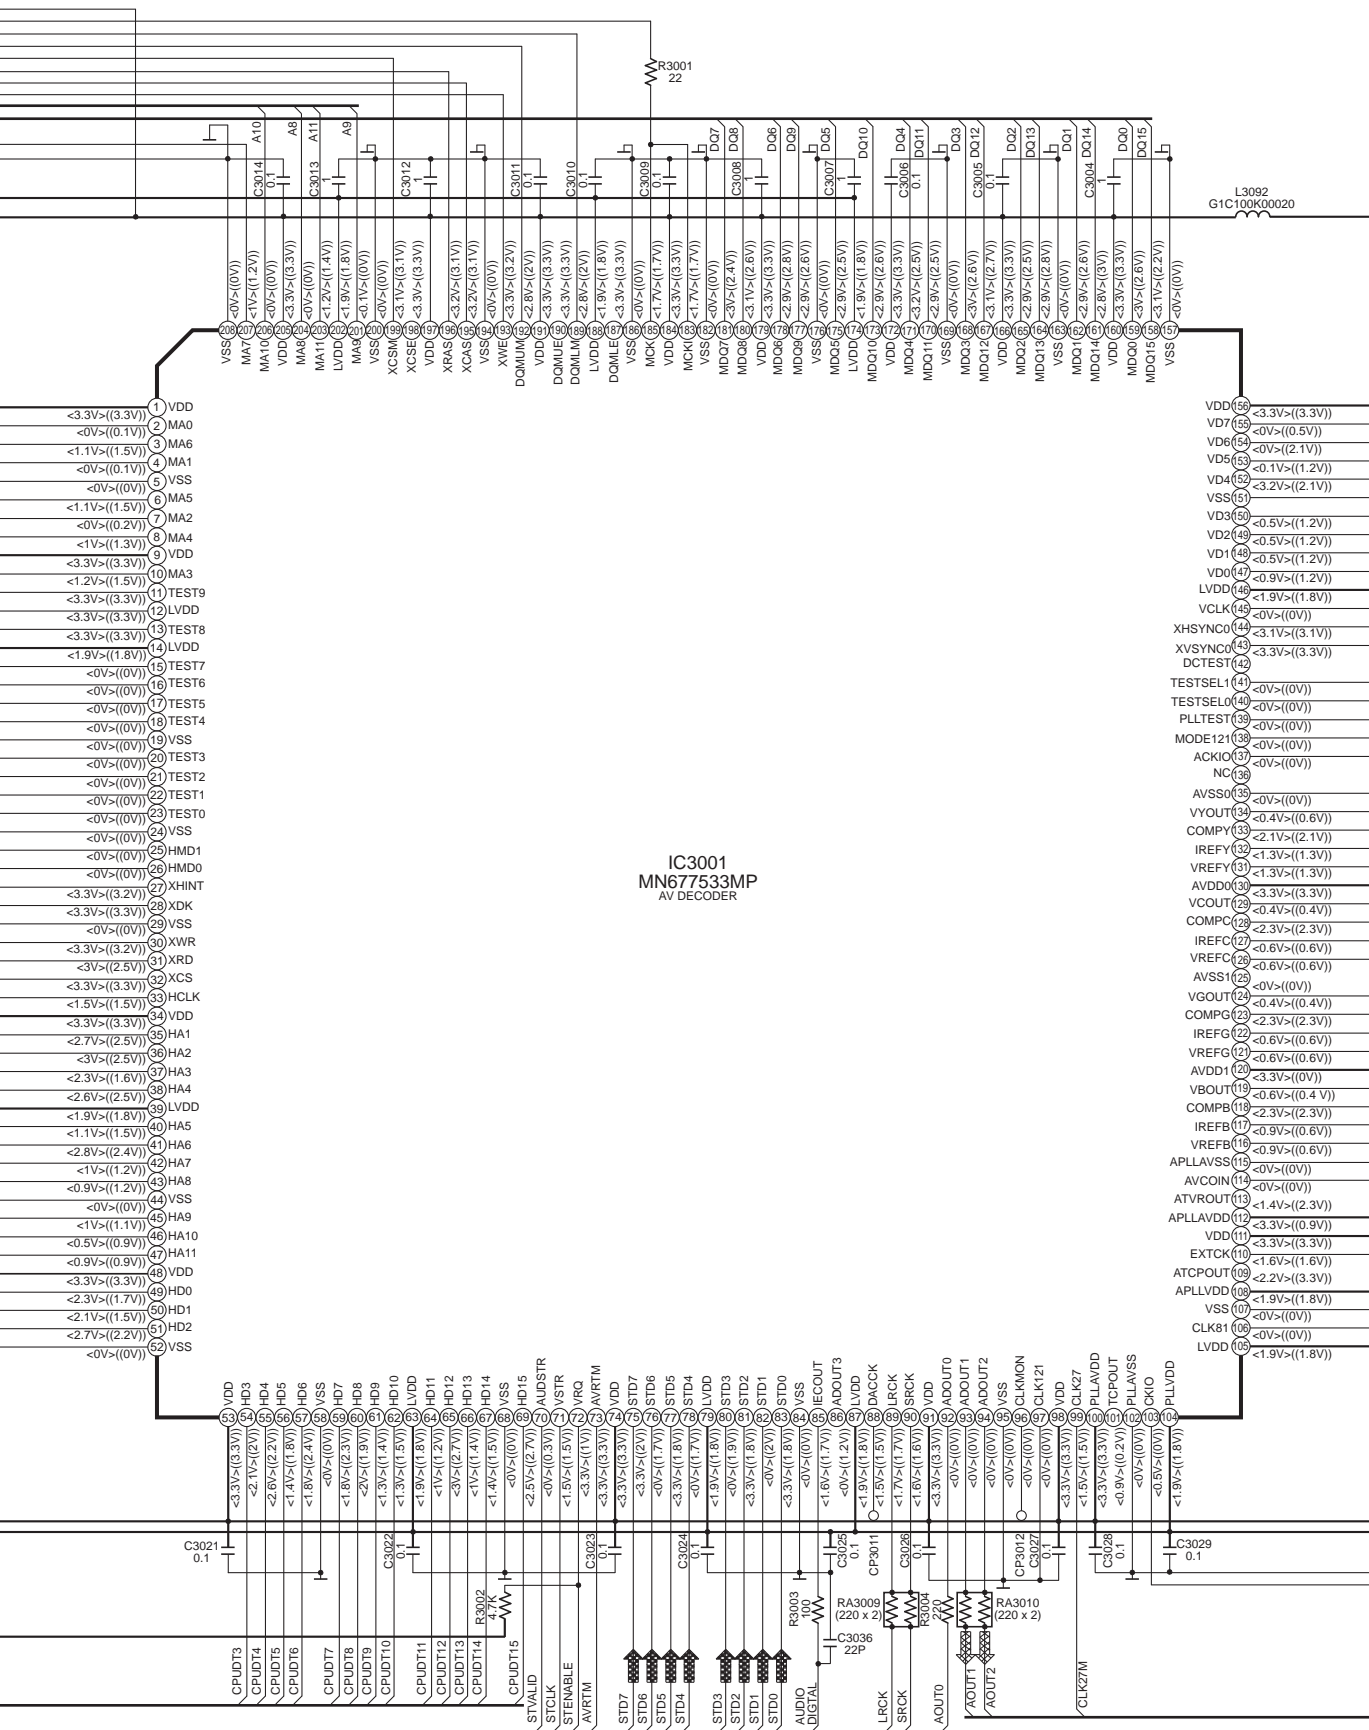

B DVD MODULE (2) CIRCUIT

 : DVD(VIDEO) SIGNAL LINE

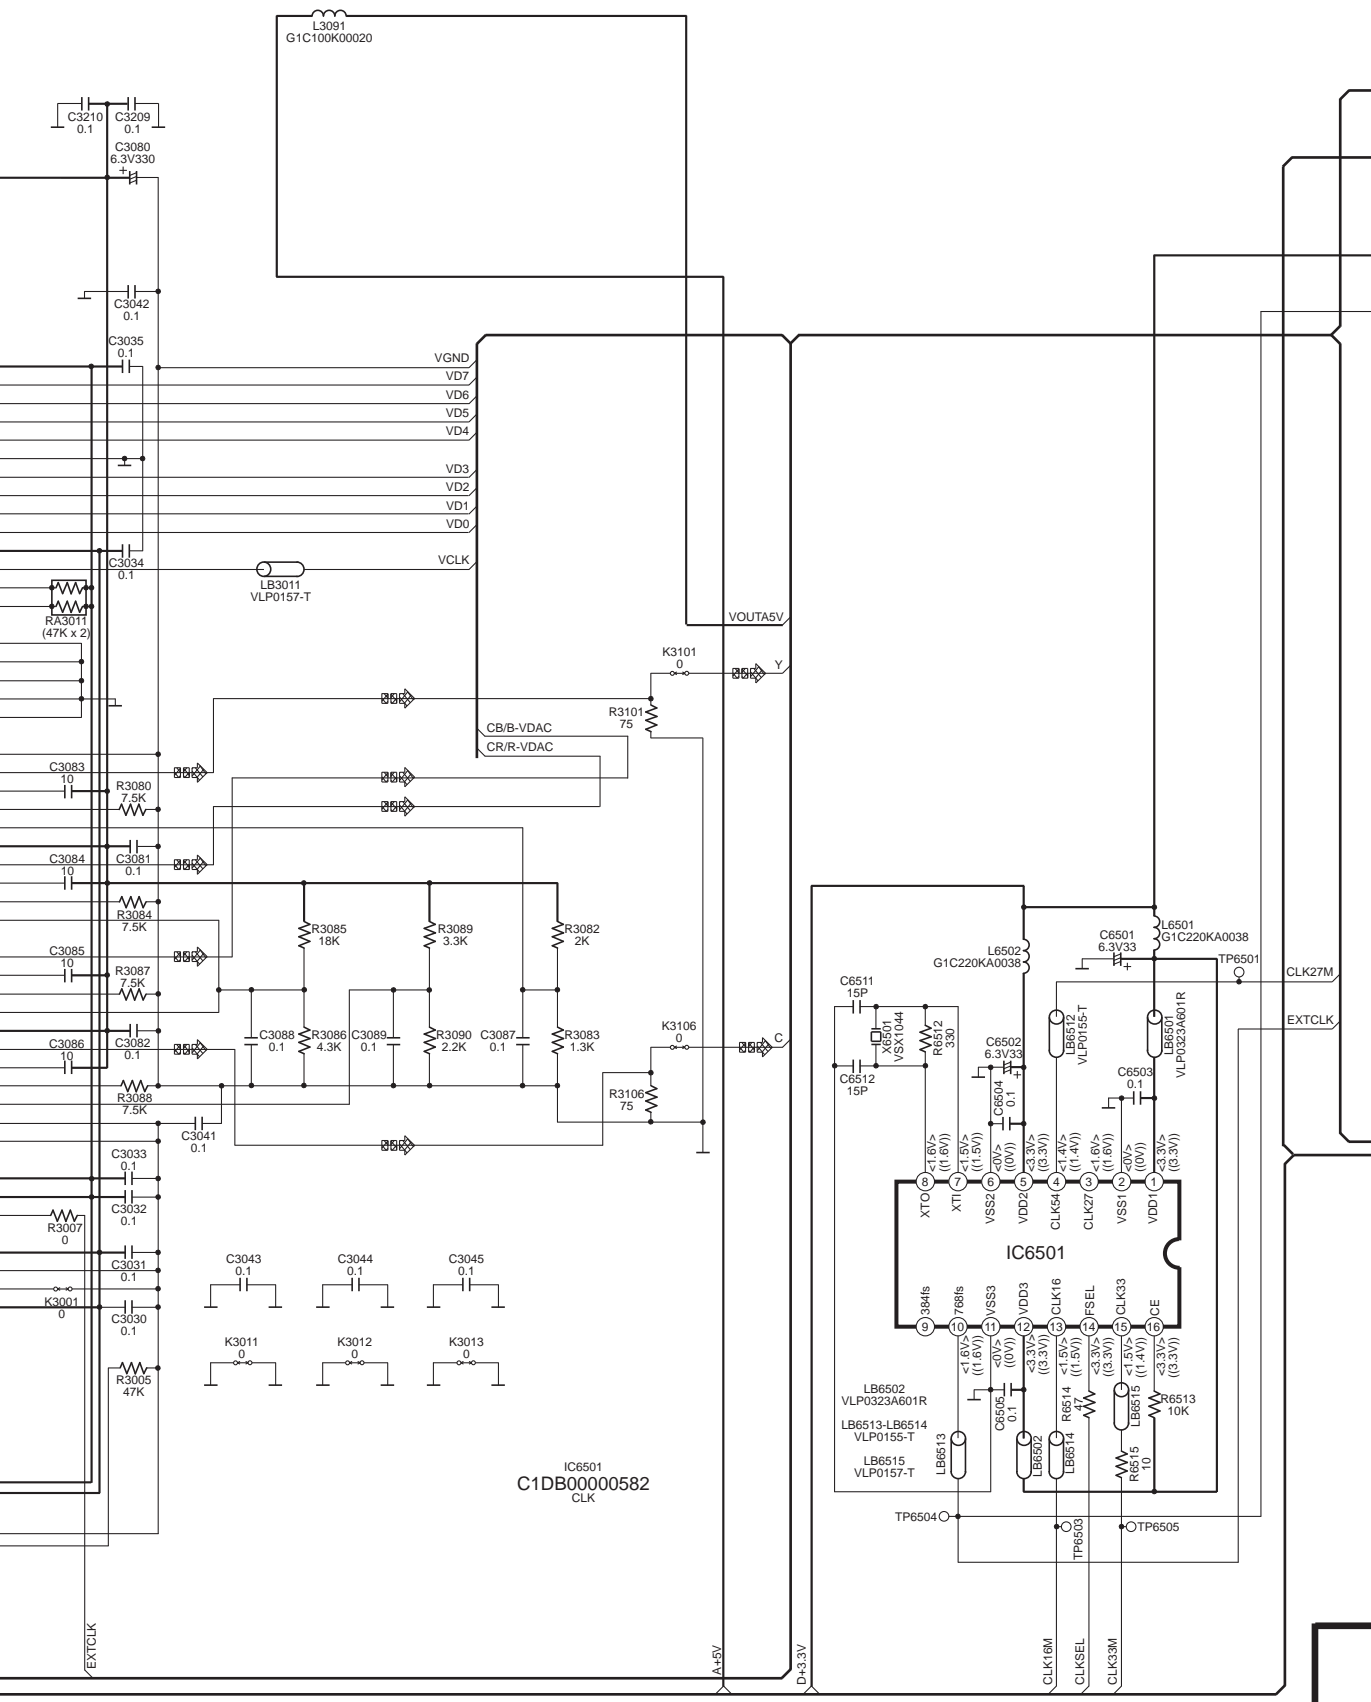


B DVD MODULE (2) CIRCUIT

— : +B SIGNAL LINE

⏏ : DVD(AUDIO) SIGNAL LINE

⇒ : MAIN SIGNAL LINE

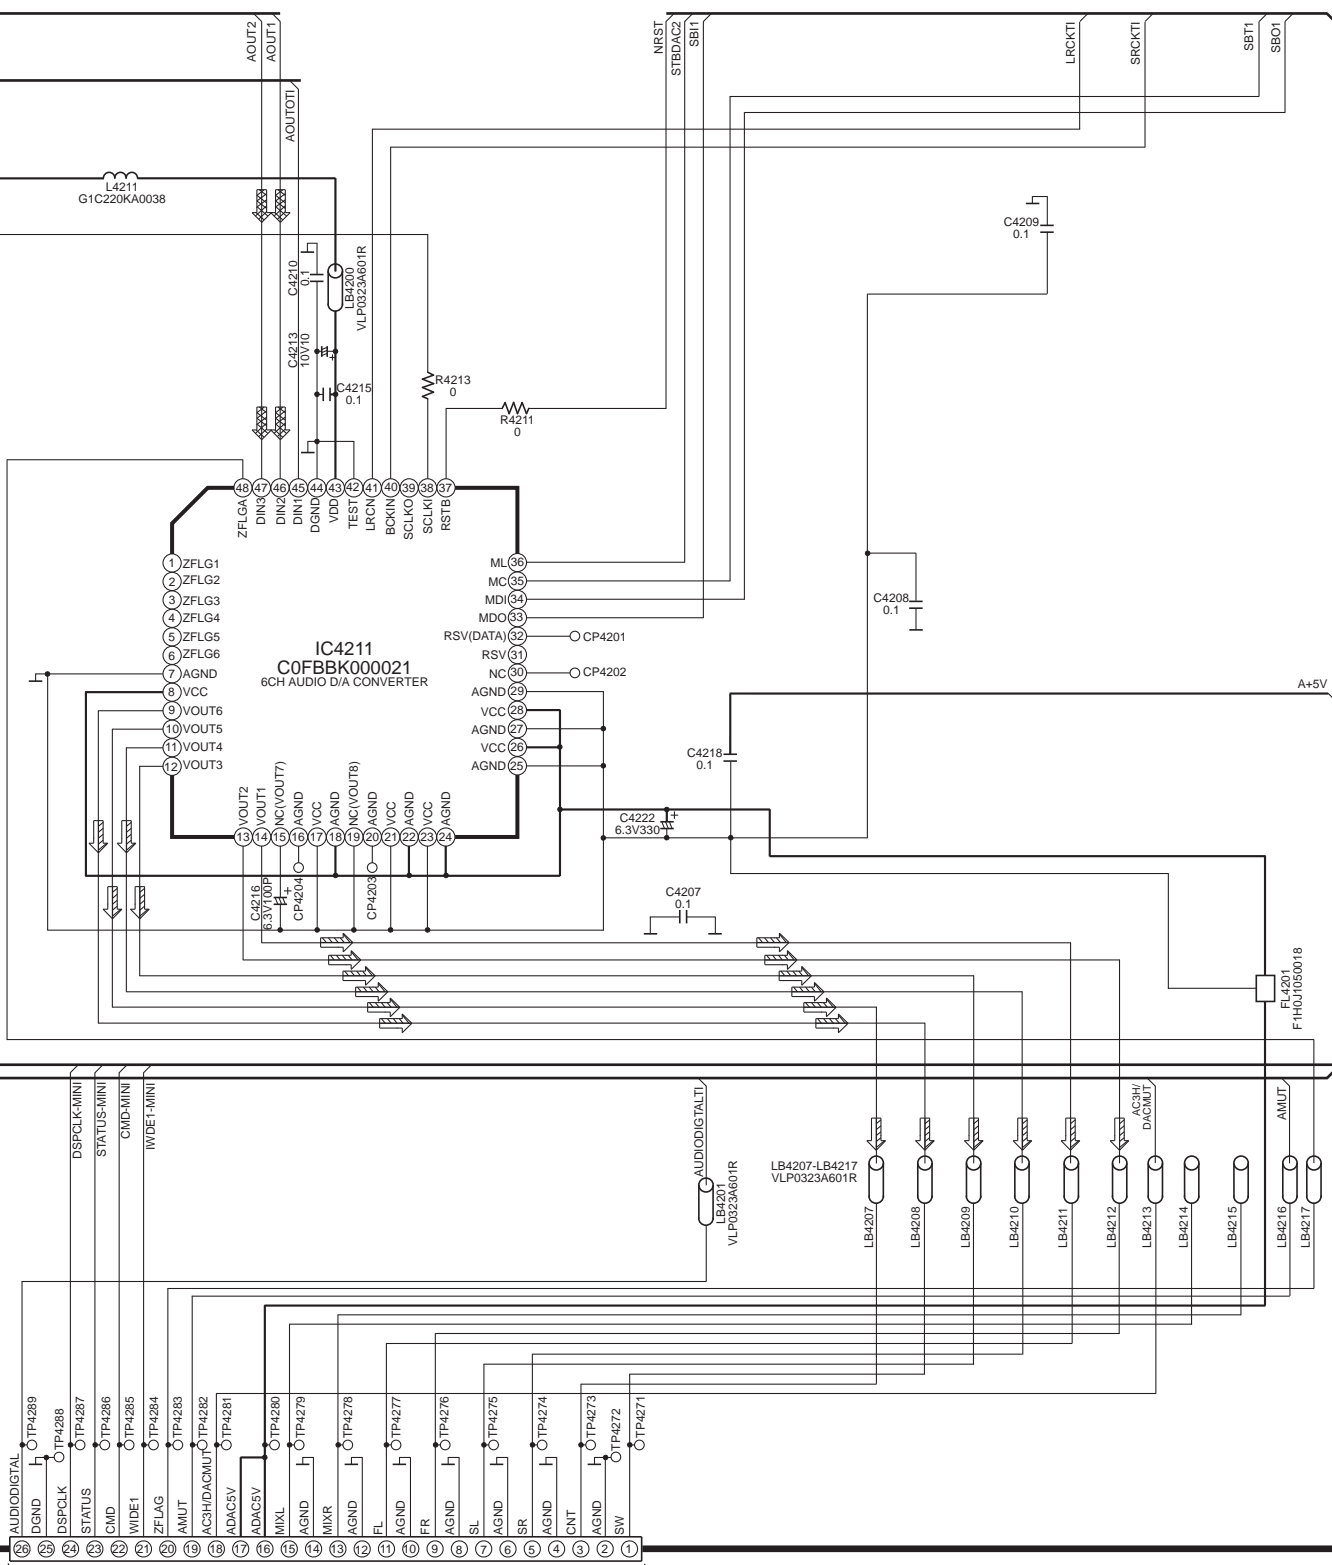

B DVD MODULE (2) CIRCUIT

 : DVD(VIDEO) SIGNAL LINE

