



Notes:

- S₁~S₄: Band selector switch in "FM" position.
- S₅: Power source switch in "OFF" position.
- DC voltage measurements are taken with circuit tester (10K Ω /V) from chassis.
-FM Position ().....AM Position
- Capital letters (M, K, J, P, C) in the circuit diagram show

- allowable tolerance of resistors and capacitors as follows.
- M = $\pm 20\%$ K = $\pm 10\%$ J = $\pm 5\%$ P = +100%
 C = ± 0.25 PF - 0%
- PF=pico farad=mmf
 - μ F=micro farad=mfd
 - All resistor values in ohms (K=1000 Ω).
 - All capacitor values in micro farads (P=mmf).

Fig. 3-4. Complete schematic diagram of a Penncrest Model 5391A AM-FM receiver. (Courtesy J. C. Penney Co.)