
SHARP SERVICE MANUAL

 
No. S4918CDPC4900



CD-PC4900

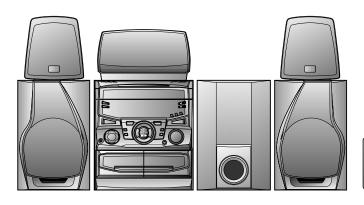





CD-PC4900 mini component system consisting of CD-PC4900 (main unit), CP-C4900 (front speakers), CP-SW4900 (sub woofer), GBOXS0022AWM1 (center speaker) and GBOXS0023AWM1 (rear speaker).

 In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified be used.

The main body section of this model differs from CD-PC672 in prints and color tone.

Since the exterior and shape of the front speakers and subwoofer have been changed, the expoloded views and parts list are added.

For the circuit section and disassembling method, refer to the "CD-PC672 (No.S4915CDPC672/)" Service Manual already issued.

SPECIFICATIONS

Front speaker section

Type: 3-way type [5-1/4" (13 cm) woofer,

2" (5 cm) tweeter and super tweeter]

Maximum input power: 80 W Rated input power: 40 W Impedance: 6 ohms

Dimensions: Width; 7-7/8" (200 mm)

Height; 11-13/16" (300 mm) Depth; 10" (254 mm)

Weight: 6.3 lbs. (2.9 kg)/each

Center speaker section

Type: 4" (10 cm) full-range speaker

Maximum input power: 40 W Rated input power: 20 W Impedance: 4 ohms

Dimensions: Width; 10-1/4" (260 mm)

Height; 5-1/2" (140 mm) Depth; 6-1/8" (155 mm)

Weight: 2.0 lbs. (0.9 kg)

Rear speaker section

Type: 4" (10 cm) full-range speaker

Maximum input power: 20 W Rated input power: 10 W Impedance: 8 ohms

Dimensions: Width; 6-3/4" (170 mm)

Height; 3-1/2" (88 mm)
Depth; 6-3/4" (170 mm)

Weight: 1.0 lbs. (0.5 kg)/each

Sub woofer section

Type: 5-1/4" (13 cm) full-range speaker

Maximum input power: 80 W Rated input power: 40 W Impedance: 6 ohms

Dimensions: Width; 7-7/8" (200 mm)

Height; 11-13/16" (300 mm) Depth; 12-3/8" (310 mm)

Weight: 7.5 lbs. (3.4 kg)


CD-PC4900

DIFFERENCE BETWEEN CD-PC672 AND CD-PC4900

REF.	PART NO.	*	PART NO.	*	DESCRIPTION	CODE
NO	CD-PC672		CD-PC4900			
CABINET PA	ARTS					
202	92LCAB3051AS1	J	92LCAB3052AS1	J	Front Panel Ass'y	ВС
202-1					Front Panel (Not Replacement Item)	
202-2	JKNBZ0557AWSA	J	Same as CD-PC672		Button, Disc No.	AE
202-3	JKNBZ0558AWSA	J	Same as CD-PC672		Button, Open/Close/Disc Skip	AE
202-4	JKNBZ0559AWSA	J	Same as CD-PC672		Button,Power	AE
202-5	JKNBZ0560AWSA	J	Same as CD-PC672		Button,X-BASS/Demo	AE
202-6	JKNBZ0563AWSA	J	JKNBZ0563AWSB	J	Button,FF/REW/Tuning	AG
202-7	JKNBZ0565AWSA	J	Same as CD-PC672		Button, Timer/Sleep/Clock	AD
202-8	JKNBZ0570AWSA	J	Same as CD-PC672		Button, Dimmer/Equalizer	AD
202-9	JKNBZ0601AWSA	J	Same as CD-PC672		Button, Dolby Pro Logic	AE
202-10	KNOB3051AASY1	J	Same as CD-PC672		Button, Function	AK
202-11	HDECQ0412AWSA	J	Same as CD-PC672		Operation Ring A	AC
202-12	HDECQ0413AWSA	J	HDECQ0413AWSB	J	Operation Ring B	AB
202-13	HEDCQ0414AWSA	J	Same as CD-PC672		Cap,Operation Center	AD
202-14	HDECQ0415AWSA	J	Same as CD-PC672		Cover,LED	AD
202-15	HDECQ0417AWSA	J	Same as CD-PC672		Panel,Center Cap	AE
202-16	HDECQ0418AWSA	J	HDECQ0418AWSD	J	Panel, Decoration	AG
202-17	HDECQ0419AWSA	J	Same as CD-PC672		Decoration, Play Button	AF
202-18	HDECQ0420AWSA	J	Same as CD-PC672		Decoration,Stop Button	AE
202-19	HDECQ0455AWSA	J	Same as CD-PC672		Panel,AMP	AH
202-20	HDECQ0457AWSA	J	Same as CD-PC672		Panel, Play Decoration	AC
202-21	HDECQ0458AWSA	J	Same as CD-PC672		Panel, Stop Decoration	AC
202-22	MLIFP0006AWZZ	J	Same as CD-PC672		Damper, Cassette Holder	AE
202-23	PSHEP0031AWZZ	J	Same as CD-PC672		Sheet,Reflector	AC
203	92LMEC3051CTS1	J	92LMEC3052CTS1	J	Cassette, Holder Ass'y, Tape 1	AL
203-1			Same as CD-PC672		Cassette Holder, Tape 1 (Not Replacement Item)	
203-2	GCōVA1221AWSB	J	GCōVA1221AWSC	J	Cassette Cover, Tape 1	
203-3	HDECQ0408AWSA	J	Same as CD-PC672		Panel, Cassette, Tape 1	AD
204	92LMEC3051CTS2	J	92LMEC3052CTS2	J	Cassette, Holder Ass'y, Tape 2	AL
204-1			Same as CD-PC672		Cassette Holder, Tape 2 (Not Replacement Item)	
204-2	GCōVA1222AWSB	J	GCōVA1222AWSC	J	Cassette Cover, Tape 2	
• 204-3	HDECQ0409AWSA	J	Same as CD-PC672		Panel,Cassette Tape 2	AD
ACCESSORI	IES PARTS					
	TiNSE0237AWZZ	J	TiNSE0246AWZZ	J	Operation Manual [For U.S.A.]	AE
	TiNSZ0398AWZZ	J	TiNSZ0414AWZZ	J	Operation Manual [For Central America]	
	TiNSZ0404AWZZ	J	TiNSZ0470AWZZ	Ĵ	Quick Guide [For U.S.A. Only]	
SPEAKER B	OX PARTS REAR SPEAK	ER				
	92L33-01-0940		92L33-01-0960	J	Label, Parts Code	

\bigstar MARK: SPARE PARTS-DELIVERY SECTION

Parts marked with "\(\hat{\Lambda}\)" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

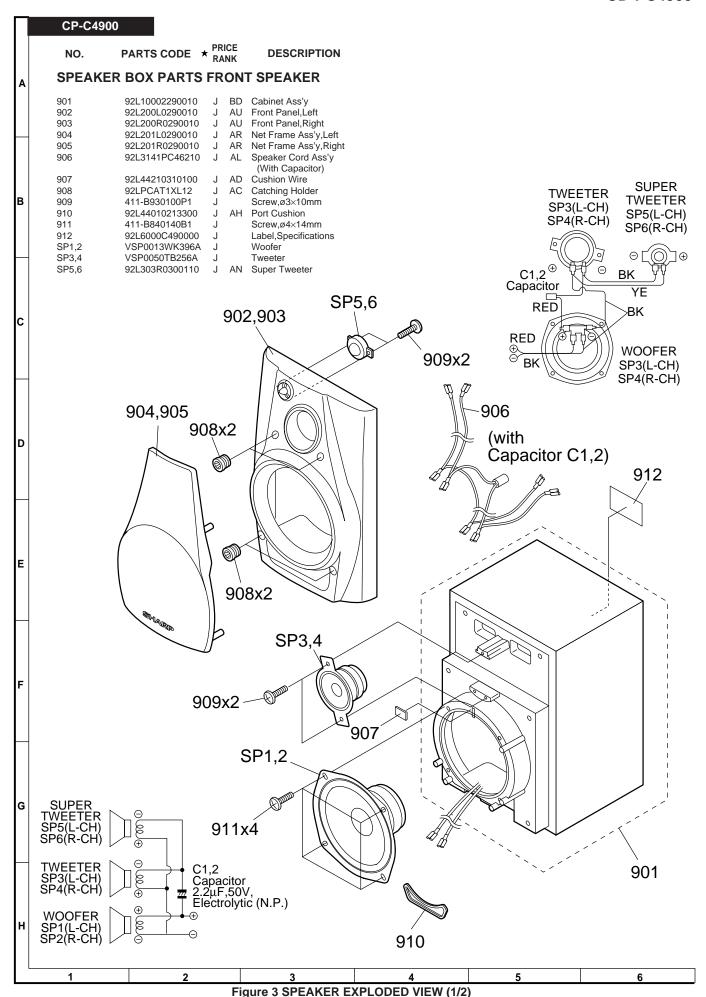

CD-PC4900

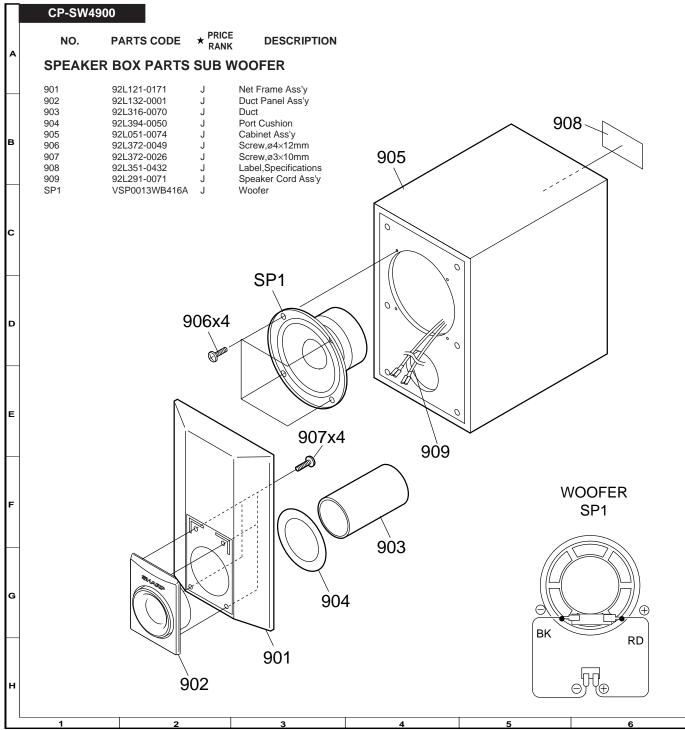


Figure 4 SPEAKER EXPLODED VIEW (2/2)

SHARP

COPYRIGHT © 1999 BY SHARP COPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any from or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP CORPORATION
Communication Systems Group
Quality & Reliability Control Center
Higashihiroshima, Hiroshima 739-0192, Japan
Printed in Japan

A9905-2329NS•HA•M

SC • LAG