


INSTRUCTION MANUAL FOR RL-4000A CONTROL

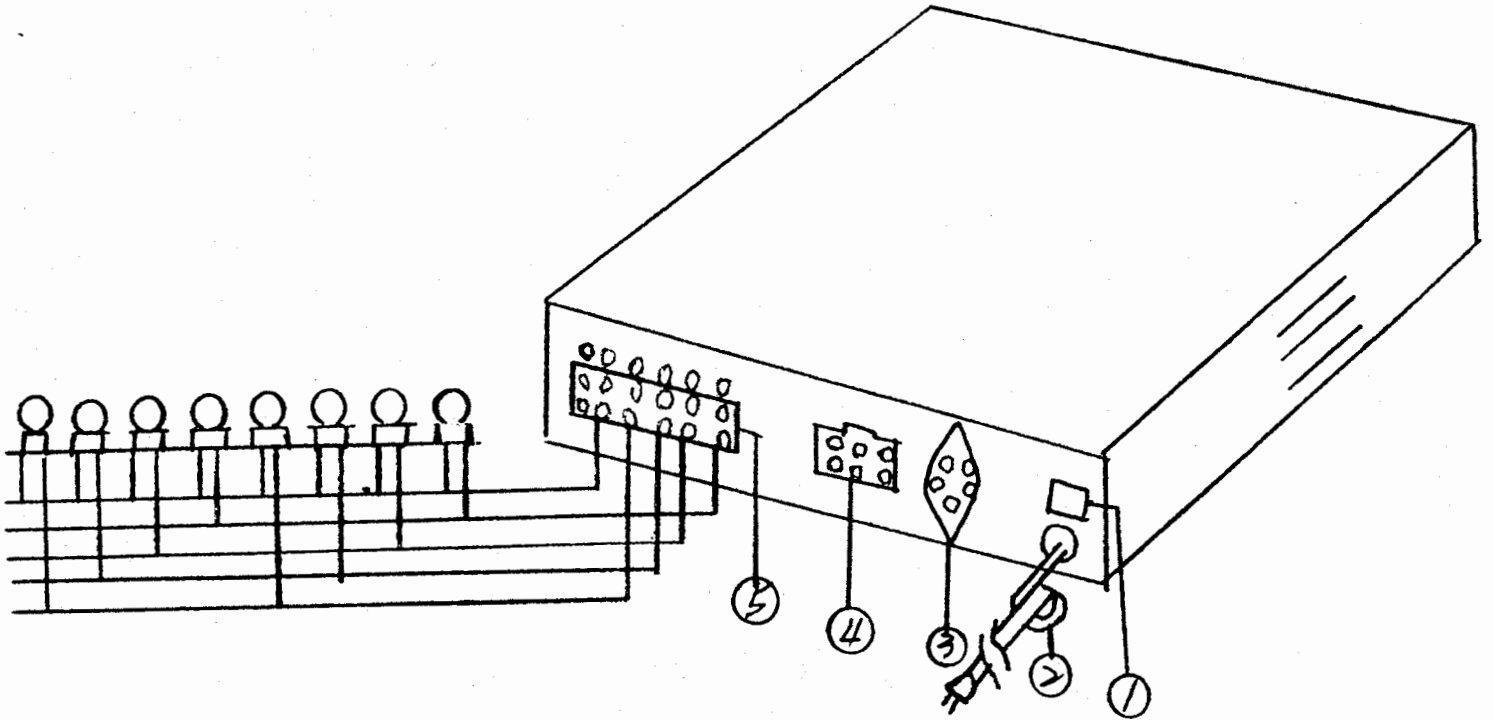

- 1 FUSE (10A).
- 2 INPUT CORD.
- 3 ROPELIGHT OUTPUT SOCKET
- 4 ROPE LIGHT OUTPUT SOCKET
- 5 BULB LAMPS OUTPUT SOCKET
- 6 OUTPUT VOLTAGE=INPUT VOLTAGE

SPECIFICATION

*The 4 Channel automatic running light control is Running forward, Backward, spskling up to 7 pattens without noise.

*Can Control running speed without onise.

*With our ropc light, tube Lamps, Comnection.

*Used for stage, advetisement, Club.

*Power Dissipaton 500W Maximun eaca channac.

*The RLC-4000A operating mode Mode

1. 110V 50/60HZ input/output
2. 220V 50/60HZ input/output