



Lids & bases
**NEATLY
NEST**

for compact storage!

Les couvercles et les bases

**S'EMBOÎTENT
BIEN**

pour un rangement compact!



Oven safe*
Va au four*



Microwave Safe
Va au micro-ondes



BPA Free
Sans BPA



Dishwasher Safe
Va au lave-vaisselle



Freezer Safe
Va au congélateur

*Oven safe up to 425°F
(218°C). LID IS NOT
OVEN SAFE.

*Va au four jusqu'à 218 °C
(425 °F). LE COUVERCLE NE
VA PAS AU FOUR.

Read Safety and Usage Instructions on back prior to using.
Lire les consignes de sécurité et d'emploi au dos avant d'utiliser le produit. Conserver à titre de référence.

Read Safety and Usage Instructions on back prior to using.
Lire les consignes de sécurité et d'emploi au dos avant d'utiliser le produit. Conserver à titre de référence.

**New!
Nouveau!**

Rubbermaid®

11.5 CUPS/TASSES | 2.7 L

glass
verre



easy find lids[®]

**OVEN SAFE
VA AU FOUR**



Rubbermaid Glass with Easy Find Lids SAFETY AND USE INSTRUCTIONS: Read these Safety and Use Instructions before handling your Rubbermaid Glass containers and save for future reference. For more information, visit www.rubbermaid.com or call Rubbermaid Consumer Service Department at 1-866-595-0525. | Rubbermaid Glass containers are safe for use in ovens up to 425°F (218°C) and in microwaves without a browning element. They are not for stovetop, broiler or toaster oven use. Lids are not oven safe but are safe for microwave use and are BPA Free. | Glass products require the utmost care, especially when cooking foods at hot temperatures. Please be aware of the risks of cooking in glassware containers: Sudden temperature change may cause glass breakage; dropping or mishandling against a hard surface may cause glass breakage; handling hot containers may cause burning. | **WARNING: FAILURE TO CAREFULLY FOLLOW SAFETY AND USE INSTRUCTIONS MAY CAUSE PRODUCT TO FRACTURE IMMEDIATELY OR IN THE FUTURE, WHICH COULD RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE.** Avoid severe and sudden temperature changes: Do not take product directly from freezer to oven or microwave. Always thaw food before reheating. Do not add liquid to hot Rubbermaid Glass. Do not place hot glass on a wet or cool surface, such as a countertop, metal surface, or sink. Always place hot glass bases on potholder or trivet. Do not handle hot glassware with a wet potholder or towel. Allow glass to cool before washing, refrigerating or freezing. Be sure to preheat oven before inserting glassware. Avoid use under direct heat source: Do not use on and under a flame or other direct heat source. Not for toaster oven, stovetop, or grill use. Do not place under a browning element. Use care when handling: Failure to use with care could result in product breakage, cracking, or scratching. When handling broken glass, be careful; glass may be very sharp. Do not attempt to repair any glassware that is broken, cracked, or scratched. Avoid striking product with or against hard or sharp objects. Sharp utensils or knives may scratch and weaken glass. General Usage: Rubbermaid Glass can be used for storing and heating food. Glassware is freezer, refrigerator, and microwave safe. Use glassware for warming and reheating food in microwave oven and in preheated oven. Product is for normal household use ONLY. Not intended for industrial use, commercial use, or camping. Microwave Usage Instructions: Rubbermaid Glass containers are safe for use in the microwave. Use minimum cooking time to heat oil or butter. Do not use product to microwave popcorn or heat foods wrapped in a heat-concentrating material. Plastic lids are made of microwave safe materials that can be used to reheat foods to a temperature comfortable for eating. These lids are not intended for cooking or for use in a conventional oven. Lift corner of lid to allow steam to vent when

microwaving. Sealing plastic lid while heating may create extra pressure causing lid to melt, warp, or creating excessive steam build up.

Always open container away from body to prevent burns. | Oven Usage Instructions:

Do not use plastic lids in conventional or convection oven. Plastic lids are for microwave use ONLY. Only the glass bases are safe for use in the conventional oven. Always handle hot glassware with dry potholders. Oven must be preheated before inserting glassware. Cleaning Instructions: Rubbermaid Glass is dishwasher safe. When washing by hand use non-abrasive cleansers. If more vigorous cleaning is necessary, soak and clean with non-scratch plastic or nylon scouring pad. Rubbermaid Glass lids are top-rack dishwasher safe. Be sure that the lid is secured so that it does not come in contact with the dishwasher element to avoid melting. Separate leak prevention gasket from lid for cleaning and replace for use. The leak preventing gasket is also top-rack dishwasher safe. Rubbermaid Glass food storage containers have a LIMITED 2 YEAR WARRANTY. This warranty covers Rubbermaid Glass items that break, chip, or crack within two years from the date of purchase when used within the parameters of the Use and Care instructions described above. This warranty does not cover damage from mishandling, negligence, or accidental breakage and only applies to defects that occur during normal household use. If the same item is not currently available, it will be replaced with a similar item. This warranty gives you specific legal rights and you may also have other rights which vary from province to province. To the fullest extent permitted by applicable law, Rubbermaid shall not be liable to the purchaser or end user customer of Rubbermaid Glass items for any incidental or consequential damages arising from the purchase, use or inability to use Rubbermaid Glass items even if Rubbermaid has been advised of the possibility of such damages. Some provinces or other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. To replace Rubbermaid Glass containers under this warranty, notify Rubbermaid below and enclose this warranty along with the original receipt or a copy thereof. Do not dispose of the damaged product as you may be requested to return it. Rubbermaid Consumer Service Department 1-866-595-0525.

Contenants en verre avec Easy Find Lids CONSIGNES DE SÉCURITÉ ET D'EMPLOI : Veuillez lire les consignes de sécurité et d'emploi avant d'utiliser vos contenants en verre Rubbermaid et conservez-les pour référence future. Pour plus d'information, visitez le site www.rubbermaid.com ou téléphonez au Service à la clientèle de Rubbermaid au 1-866-595-0525. | Les contenants en verre Rubbermaid s'utilisent sans danger dans un four jusqu'à une température de 218 °C (425 °F) et un four à micro-ondes sans élément de brunissage. Il ne faut pas les utiliser sur le dessus de la cuisinière, dans une rôtissoire ou un four grille-pain. Les couvercles ne vont pas au four mais vont au four à micro-ondes et ne contiennent pas de BPA. | Les produits en verre demandent le plus grand soin, en particulier lorsqu'on les utilise pour la cuisson d'aliments à des températures élevées. Veuillez prendre conscience des risques associés à la cuisson dans des contenants en verre : un changement brusque de température peut causer le bris du verre; la chute ou le choc contre une surface dure peut causer le bris du verre; la manipulation de contenants chauds peut causer des