

## "Universal Remote"

# ONE FOR ALL

# 3 Device

### Features and Functions

The illustration and chart below describe the features and functions of the *Little Easy* universal remote control.



### Feature Function

- The LED flashes red to show that the remote is working.
- The TV, VCR and CBL keys are used to select the home entertainment device you want to control.
- The MAGIC key is used to set up your devices.
- The PWR and MUTE keys operate the same as on your original remote. If your original remote had an Enter key, use the key.
- The VOL (Volume) and CH (Channel) keys operate the same as on your original remote.
- The Number keys operate the same as on your original remote.
- The REW (Rewind), FF (Fast Forward), PLAY, F (Record), S (Stop), and PAUSE keys control the same functions as those found on your VCR remote.

### Overview

Thank you for purchasing the *Little Easy* universal remote. Before you can use your new remote, you will need to program it. To do this, you need to tell the remote what equipment you wish to operate. This is done by following these three easy steps.

- Step 1: Install four (4) new AAA alkaline batteries.
- Step 2: Look up the code for your TV, VCR or Cable Box.
- Step 3: Enter the code.

### Step 1: Installing the Batteries

Your *Little Easy* needs four (4) new AAA alkaline batteries. To install the batteries:

- On the back of the *Little Easy*, push down on the tab and lift the cover off.
- Match the + and - marks on the batteries to the + and - marks inside the battery case, then insert the batteries.
- Press the battery cover back into place.
- Test the unit by pressing PWR. If the batteries are inserted correctly the red light (LED) will blink once.

Removing the batteries will require you to reprogram your remote control.

## Step 2: Looking Up Your Electronic Device Code

- 1 Look at your Electronic Device to find out the brand name and write it in the space below:

| Set-Up Codes  | TV    |
|---------------|-------|
| RCA 047, 018  | VCR   |
| Sony 000, 080 | Cable |

- 2 Find your Device brand in the listing on the reverse side of these instructions. The most popular codes are listed first. Write your codes here:

|                |       |
|----------------|-------|
| 1st TV code    | _____ |
| 2nd TV code    | _____ |
| 3rd TV code    | _____ |
| 1st VCR code   | _____ |
| 2nd VCR code   | _____ |
| 3rd VCR code   | _____ |
| 1st Cable code | _____ |
| 2nd Cable code | _____ |
| 3rd Cable code | _____ |

You will need one of these codes to program your *Little Easy* remote.

## Step 3: Setting Up Your Device

- 1 Turn on your TV (VCR or Cable Box) depending on the device you are programming.
- 2 Find your TV (VCR or Cable Box) code in the Set-Up Code section. The most popular codes are listed first.
- 3 Press and release the TV (VCR or CBL) key, then hold down MAGIC until the *Little Easy's* red light blinks twice. Release MAGIC and then enter the three-digit code for the device you are setting up.
- 4 Aim the *Little Easy* at your TV and press PWR. Your TV should turn off.
- 5 To run your device, press your device key (TV, VCR or CBL) first.

### Changing Any Device Key

If you want, you can change any of the device keys (TV, VCR, or CBL). The chart below lists how to change the keys.

\* Please note: Here you must press and hold MAGIC until the *Little Easy's* red light blinks twice.

| To Change  | Press                                                     |
|------------|-----------------------------------------------------------|
| TV to VCR  | MAGIC* + 992 + VCR + TV + TV + MAGIC* + VCR code.         |
| TV to CBL  | MAGIC* + 992 + CBL + TV + TV + MAGIC* + Cable Box code.   |
| VCR to TV  | MAGIC* + 992 + TV + VCR + VCR + MAGIC* + TV code.         |
| VCR to CBL | MAGIC* + 992 + CBL + VCR + VCR + MAGIC* + Cable Box code. |
| CBL to TV  | MAGIC* + 992 + TV + CBL + CBL + MAGIC* + TV code.         |
| CBL to VCR | MAGIC* + 992 + VCR + CBL + CBL + MAGIC* + VCR code.       |

## Troubleshooting

| Problem                                                                                     | Solution                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Red light not blinking when you press a key?                                                | Replace the batteries (with fresh new AAA alkaline batteries).                                                                                                                                                                                                                                                                                                      |
| The <i>Little Easy</i> does not operate your device or is not performing commands properly? | Try all the codes listed for your home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow for partial functionality; however, only one set-up code will operate your home entertainment component properly. <b>Make sure that all of the components you are setting up are able to be operated with an infrared remote control.</b> |
| Keypad Scrambled?                                                                           | Press and hold "MAGIC." After the 2 flashes, release "MAGIC" and enter 9-7-4.                                                                                                                                                                                                                                                                                       |
| Problems programming a TV/VCR Combo?                                                        | Try the VCR set-up code for your brand. Some combo units may require both a TV code to control the volume and a VCR code for full operation.                                                                                                                                                                                                                        |
| VCR not recording?                                                                          | As a safety feature on your <i>Little Easy</i> you must press the REC button twice.                                                                                                                                                                                                                                                                                 |
| <i>Little Easy</i> not performing volume +/- while in CABLE or VCR mode?                    | Press and hold "MAGIC." After the 2 flashes, release "MAGIC," enter 9-9-3 and then press VOL +.                                                                                                                                                                                                                                                                     |
| Channel +/- as well as PREV CH on a RCA TV not functioning?                                 | Due to RCA design (1983-1987) only the original remote will operate these functions.                                                                                                                                                                                                                                                                                |
| Problems changing channels?                                                                 | If your original remote required an "ENTER" key stroke press the  key after you enter the channel number.                                                                                                                                                                                                                                                           |
| No volume on 2nd TV?                                                                        | Press the device key the 2nd TV is on, then press and hold "MAGIC." After the 2 flashes, release "MAGIC," enter 9-9-3, and then press VOL +.                                                                                                                                                                                                                        |
| No response after pressing a key?                                                           | Make sure you have new batteries and you are aiming your remote at your devices.                                                                                                                                                                                                                                                                                    |

World Wide Web: <http://www.oneforall.com>

### ONE FOR ALL PRODUCTS Limited Warranty

Universal Electronics Inc. ("UEI") warrants to the original purchaser only that this product will be free from defects in materials and workmanship under normal use for one year from the date of original purchase. UEI will, at its option, replace or repair (using new or rebuilt parts) this product if found to be defective, free of charge.

This warranty does not cover damage or failures caused by products or services not supplied by UEI, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modification, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. UEI SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid, adequately insured and preferably in the original carton to AVS Technologies, Inc., 2100 Trans Canada, Highway South, Montreal, Quebec H9P 2N4, together with your purchase receipt or other proof of date of original purchase. It would be helpful if you included a note detailing the problem.

## TVs/Téléviseurs

|               |                                                                                          |
|---------------|------------------------------------------------------------------------------------------|
| A-Mark        | 003                                                                                      |
| AOC           | 019, 030, 003, 052, 137, 185                                                             |
| Abex          | 032                                                                                      |
| Admiral       | 093                                                                                      |
| Adventura     | 046                                                                                      |
| Aiko          | 092                                                                                      |
| Akal          | 030                                                                                      |
| Akura         | 218                                                                                      |
| Alcon         | 179, 183, 216                                                                            |
| Alpo          | 177                                                                                      |
| Ambassador    | 180, 068                                                                                 |
| Anam          | 180, 068                                                                                 |
| National      | 055                                                                                      |
| Archer        | 003                                                                                      |
| Asuka         | 218                                                                                      |
| Audinac       | 391                                                                                      |
| Audiovox      | 180, 003, 092                                                                            |
| BIC           | 218                                                                                      |
| Basic Line    | 218                                                                                      |
| Baysonic      | 180                                                                                      |
| Belcor        | 019                                                                                      |
| Bell & Howell | 154, 016                                                                                 |
| Blue Sky      | 218                                                                                      |
| Bradford      | 180                                                                                      |
| Brockwood     | 019                                                                                      |
| Broksonic     | 236, 003                                                                                 |
| Bush          | 218                                                                                      |
| CCE           | 217                                                                                      |
| CXC           | 180                                                                                      |
| Candle        | 030, 056, 046, 186                                                                       |
| Carnivale     | 030                                                                                      |
| Carver        | 054                                                                                      |
| Celebrity     | 000                                                                                      |
| Cineral       | 092                                                                                      |
| Citizen       | 060, 039, 280, 030, 056, 046, 092, 186                                                   |
| Clairtone     | 185                                                                                      |
| Concerto      | 056                                                                                      |
| Contec        | 180, 185                                                                                 |
| Craig         | 180                                                                                      |
| Crosley       | 054                                                                                      |
| Crown         | 039, 180                                                                                 |
| Curtis Mathes | 047, 054, 060, 039, 051, 154, 016, 030, 056                                              |
| Cybertron     | 218                                                                                      |
| Daewoo        | 019, 039, 091, 092                                                                       |
| Dainichi      | 218                                                                                      |
| Daytron       | 019                                                                                      |
| Denon         | 145                                                                                      |
| Dumont        | 017, 019                                                                                 |
| Dynatech      | 049                                                                                      |
| Ectec         | 391                                                                                      |
| Electroband   | 000, 185                                                                                 |
| Elite         | 218                                                                                      |
| Emerson       | 019, 039, 236, 180, 280, 179, 154, 177, 178, 038, 181, 182, 183, 185, 270, 282           |
| Envision      | 030                                                                                      |
| Fisher        | 154, 159                                                                                 |
| Fujitsu       | 179                                                                                      |
| Funal         | 180, 179, 171                                                                            |
| Futuretech    | 180                                                                                      |
| GE            | 047, 051, 055, 021, 178, 027, 029, 135, 174, 282                                         |
| GPM           | 218                                                                                      |
| Groxxa        | 218                                                                                      |
| Gilbreth      | 017, 019, 039                                                                            |
| Goldstar      | 019, 030, 056, 178, 002, 032                                                             |
| Gradiente     | 053, 056                                                                                 |
| Grumpy        | 180, 179                                                                                 |
| Hallmark      | 178                                                                                      |
| Harley        | 179                                                                                      |
| Davidson      | 180, 068                                                                                 |
| Harvard       | 218                                                                                      |
| Hilachi       | 145, 151, 056, 032, 038, 095, 097                                                        |
| ICoS          | 218                                                                                      |
| Infinity      | 054                                                                                      |
| Inteq         | 017                                                                                      |
| Iskul         | 218                                                                                      |
| JBL           | 054                                                                                      |
| JCB           | 000                                                                                      |
| JVC           | 053, 036, 069, 169, 182                                                                  |
| Janeil        | 046                                                                                      |
| KEC           | 180                                                                                      |
| KTV           | 039, 180, 280, 030, 183, 185, 217                                                        |
| Katsul        | 216                                                                                      |
| Kamp          | 216                                                                                      |
| Kawasho       | 052                                                                                      |
| Kayponi       | 019, 030                                                                                 |
| Kenwood       | 024, 046                                                                                 |
| Kloss         | 056                                                                                      |
| LG            | 047, 054, 156, 154, 178, 148                                                             |
| LXI           | 016                                                                                      |
| Logik         | 056                                                                                      |
| Luxman        | 185                                                                                      |
| MEI           | 150, 019, 030, 178, 155                                                                  |
| MGA           | 019, 060, 030, 056, 049, 091, 185, 216                                                   |
| MTC           | 054, 179, 030, 020, 024, 028, 036, 096, 186, 187, 230                                    |
| Majestic      | 016                                                                                      |
| Marantz       | 054, 030                                                                                 |
| Megatron      | 145, 178, 003                                                                            |
| Memorex       | 150, 154, 016, 056, 178                                                                  |
| Midland       | 047, 017, 039, 051, 032, 135                                                             |
| Minut         | 021                                                                                      |
| Mitsubishi    | 150, 019, 093, 178, 155                                                                  |
| Motrola       | 093, 055                                                                                 |
| Multitech     | 180, 049, 217                                                                            |
| NAD           | 156, 178, 166                                                                            |
| NEC           | 019, 030, 056, 036                                                                       |
| NIC           | 092                                                                                      |
| Nikkol        | 218                                                                                      |
| Nikko         | 030, 178, 092, 317                                                                       |
| Nisato        | 391                                                                                      |
| Nishi         | 018                                                                                      |
| Onwa          | 180                                                                                      |
| Optimus       | 154, 166                                                                                 |
| Optonica      | 093, 165                                                                                 |
| Orion         | 236, 179                                                                                 |
| Osaki         | 218                                                                                      |
| Oso           | 218                                                                                      |
| Panasonic     | 061, 055, 338                                                                            |
| Penney        | 047, 156, 019, 060, 039, 051, 021, 030, 056, 178, 002, 003, 018, 027, 032, 110, 135, 149 |
| Philco        | 054, 019, 145, 030, 020, 028, 096                                                        |

|            |                                                                                |
|------------|--------------------------------------------------------------------------------|
| Philips    | 054                                                                            |
| Pilot      | 019, 039, 030                                                                  |
| Pioneer    | 038, 166                                                                       |
| Portland   | 019, 039, 092                                                                  |
| Prism      | 051                                                                            |
| Proscan    | 047                                                                            |
| Proton     | 178, 003, 031, 052                                                             |
| Pulsar     | 017, 019                                                                       |
| Quasar     | 051, 055, 165                                                                  |
| RCA        | 047, 019, 051, 018, 029, 038, 090, 135, 174, 254                               |
| RadioShack | 047, 019, 039, 180, 165, 154, 030, 056, 178, 032                               |
| Realistic  | 019, 039, 180, 165, 154, 030, 056, 178, 032                                    |
| Rhapsody   | 183, 185, 216                                                                  |
| Roadstar   | 218                                                                            |
| Runco      | 017, 030                                                                       |
| SBS        | 019, 180                                                                       |
| Sampo      | 039, 030, 032, 052, 110                                                        |
| Samsung    | 019, 060, 030, 056, 178, 032                                                   |
| Samsux     | 039                                                                            |
| Sanyo      | 154, 146, 159                                                                  |
| Schneider  | 218                                                                            |
| Scimitu    | 019                                                                            |
| Scotch     | 178                                                                            |
| Scott      | 019, 236, 180, 179, 178                                                        |
| Seors      | 047, 054, 155, 179, 154, 056, 171, 178, 146, 148, 149, 159                     |
| Semivox    | 180                                                                            |
| Semp       | 156                                                                            |
| Sharp      | 039, 093, 165, 153, 220                                                        |
| Shogun     | 019                                                                            |
| Signature  | 016                                                                            |
| Simpson    | 186, 187                                                                       |
| Sony       | 000, 080                                                                       |
| Soundesign | 180, 179, 178, 186                                                             |
| Spectricon | 003, 137                                                                       |
| Squareview | 171                                                                            |
| Standard   | 218                                                                            |
| Starlite   | 180                                                                            |
| Starr-Macy | 046                                                                            |
| Supreme    | 000                                                                            |
| Susumu     | 218                                                                            |
| Sylvania   | 054, 030, 020, 028, 065, 096                                                   |
| Symphonic  | 171                                                                            |
| TMK        | 177, 056, 178                                                                  |
| Tandy      | 093, 218                                                                       |
| Tatung     | 055, 003, 049                                                                  |
| Technics   | 061                                                                            |
| Techni Ace | 179                                                                            |
| Techwood   | 051, 056, 003                                                                  |
| Teknika    | 054, 150, 019, 060, 039, 180, 179, 016, 056, 092, 186, 312                     |
| Telefunken | 054                                                                            |
| Tensai     | 218                                                                            |
| Tera       | 031                                                                            |
| Textet     | 218                                                                            |
| Toshiba    | 156, 060, 154, 036, 149                                                        |
| Tosonic    | 185                                                                            |
| Television | 039                                                                            |
| Ultra      | 391                                                                            |
| Universal  | 027                                                                            |
| Vector     | 030                                                                            |
| Research   | 053                                                                            |
| Victor     | 054                                                                            |
| Vidikon    | 019, 178, 036                                                                  |
| Vidtech    | 046, 312                                                                       |
| Viking     | 054, 019, 125, 179, 021, 016, 030, 056, 178, 020, 027, 028, 029, 080, 096, 174 |
| Wards      | 019, 030                                                                       |
| Yamaha     | 017, 016, 092                                                                  |
| Zenith     | 003                                                                            |
| Zonda      | 003                                                                            |

## VCRs/Magnétoscopes

|               |                                                                                     |
|---------------|-------------------------------------------------------------------------------------|
| Admiral       | 048                                                                                 |
| Adventura     | 000                                                                                 |
| Aiko          | 278                                                                                 |
| Alwa          | 037, 000                                                                            |
| Akal          | 041, 049, 053, 061, 106, 242                                                        |
| American High | 035                                                                                 |
| Asha          | 240                                                                                 |
| Audiovox      | 037                                                                                 |
| Beaumarck     | 240                                                                                 |
| Bell & Howell | 104                                                                                 |
| Broksonic     | 002, 184, 121, 209, 211, 295, 361                                                   |
| CCE           | 072, 278                                                                            |
| Calix         | 037                                                                                 |
| Canon         | 035, 167                                                                            |
| Capehart      | 020                                                                                 |
| Carver        | 081                                                                                 |
| Cineral       | 278                                                                                 |
| Citizen       | 037, 278                                                                            |
| Colt          | 072                                                                                 |
| Craig         | 037, 047, 240, 072, 271                                                             |
| Curtis Mathes | 060, 035, 041                                                                       |
| Cybernex      | 240                                                                                 |
| Daewoo        | 045, 278, 017, 020, 087                                                             |
| Daytron       | 020                                                                                 |
| Denon         | 042                                                                                 |
| Dynatech      | 000                                                                                 |
| Electrohome   | 037                                                                                 |
| Electrophonic | 037                                                                                 |
| Emerex        | 032                                                                                 |
| Emerson       | 037, 002, 043, 000, 184, 121, 278, 061, 068, 088, 208, 209, 211, 212, 294, 295, 361 |
| Fisher        | 047, 104, 056, 054                                                                  |
| Full          | 035, 033                                                                            |
| Funal         | 000                                                                                 |
| GE            | 060, 035, 240, 048, 065, 202                                                        |
| Garrard       | 000                                                                                 |
| Go Video      | 232, 279                                                                            |
| GoldStar      | 057, 018, 038                                                                       |
| Gradiente     | 008, 000                                                                            |
| Hi-Q          | 047                                                                                 |
| Harley        | 000                                                                                 |
| Davidson      | 000                                                                                 |
| Harmann       | 038, 075                                                                            |
| Kardon        | 072, 068                                                                            |
| Harwood       | 046                                                                                 |
| Headquarter   | 046                                                                                 |
| Hilachi       | 042, 041, 000, 065, 105, 145, 166                                                   |
| JVC           | 041, 008, 067                                                                       |
| Jensen        | 041                                                                                 |
| KEC           | 037, 278                                                                            |
| KLH           | 072                                                                                 |

|              |                                                            |
|--------------|------------------------------------------------------------|
| Kenwood      | 041, 067, 038                                              |
| Kodak        | 035, 037                                                   |
| LXI          | 037                                                        |
| Lloyd's      | 000, 208                                                   |
| Logik        | 072                                                        |
| MEI          | 035                                                        |
| MGA          | 043, 240, 061                                              |
| MGN          | 240                                                        |
| Technology   | 240                                                        |
| MTC          | 000, 240                                                   |
| Magnasonic   | 278                                                        |
| Magnavox     | 035, 039, 000, 081, 110, 149                               |
| Magnin       | 240                                                        |
| Marantz      | 035, 081                                                   |
| Marla        | 037                                                        |
| Matsushita   | 035                                                        |
| Memorex      | 035, 037, 039, 047, 000, 240, 048, 104, 046                |
| Minolta      | 042, 105                                                   |
| Mitsubishi   | 057, 043, 048, 061, 075, 173, 214, 242                     |
| Motrola      | 035, 048                                                   |
| Multitech    | 000, 072                                                   |
| NAD          | 058                                                        |
| NEC          | 041, 067, 104, 038, 040, 050                               |
| Nikko        | 037                                                        |
| Nikon        | 034                                                        |
| Noblex       | 240                                                        |
| Olympus      | 035                                                        |
| Optimus      | 037, 048, 104, 058                                         |
| Optonica     | 067                                                        |
| Orion        | 002, 184, 295                                              |
| Panasonic    | 035, 077, 225, 254                                         |
| Penney       | 035, 037, 042, 240, 038, 040, 054                          |
| Pentax       | 042, 065, 105                                              |
| Philco       | 035, 209                                                   |
| Philips      | 035, 081, 110, 062                                         |
| Pilot        | 037                                                        |
| Pioneer      | 067, 058                                                   |
| Portland     | 020                                                        |
| Proflitronic | 240                                                        |
| Proscan      | 042, 202                                                   |
| Protec       | 072                                                        |
| Pulsar       | 039                                                        |
| Quarter      | 046                                                        |
| Quartz       | 046                                                        |
| Quasar       | 035, 077                                                   |
| RCA          | 060, 035, 042, 240, 048, 065, 077, 105, 106, 149, 202      |
| RadioShack   | 037, 000                                                   |
| Radix        | 037                                                        |
| Randex       | 037                                                        |
| Realistic    | 035, 037, 047, 000, 048, 104, 066, 062, 046                |
| Ricoh        | 034                                                        |
| Runco        | 039                                                        |
| SFS          | 042                                                        |
| Saisho       | 145                                                        |
| Sakura       | 075                                                        |
| Samsung      | 045, 240, 053                                              |
| Sanky        | 039, 048                                                   |
| Sansul       | 041, 067, 000, 271                                         |
| Sanyo        | 047, 240, 104, 046                                         |
| Scott        | 043, 045, 184, 121, 210, 211, 212                          |
| Seors        | 035, 037, 047, 042, 000, 104, 066, 046, 064, 105           |
| Semp         | 045                                                        |
| Sharp        | 048, 062                                                   |
| Shinfun      | 072                                                        |
| Shogun       | 240                                                        |
| Singer       | 072                                                        |
| Sony         | 035, 032, 034, 000, 033                                    |
| Sylvania     | 035, 043, 000, 081, 110                                    |
| Symphonic    | 000                                                        |
| TMK          | 240, 208                                                   |
| Tatung       | 041                                                        |
| TEAC         | 041, 000                                                   |
| Technics     | 035                                                        |
| Teknika      | 035, 037, 000, 052                                         |
| Thomas       | 000                                                        |
| Toshiba      | 043, 045, 066, 210, 212                                    |
| Totevision   | 037, 240                                                   |
| Unitech      | 240                                                        |
| Vector       | 045                                                        |
| Video        | 038, 040                                                   |
| Research     | 038, 040                                                   |
| Concepts     | 045, 040, 061                                              |
| Videasonic   | 240                                                        |
| Wards        | 060, 035, 047, 042, 000, 240, 048, 081, 072, 062, 149, 212 |
| White West-  | 278                                                        |
| Inghouse     | 056, 066, 072                                              |
| XR-1000      | 038                                                        |
| Yamaha       | 038                                                        |
| Zenith       | 039, 034, 000, 033                                         |

## Set-Up Codes for TV/VCR Combos

|               |                       |
|---------------|-----------------------|
| American High | 035*                  |
| Broksonic     | 002, 294              |
| Colt          | 072                   |
| Curtis Mathes | 072                   |
| Daewoo        | 235*                  |
| Emerson       | 002, 294              |
| Funal         | 000                   |
| GE            | 035*, 060*, 048*, 240 |
| Hilachi       | 035*, 000             |
| HQ            | 000                   |
| Lloyds        | 000                   |
| MGA           | 240                   |
| Magnavox      | 000, 035*, 081*       |
| Magnin        | 240                   |
| Memorex       | 037                   |
| Mitsubishi    | 048*                  |
| Orion         | 002, 294              |
| Panasonic     | 035*                  |
| Penney's      | 035*, 240             |
| Quasar        | 035*                  |
| RCA           | 035*, 060*, 048*      |
| Sansul        | 000                   |
| Sanyo         | 240                   |
| Seors         | 000, 037              |
| Symphonic     | 000                   |
| Zenith        | 000                   |

**NOTE:** If your TV/VCR is working on one of the above codes highlighted with an asterisk (\*), you may need to program a separate TV code in order to control the volume. Check the list of

codes below and follow the instructions detailed in "Step 3: Setting Up Your Device" section to program the supplied TV code.

TV/VCRs working on VCR code 035 may require TV code 051 for volume control.

TV/VCRs working on VCR code 048 may require TV code 093 for volume control.

TV/VCRs working on VCR code 060 may require TV code 047 for volume control.

TV/VCRs working on VCR code 081 may require TV code 054 for volume control.

## Cable Boxes/Câblodélecteurs

|                |                                             |
|----------------|---------------------------------------------|
| ABC            | 003, 008, 014, 007, 017, 013, 011, 001      |
| Allegro        | 153                                         |
| Antronix       | 022, 207                                    |
| Archer         | 022, 153, 207                               |
| Cabletenna     | 022                                         |
| Cableview      | 022                                         |
| Cenitury       | 153                                         |
| Citizen        | 153                                         |
| Colour Voice   | 025, 031                                    |
| Comtronics     | 040, 060                                    |
| Contec         | 019                                         |
| Eastern        | 002                                         |
| Everquest      | 015, 040                                    |
| Focus          | 400                                         |
| GC Electronics | 207                                         |
| GMI            | 057                                         |
| Garrard        | 153                                         |
| Gemini         | 015, 057, 242                               |
| General        | 276, 011                                    |
| Instrument     | 144, 040                                    |
| Goldstar       | 020, 009, 259, 034, 273                     |
| Hamlin         | 011                                         |
| Hilachi        | 007                                         |
| Hytex          | 153                                         |
| Jasco          | 003, 012, 014, 276, 011, 015, 024           |
| Jenrad         | 033                                         |
| Macrom         | 027                                         |
| Magnavox       | 000                                         |
| Memorex        | 156                                         |
| Movie Time     | 156                                         |
| NSC            | 156                                         |
| Oak            | 007, 019, 248                               |
| Optimus        | 021                                         |
| Panasonic      | 000, 107, 021                               |
| Paragon        | 000                                         |
| Philips        | 025, 027, 028, 029, 030, 031, 153, 242, 290 |
| Pioneer        | 144, 023                                    |
| Popular        | 400                                         |
| Mechanics      | 000                                         |
| Pulsar         | 000                                         |
| RCA            | 021                                         |
| RadioShack     | 015                                         |
| Realistic      | 207                                         |
| Recoton        | 400                                         |
| Regal          | 020, 259, 273, 279                          |
| Regency        | 002                                         |
| Rembrandt      | 011                                         |
| Runco          | 040                                         |
| SL Marx        | 144, 040                                    |
| Samsung        | 000                                         |
| Scientific     | 008, 277, 017, 006                          |
| Atlanta        | 015, 040                                    |
| Signal         | 011                                         |
| Signature      | 021                                         |
| Sprucer        | 003, 015                                    |
| Starcom        | 003, 015                                    |
| Stargate       | 015, 040                                    |
| Starquest      | 015                                         |
| Sylvania       | 001                                         |
| Tandy          | 258                                         |
| TeleCaption    | 221                                         |
| Televue        | 040                                         |
| Texscan        | 001                                         |
| Timeless       | 418                                         |
| Tocom          | 012, 013, 059                               |
| Toshiba        | 000                                         |
| Tusa           | 015                                         |
| Unika          | 022, 153, 207                               |
| United Artists | 007                                         |
| United Cable   | 003                                         |
| Universal      | 191, 022, 153, 207                          |
| Vidtech        | 244                                         |
| Viewstar       | 027, 060, 258                               |
| Zenith         | 000                                         |
| Zentek         | 400                                         |

One For All® is a trademark of Universal Electronics Inc.

Copyright 1996 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

