

233064

Latest Codes for Programming Remote to Control Other Brands of Equipment

This sheet may have additional brands and code numbers compared to the lists printed in your owner's manual. These lists are updated to include the latest information. Instructions for programming the remote to control these other brands of equipment are in the owner's manual.

Code List for Audio Equipment

Brand	Code(s)
-------	---------

RCA Audio Equipment

AM/FM	03
CD	07
Tape	06
Phono	05
Aux	04

Dimensia Audio Equipment

AM/FM	03
CD	07
Tape	06
Phono	05
Aux	04

Code List for Satellite Receivers

Brand	Code(s)
-------	---------

Chaparral	80,81
Cheyenne	81
Drake	82,83
DSS	00
General Instruments	92,93,94
RCA	00
Realistic	84
Sierra I,II,III	81
STS1	85
STS2	86
STS3	87
STS4	88
Toshiba	89
Uniden	90
Video Cipher II	91

Code List for Cable Boxes

Brand	Code(s)
-------	---------

ABC	22,46,53,54
Anvision	07,08
Cablestar	07,08
Diamond	56
Eagle	07,08
Eastern International	02
General Instruments	46
GI 400	04,05,15,23,24,25,30,36
Hamlin	03,12,13,34,48
Hitachi	37,43,46
Jerrold	04,05,15,23,24,25,30,36,45,46,47,62,65
Macom	37,43
Magnavox	07,08,19,21,26,28,29,32,33,40,41
NSC	09
Oak	01,16,38
Oak Sigma	16
Panasonic	03,27,39,61
Philips	07,08,19,21,26,28,29,32,33,40,41
Pioneer	18,20,44
Randtek	07,08
RCA	00,27
Regal	03,12,13
Regency	02,33
Samsung	44
Scientific Atlanta	03,22,35,63,64
Signature	46
Sprucer	27
Starcom	46
Stargate 2000	58
Sylvania	11,59
Teknika	06
Texscan	10,11,59
Tocom	17,21,49,50,55
Unika	31,32,41
Universal	51,52,60
Viewstar	07,08,19,21,26,28,29,32,33,40,41
Warner Amex	44
Zenith	14,42,57,61

Code List for VCRs

Brand	Code(s)
-------	---------

Aiwa	15
Akai	03,17,22,23,63,66
Audio Dynamics	14,16
Broksonic	10
Candle	07,09,13,44,45,46,52
Canon	08,53
Capehart	01
Citizen	07,09,13,44,45,46,52
Colortyme	14
Craig	07,12
Curtis Mathes	00,07,08,14,15,44,46,53,64,67
Daewoo	13,45,52,76
dbx	14,16
Dimensia	00
Dynatech	15
Electrohome	27
Emerson	08,09,10,13,15,20,23,27,34,41,42,47,49,57,62,65,67,68,70
Fisher	02,12,18,19,43,48,58
Funai	15
GE	00,07,08,32,37,53
Goldstar	09,14,46,60
Harman Kardon	14
Hitachi	05,15,35,36
Instant Replay	08
JCL	08
JCPenney	02,05,07,08,14,16,30,35,51,53
JVC	02,14,16,30,46,74
Kenwood	02,14,16,30,44,46
KLH	73
Lloyd	15
Logik	31
Magnavox	08,29,53,56
Marantz	02,08,14,16,29,30,44,46,61
Marta	09
MEI	08
Memorex	08,09,12,15
MGA	04,27
Midland	32
Minolta	05,35
Mitsubishi	04,05,27,35,40
Montgomery Ward	06
MTC	07,15
Multitech	07,15,31,32
NEC	02,14,16,30,44,46,59,61,64
Panasonic	08,53,75

Pentax	05,35,44
Pentax Research +	46
Philco	08,29,53,56
Philips	08,29
Pioneer	05,16,50
Portland	44,45,52
ProScan	00
Quartz	02
Quasar	08,53
RCA	00,05,07,08,28,35,37,54,69
Radio Shack/Realistic	02,06,08,09,12,15,19,27,43,53
Samsung	07,13,22,32,42
Sansui	16,71
Sanyo	02,12
Scott	04,13,41,49,68
Sears	02,05,09,12,18,19,35,43,48
Sharp	06,24,27,39,45
Shintom	17,26,31,55
Sony	17,26,38
Sylvania	08,15,29,53,56
Symphonic	15
Tandy	02,15
Tashiko	09
Tatung	30
Teac	15,30,69
Technics	08
Teknika	08,09,15,21
TMK	67
Toshiba	05,13,19,48,49
Totevision	07,09
Unitech	07
Vector Research	14,16,44
Victor	16
Video Concepts	14,16,44
Videosonic	07
Wards	05,06,07,08,09,12,13,15,25,27,31,35
Yamaha	02,14,16,30,46
Zenith	11,17,26,72

Code List for LaserDisc Players

Brand	Code(s)
-------	---------

Pioneer	33,37
ProScan	33,37
RCA	33,37

TOCOM 15083430 CRK70, CRK71, CRK72,
CRK74, CRK83, CRK84
(Code Release 030950)

 
Programming the DSS® Remote to control your TV

217095



Step 1

Insert the four batteries.



Step 2

Turn on your TV.

Step 3

Press and *hold* the TV button.

Step 4

 
Enter one of the three-digit codes listed for your TV.

Step 5

Release the TV button and press CHAN up or down to see if the TV responds. If not, go to the next step.

Step 6

Repeat Steps 2 through 5 with the next code listed for your brand.

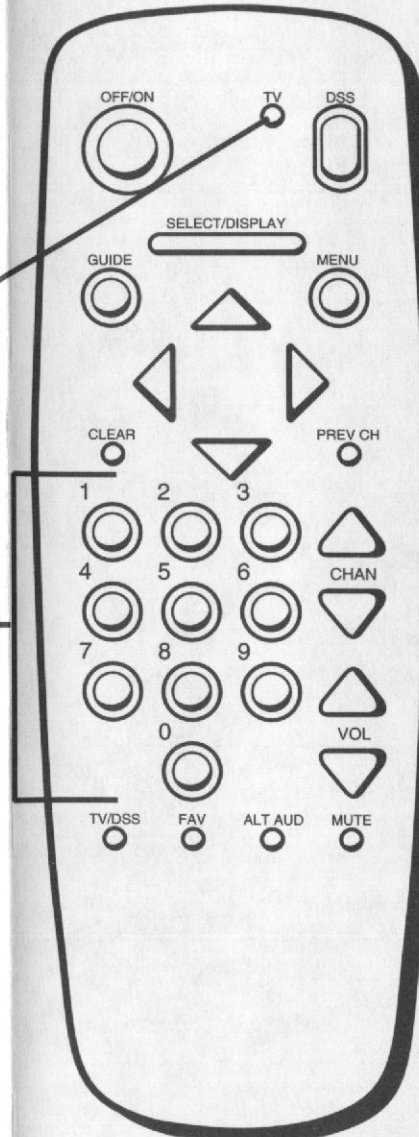

The remote shown may be slightly different from the one packed with your product, but the programming steps are the same.

TV Codes

A-Mark	102	MTC	011, 019, 027
Admiral	005	Multivision	081
Akai	002, 103	NAD	018, 023
Amtron	064	NEC	011, 014, 019, 027, 038, 084
Anam	104, 105	Panasonic	012, 013, 038, 086, 111
Anam National	038, 106	Penney	000, 008, 011, 019, 027, 040, 068, 077, 086, 088
AOC	011, 019, 027, 088, 107	Philco	006, 007, 010, 011, 013, 016, 019, 027, 033, 035, 037, 038, 043, 087, 089
Bell & Howell	005	Philips	002, 006, 007, 010, 011, 013, 016, 033, 035, 037, 038, 043, 066, 073
Candle	011, 027, 033	Pioneer	011, 027, 045, 062, 093
Citizen	011, 027, 033, 064	Portland	011, 019, 027, 037
Colortyme	011, 027, 084	ProScan	000
Concerto	011, 027	Proton	011, 027, 037, 072
Contec/Cony	036, 037, 040, 042, 064	Quasar	012, 038, 092
Craig	064	Radio Shack	000, 021, 025, 036, 037, 059, 064, 078
Curtis Mathes	000, 011, 015, 027, 037	RCA	000, 006, 011, 019, 027, 034, 038, 044, 046, 088, 100, 101, 109
CXC	064	Realistic	021
Daewoo	011, 019, 027, 112	Sampo	011, 027
Daytron	011, 027	Samsung	006, 011, 014, 015, 019, 027, 036, 037, 077, 110
Dimensia	000	Sanyo	017, 021, 039, 056, 057, 058
Electrohome	006, 011, 014, 027, 038, 061, 068	Scott	028, 037, 064
Emerson	011, 026, 027, 028, 029, 030, 031, 032, 037, 042, 053, 064, 065, 067, 075, 076, 078, 079, 094, 095, 096	Sears	000, 006, 011, 014, 017, 018, 021, 023, 027, 039, 040, 041, 051, 071, 083, 095
Envision	011, 027	Sharp	011, 020, 025, 027, 037, 052, 053, 059, 060, 108
Fisher	017, 021, 039, 041	Signature	005, 094
Funai	064	Sony	002
GE	000, 008, 009, 011, 012, 027, 038, 068, 086, 089, 091	Soundesign	011, 027, 033
Goldstar	003, 004, 006, 011, 019, 027, 037, 050	Sylvania	006, 007, 010, 011, 013, 016, 027, 033, 035, 043, 049, 066, 087, 089
Hallmark	011, 027	Symphonic	064, 076
Hitachi	009, 011, 027, 036, 037, 040, 047, 048, 063, 080, 094, 097, 098	Tatung	038
Infinity	013	Technics	012
JBL	013	Techwood	011, 027
Jensen	011, 027	Teknika	011, 019, 027, 033, 036, 037, 040, 066
JVC	012, 024, 036, 037, 040, 048, 051, 074	Telecaption	090
Kawasho	002, 011, 027	TMK	011, 027
Kenwood	006, 011, 014, 027	Toshiba	018, 021, 023, 040, 071, 077, 085, 090
Kloss Novabeam	035, 043	Universal	008, 009
KTV	078	Victor	051
Loewe	013	Vidtech	019, 027
Luxman	011, 027	Wards	000, 005, 006, 007, 008, 009, 010, 011, 013, 019, 025, 027, 028, 035, 043, 059, 066, 076, 082, 089
LXI	000, 013, 018, 021, 023, 054	Yamaha	006, 014, 019, 027
Magnavox	006, 007, 010, 011, 013, 016, 027, 033, 035, 043, 049, 066, 087, 089	Zenith	001, 099
Marantz	011, 013, 027, 069		
Memorex	005		
MGA	006, 011, 014, 019, 022, 027, 041, 056, 061, 068		
Mitsubishi	006, 011, 014, 019, 022, 027, 041, 055, 056, 061, 068		

DSS® is a registered trademark of DIRECTV, Inc., a unit of GM Hughes Electronics.

 
Programming the DSS® Remote to control your TV

217095



Step 1

Insert the four batteries.



Step 2

Turn on your TV.

Step 3

Press and *hold* the TV button.

Step 4

 
Enter one of the three-digit codes listed for your TV.

Step 5

Release the TV button and press CHAN up or down to see if the TV responds. If not, go to the next step.

Step 6

Repeat Steps 2 through 5 with the next code listed for your brand.

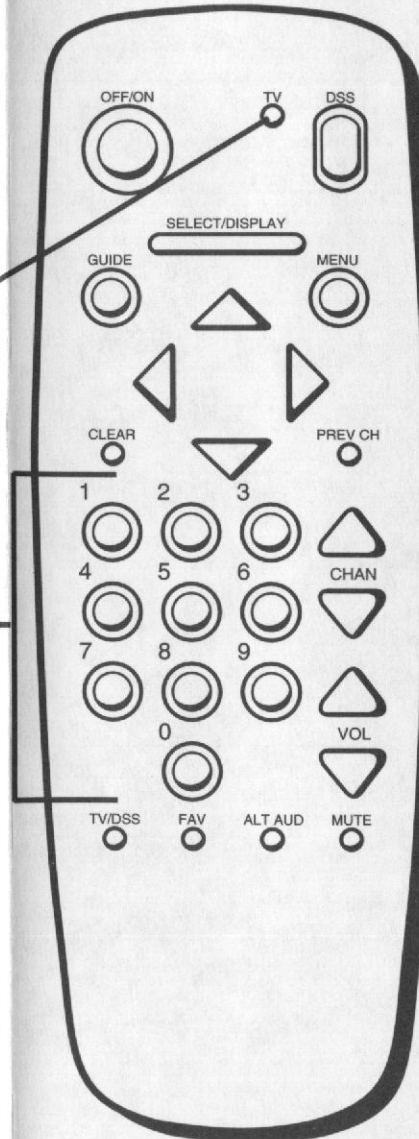

The remote shown may be slightly different from the one packed with your product, but the programming steps are the same.

TV Codes

A-Mark	102	MTC	011, 019, 027
Admiral	005	Multivision	081
Akai	002, 103	NAD	018, 023
Amtron	064	NEC	011, 014, 019, 027, 038, 084
Anam	104, 105	Panasonic	012, 013, 038, 086, 111
Anam National	038, 106	Penney	000, 008, 011, 019, 027, 040, 068, 077, 086, 088
AOC	011, 019, 027, 088, 107	Philco	006, 007, 010, 011, 013, 016, 019, 027, 033, 035, 037, 038, 043, 087, 089
Bell & Howell	005	Philips	002, 006, 007, 010, 011, 013, 016, 033, 035, 037, 038, 043, 066, 073
Candle	011, 027, 033	Pioneer	011, 027, 045, 062, 093
Citizen	011, 027, 033, 064	Portland	011, 019, 027, 037
Colortyme	011, 027, 084	ProScan	000
Concerto	011, 027	Proton	011, 027, 037, 072
Contec/Cony	036, 037, 040, 042, 064	Quasar	012, 038, 092
Craig	064	Radio Shack	000, 021, 025, 036, 037, 059, 064, 078
Curtis Mathes	000, 011, 015, 027, 037	RCA	000, 006, 011, 019, 027, 034, 038, 044, 046, 088, 100, 101, 109
CXC	064	Realistic	021
Daewoo	011, 019, 027, 112	Sampo	011, 027
Daytron	011, 027	Samsung	006, 011, 014, 015, 019, 027, 036, 037, 077, 110
Dimensia	000	Sanyo	017, 021, 039, 056, 057, 058
Electrohome	006, 011, 014, 027, 038, 061, 068	Scott	028, 037, 064
Emerson	011, 026, 027, 028, 029, 030, 031, 032, 037, 042, 053, 064, 065, 067, 075, 076, 078, 079, 094, 095, 096	Sears	000, 006, 011, 014, 017, 018, 021, 023, 027, 039, 040, 041, 051, 071, 083, 095
Envision	011, 027	Sharp	011, 020, 025, 027, 037, 052, 053, 059, 060, 108
Fisher	017, 021, 039, 041	Signature	005, 094
Funai	064	Sony	002
GE	000, 008, 009, 011, 012, 027, 038, 068, 086, 089, 091	Soundesign	011, 027, 033
Goldstar	003, 004, 006, 011, 019, 027, 037, 050	Sylvania	006, 007, 010, 011, 013, 016, 027, 033, 035, 043, 049, 066, 087, 089
Hallmark	011, 027	Symphonic	064, 076
Hitachi	009, 011, 027, 036, 037, 040, 047, 048, 063, 080, 094, 097, 098	Tatung	038
Infinity	013	Technics	012
JBL	013	Techwood	011, 027
Jensen	011, 027	Teknika	011, 019, 027, 033, 036, 037, 040, 066
JVC	012, 024, 036, 037, 040, 048, 051, 074	Telecaption	090
Kawasho	002, 011, 027	TMK	011, 027
Kenwood	006, 011, 014, 027	Toshiba	018, 021, 023, 040, 071, 077, 085, 090
Kloss Novabeam	035, 043	Universal	008, 009
KTV	078	Victor	051
Loewe	013	Vidtech	019, 027
Luxman	011, 027	Wards	000, 005, 006, 007, 008, 009, 010, 011, 013, 019, 025, 027, 028, 035, 043, 059, 066, 076, 082, 089
LXI	000, 013, 018, 021, 023, 054	Yamaha	006, 014, 019, 027
Magnavox	006, 007, 010, 011, 013, 016, 027, 033, 035, 043, 049, 066, 087, 089	Zenith	001, 099
Marantz	011, 013, 027, 069		
Memorex	005		
MGA	006, 011, 014, 019, 022, 027, 041, 056, 061, 068		
Mitsubishi	006, 011, 014, 019, 022, 027, 041, 055, 056, 061, 068		

DSS® is a registered trademark of DIRECTV, Inc., a unit of GM Hughes Electronics.