

Introduction

Your new Rabbit Easy 3 eliminates the need of using different remote controls to operate your TV, VCR and Cable Box.

The Easy 3 allows you to operate almost all TVs, VCRs, and Cable Boxes with just one remote control.

Features

Simple Set-Up. Before use, the Easy 3 must be "told" which brands of TV, VCR and Cable TV Decoder it will be used to operate.

Easy Operation. Once programmed, the Easy 3 is as simple to use as an ordinary remote control.

Long Range Operation. The Easy 3 can be used over a distance longer than double the normal room size.

Programming the Easy 3 to Operate Your VCR, Cable TV Decoder and TV

To use your new Easy 3 Remote control, it must be programmed to recognize the brands of the VCR, Cable TV Decoder and TV it will be used to operate. Before programming, see "Inserting Battery" instructions.

- 1 To program the Easy 3 to recognize your TV, place the VCR/CABLE/TV switch of the Easy 3 in the TV position.
- 2 Look up the code that corresponds to your brand in the TV CODES TABLE in this operating guide. For example, if you were programming the Easy 3 for use with a Zenith television set, you would look up "Zenith" in the TV CODE TABLE and find the code "1".

- 3 Simultaneously hold down the ENTER and "0" buttons until the indicator light on the Easy 3 turns on (about 5 seconds).

Use the numbered buttons on the Easy 3 to enter the code that corresponds to the brand of your equipment.

NOTE: Some manufacturers use several different types of remote controls. If your brand has several numbers listed, try each one until you find the one that works.

4. Press the ENTER button. The light on the Easy 3 should go out immediately, indicating that the programming for that component has been completed.

NOTE: If the light fails to go out as soon as the ENTER button has been pressed, an error has been made. Repeat steps 2-4.

5. For future reference, write the code used successfully in the appropriate space available under "Quick Programming Guide".
6. To program the Easy 3 to recognize your Cable TV Decoder, put

the VCR/CABLE/TV switch in the CABLE position and repeat steps 2 - 5, using the code shown in the CABLE TV DECODER CODE TABLE for your brand decoder.

7. To program the Easy 3 for your VCR, put the VCR/CABLE/TV switch in the VCR position and repeat steps 2 - 5, using the appropriate code from the VCR CODE TABLE.

Quick Programming Guide

1. Put the VCR/CABLE/TV switch in desired position
2. Simultaneously hold down the "ENTER" and "0" buttons until indicator lights (about 5 seconds).
3. Enter the proper code number.
4. Press "ENTER". The indicator light should turn off at once.
5. If light fails to turn off, wait until it goes out by itself, then repeat steps 2 - 4.

TV CODE:

CABLE CODE:

VCR CODE:


Inserting Battery

Your Easy 3 requires two (2) high quality alkaline size AAA batteries. To insert or replace batteries:

1. Remove the battery cover on the back of the Easy 3 by inserting your fingernail into the slot at the top. pull down and out, then remove the old batteries.
2. Insert new batteries as indicated in the diagram inside the compartment.
3. Replace the cover by inserting the tab on the bottom of the cover into its housing. Snap the cover into position.
4. After installing new batteries, the remote control will set itself to the Zenith TV, CABLE and VCR Code #1. If you are using the Easy 3 to operate equipment that uses different codes, it will have to be reprogrammed for those codes.
Be careful not to place any heavy objects on top of the remote control buttons. Prolonged accidental operation of the remote control will shorten battery life.

Warning

This equipment generates and uses radio frequency energy. If not used properly, it may cause interference to radio and TV signals. It has been type tested and found to comply with the FCC limits for a Class B computing device, which require reasonable protection against such interference. However, there is no guarantee that interference will not occur. If this equipment does cause interference to radio or TV reception, try the following: Re-orient the receiving antenna. Move the remote control further away from the receiver. If necessary, consult your dealer or an experienced radio/television technician for additional suggestions.

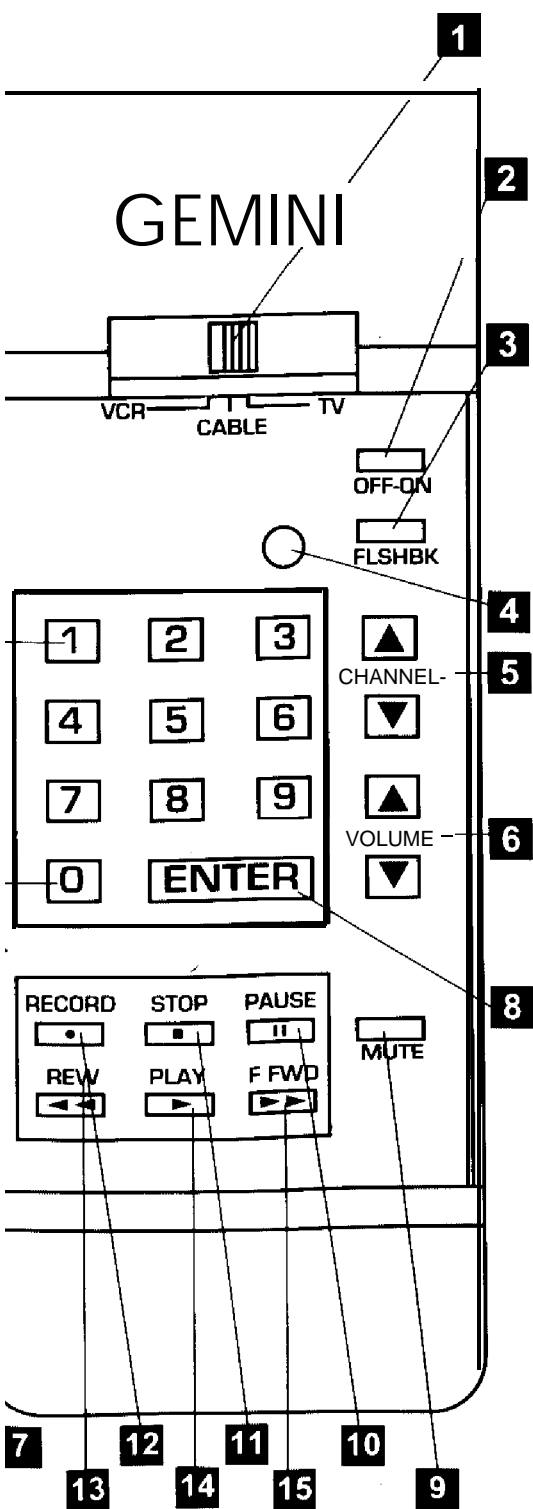

- VCR/CABLE/TV**
Place this switch in the VCR, CABLE or TV position to select VCR operation, CABLE-TV Decoder operation or TV operation. While some controls of the Easy 3 will operate independently of this switch, the functions of others (such as the OFF/ON button) will depend on its position.
- OFF/ON**
VCR Operation
(i.e., VCR/CABLE/TV switch in VCR position): Press to turn VCR ON or OFF.
CABLE Operation
(VCR/CABLE/TV switch in CABLE position): Press to turn CABLE TV DECODER ON or OFF.
TV Operation
(VCR/CABLE/TV switch in TV position): Press to turn TV ON or OFF.
- FLASHBK (Flashback)**
TV Operation: Press to switch back to the last television channel you were watching.
CABLE Operation: Function depends on type of Cable-TV system.
- INDICATOR LIGHT**
Use During programming.
- A CHANNEL ▼**
VCR Operation: Used to sequence through channels that are higher (A CHANNEL) or lower (CHANNEL 'I) than the channel selected with the tuner of the VCR.
CABLE Operation: Used to sequence through Cable-TV channels.
TV Operation: Used to sequence through channels selected by the tuner of the television set.
- A VOLUME ▼**
Used to increase or decrease the volume of the television.
- NUMBERED BUTTONS**
Used to select channels and program the Easy 3.

- ENTER**
VCR Operation: Used to display channel number, time and the mode that the VCR is operating in (some models only).
CABLE/TV Operation: Press after a channel number is entered with the numbered buttons, to change the channels instantly. On some brands, this **button** will display the number of the channel you are watching, or the time. Press again to remove the display. This button may operate additional features on some Cable-TV Decoders.
- MUTE**
CABLE or TV Operations: Press to turn sound off while the picture remains. Press again to turn the sound back on.
- PAUSE**
When a VCR tape is playing, press to stop temporarily and view a "still" picture. Press PAUSE again to resume playing the tape.
During the recording of a VCR tape, press PAUSE to stop the tape and avoid recording unwanted material. Press PAUSE again to resume recording.
- STOP**
Press to discontinue recording or playback of a VCR tape.
- RECORD**
Press and hold down the RECORD button until the "recording" indicator on the VCR illuminates to begin recording.
- REW (REWIND)**
With VCR in STOP mode, press to rewind a tape rapidly.
When a VCR tape is playing, press to reverse tape rapidly with picture shown.
- PLAY**
Press to begin VCR playback.
- FFWD (Fast Forward)**
With the VCR in STOP mode, press to advance rapidly a VCR

tape to a forward position (picture and sound absent).
When a VCR tape is playing, press to advance tape quickly with picture shown.

TV CODE TABLE

TV Brand Name	Code	TV Brand Name	Code
AKAI	4	Philco	4
AOC	4	Philco	13
Centurion	19	Philips	12
Contec	32	Philips	13
Coronado	3	Portland	3
Curtis Mathes	19	Quasar	6
Curtis Mathes	21	Quasar	7
Daytron	19	Realistic	5
Emerson	3	Realistic	24
Emerson	4	RCA	4
Emerson	23	RCA	16
Emerson	24	RCA	26
Fisher	9	Sampo	19
Fisher	18	Samsung	3
General Electric	6	Samsung	19
General Electric	7	Samsung	32
General Electric	14	Sanyo	8
General Electric	16	Sanyo	9
General Electric	17	Sanyo	18
Goldstar	3	Scott	19
Goldstar	4	Sears	8
Hitachi	2	Sears	9
Hitachi	3	Sears	10
Hitachi	29	Sears	11
KMS	3	Sears	18
KTV	3	Sharp	3
KTV	4	Sharp	5
Magnavox	3	Sharp	22
Magnavox	12	Sony	15
Magnavox	13	Sony	31
Magnavox	17	Sylvania	12
Magnavox	19	Sylvania	13
Magnavox	27	Sylvania	19
Magnavox	28	Sylvania	27
Majestic	21	Sylvania	28
Marantz	4	Tatung	6
Marantz	20	Teknika	3
MGA/Mitsubishi	4	Teknika	12
MGA/Mitsubishi	19	Teknika	24
MGA/Mitsubishi	20	Toshiba	10
MGA/Mitsubishi	30	Toshiba	11
NEC	4	Montgomery Ward	4
NEC	19	Montgomery Ward	5
Panasonic	6	Montgomery Ward	13
Panasonic		Montgomery Ward	14
J.C. Penney	4	Montgomery Ward	19
J.C. Penney	10	Montgomery Ward	21
J.C. Penney	14	Montgomery Ward	30
J.C. Penney	19	Yorx	19
JVC	2.5	Zenith	1
Philco	3		

VCR CODE TABLE

VCR Brand Name	Code	VCR Brand Name	Code
AKAI	24	RCA	15
Brooksonic	21	RCA	16
Canon	14	RCA	20
Citizen	9	RCA	27
Curtis Mathes	14	RCA	28
Curtis Mathes	16	Realistic	6
Emerson	3	Realistic	12
Emerson	21	Realistic	14
Emerson	23	Realistic	31
Fisher	11	Samsung	20
Fisher	12	Samsung	30
Fisher	13	Sanyo	6
Funai	31	Sanyo	12
General Electric	14	Scott	4
General Electric	16	Scott	5
General Electric	20	Sears	6
Goldstar	9	Sears	11
Hltachi	15	Sears	15
JVC	2	Sharp	8
JVC	25	Shintom	26
Kenwood	2	Sony	32
Magnavox		Sony Beta	10
Magnavox	14	Sony Video 8	17
Marta	9	Sylvania	
Marantz	18	Sylvania	14
Memorex	6	Sylvania	27
Memorex	8	Symphonic	31
Memorex	9	Tashiko	9
Memorex	14	Teac	31
Memorex	31	Toshiba	5
MEA/Mitsubishi	4	Toshiba	15
MGA/Mitsubishi	22	Vector Research	18
NEC	18	Montgomery Ward	8
Panasonic	14	Montgomery Ward	14
Pentax	15	Zenith Beta	10
Philips	27	Zenith VHS	1
Pioneer	15	Zenith (1984-I 988)	29
Quasar	14		

CABLE-TV DECODER CODE TABLE

Cable Decoder	Code	Cable Decoder	Code
Brand Name	Code	Brand Name	Code
Gemini	31	Panasonic	20
Gemini	5	Philips	23
General Instrument	5	Philips	24
General Instrument	6	Philips	25
Hamlin	2	Philips	26
Hamlin	3	Philips	27
Hamlin	19	Pioneer	14
Jerrold	4	Pioneer	15
Jerrold	7	Regency	29
Jerrold	8	Scientific Atlanta	16
Jerrold	9	Texscan	30
Jerrold	10	Tocom	17
Macom	21	Tocom VIP	18
Oak	12	Viewstar	26
Oak	12	Viewstar	27
Oak	32	Zenith	1
Panasonic	13		