

# SONY<sup>®</sup> SERVICE MANUAL

# RA-2A CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KP-41T65	RM-Y136A	US	SCC-N65D-A	KP-53S65	RM-Y136A	US	SCC-N65A-A
KP-41T65	RM-Y136A	Canadian	SCC-N66B-A	KP-53S65	RM-Y136A	US	SCC-N65A-B
KP-46C65	RM-Y136A	US	SCC-N65E-A	KP-53S65	RM-Y136A	Canadian	SCC-N66C-A
KP-46C65	RM-Y136A	Canadian	SCC-N66D-A	KP-61S65	RM-Y136A	US	SCC-N65C-A
KP-48S65	RM-Y136A	US	SCC-N65B-A	KP-61S65	RM-Y136A	Canadian	SCC-N66E-A
KP-48S65	RM-Y136A	Canadian	SCC-N66A-A				

## CORRECTION -2

SUBJECT : THE PREVIOUSLY ISSUED SUPPLEMENT-1 CONTAINED ERRORS  
AND THE CORRECTIONS ARE PROVIDED IN THE FOLLOWING

File this Correction with the Service manual.

✖ : Indicate corrected portion

[ 7. EXPLODED ] (See page 2)

PAGE	REF.	INCORRECT	CORRECT
94	254	△ A-1501-369-A COUPLER (G) ASSY, PICTURE TUBE	△ A-1501-372-A COUPLER (G) ASSY, PICTURE TUBE
94	255	△ A-1501-372-A COUPLER (B) ASSY, PICTURE TUBE	△ A-1501-369-A COUPLER (B) ASSY, PICTURE TUBE

[ 7. EXPLODED ]

7-6. PICTURE TUBE (KP-41T65) (See page 4)

INCORRECT				CORRECT			
REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
254	△ A-1501-369-A	COUPLER (G) ASSY PICTURE TUBE		254	△ A-1501-372-A	COUPLER (G) ASSY PICTURE TUBE	
255	△ A-1501-372-A	COUPLER (B) ASSY PICTURE TUBE		255	△ A-1501-369-A	COUPLER (B) ASSY PICTURE TUBE	

