

# SONY<sup>®</sup> SERVICE MANUAL

## RA-2A CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KP-41T65	RM-Y136A	US	SCC-N65D-A	KP-53S65	RM-Y136A	US	SCC-N65A-A
KP-41T65	RM-Y136A	Canadian	SCC-N66B-A	KP-53S65	RM-Y136A	US	SCC-N65A-B
KP-46C65	RM-Y136A	US	SCC-N65E-A	KP-53S65	RM-Y136A	Canadian	SCC-N66C-A
KP-46C65	RM-Y136A	Canadian	SCC-N66D-A	KP-61S65	RM-Y136A	US	SCC-N65C-A
KP-48S65	RM-Y136A	US	SCC-N65B-A	KP-61S65	RM-Y136A	Canadian	SCC-N66E-A
KP-48S65	RM-Y136A	Canadian	SCC-N66A-A				


## CORRECTION-1

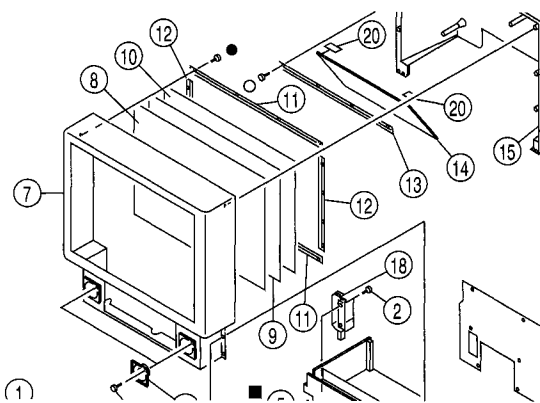 
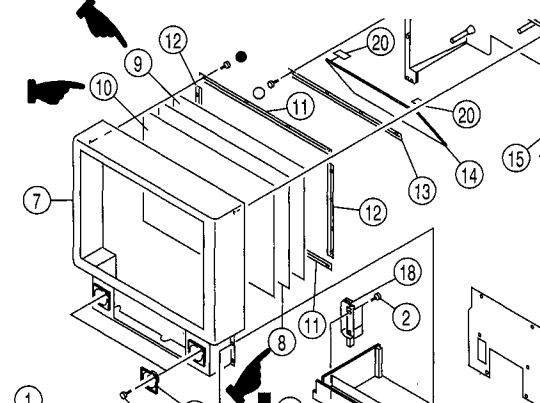 
SUBJECT : CHANGE TO REFERENCE  
NUMBER OF KP-41T65

File this Correction with the Service manual.

### SECTION 7. EXPLODED VIEWS

#### 7-1. COVER(KP-41T65)(See page 89)

 : Indicate corrected portion

Incorrect		correct	
			
REF. NO.	PART NO.	DESCRIPTION	REMARK
8	* 4-064-338-11	PLATE (L), DIFFUSION	
9	* 4-064-339-11	PLATE (F), DIFFUSION	
10	* 4-064-340-01	SCREEN (41), CONTRAST	



※ Please file according to model size. ....

41 46 48 53 61