

## OUT OF TUNE

In "Enhance TV Sound with Stereo" (May 1982), the resistance for  $R_{24}$  and  $R_{25}$  in the Parts List should have been 390 ohms, as it was on the schematic.

In "Learning Quizzes for Electronics" (June, p 70), in the Digital Counter Quiz, the note reading "FF<sub>1</sub> is initially turned on" should have been with part 2 of the quiz not part 1.