

SONY

Video Products
Service Bulletin

Sony Service Company - Technical Services
A Division of Sony Corporation of America
Sony Drive, Park Ridge, New Jersey 07656

Model: SLV-353UC/373UC/555UC/575UC/676UC/
757UC/P33/R5UC

No. 152

Subject: Does Not Load Cassette

Date: March 29, 1991

Symptom:
(62)

Cassettes cannot load or load with difficulty.

Solution: If this symptom occurs, please perform the following procedures and change the Lid Lock Release Lever:

Description	Part Number
Lid Lock Release Lever	3-736-129-06


[Replacement Method]

(1) Remove the upper board of the cassette compartment.

① Remove the four pawls.


※NOTE: Be careful when removing the pawls as they can be broken.

② Remove the upper board of the cassette compartment.

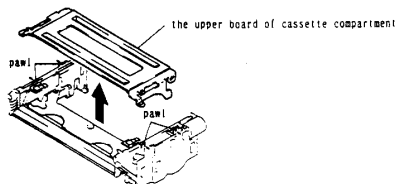

(2) Remove the base of the cassette compartment.

① Fully load the base of the cassette compartment.

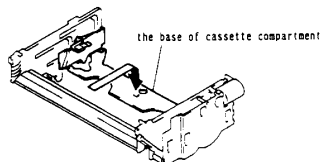


(Continued)

Reference:

PRINTED IN U.S.A.
CSV-2391-6


CSV-2 VHS

- ② Slightly open the side board of the cassette compartment and remove the base of cassette compartment.

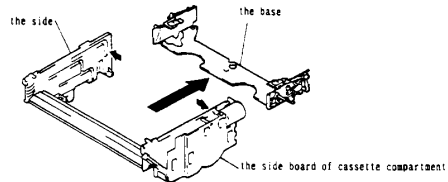


- (3) Replace the lid lock release lever.

- ① Remove the spring.
- ② Replace the lid lock release lever with a new part.

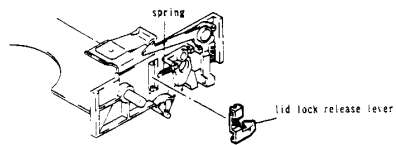

- (4) Assemble the base of the cassette compartment.

- ① Engage the axles (six places) of the base of the cassette compartment in the grooves of the side board of the cassette compartment. (See Figure A).

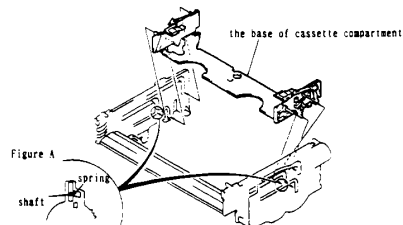

- (5) Assemble the upper board of the cassette compartment.

