


# The Harman Kardon

## Model FL8450

### COMPACT DISC CHANGER

Manual A

# Technical Manual

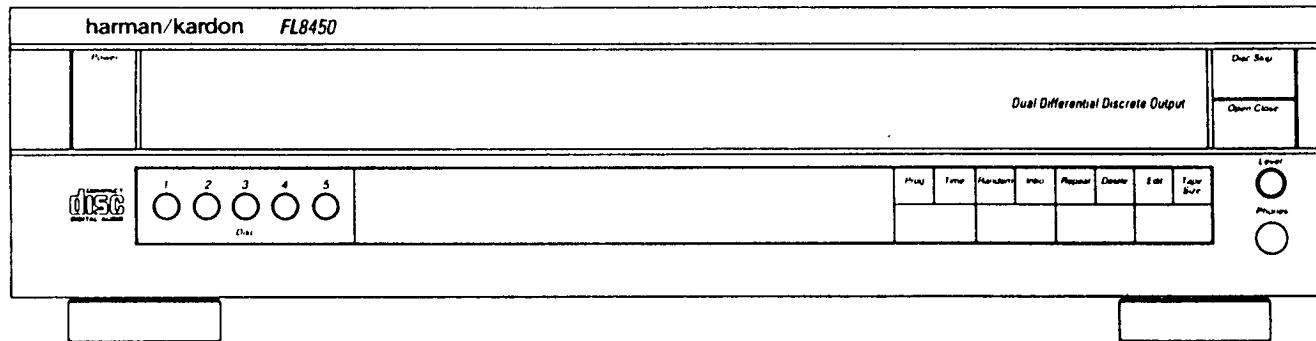

## ■ CONTENTS ■

LASER BEAM SAFETY PRECAUTIONS .....	2	TROUBLESHOOTING .....	25
BEFORE REPAIRING THE COMPACT DISC		PRINTED CIRCUIT BOARDS .....	34
PLAYER .....	3	GENERAL UNIT EXPLODED VIEW .....	37
LEAKAGE TEST .....	4	GENERAL UNIT PARTS LIST .....	44
SPECIFICATIONS .....	5	ELECTRICAL PARTS LIST .....	46
CONTROL AND FUNCTIONS .....	7	IC FUNCTIONAL BLOCK DIAGRAM .....	50
BLOCK DIAGRAM .....	9	PACKAGE .....	56
DISASSEMBLY INSTRUCTIONS .....	11	WIRING DIAGRAM .....	57
PICKUP REPLACEMENT .....	13	SCHEMATIC DIAGRAM .....	58
CIRCUIT DESCRIPTION .....	15	TRANSISTOR AND DIODE LEAD	
ALIGNMENT AND ADJUSTMENT .....	21	IDENTIFICATION .....	59

**DANGER:** Invisible laser radiation when open and interlock failed or defeated.  
AVOID DIRECT EXPOSURE TO BEAM.

**harman/kardon**

Parts and Service Office  
80 Crossways Park West, Woodbury, N.Y. 11797  
1112-FL8450A P9502 1500 Printed in Korea

*SM PN: 1112-FL8450*

## LASER BEAM SAFETY PRECAUTIONS


### CLASS 1 LASER PRODUCT

**CLASS 1  
LASER PRODUCT**

**CAUTION**


**Invisible laser radiation when the unit is open. DO not stare into beam.**

**CAUTION: USE OF ANY CONTROLS, ADJUSTMENT, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

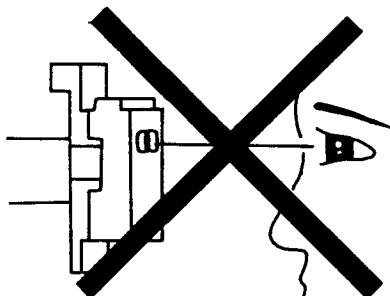

**Do not look directly at the laser beam coming from the pickup or allow it to strike against your skin.**

This compact disc player uses a pickup that emits a laser beam. The laser beam is emitted from the location shown in the figure. When checking the laser diode, be sure to keep your eyes at least 1 foot away from the pickup lens when the diode is turned on. Do not look directly at the laser beam.

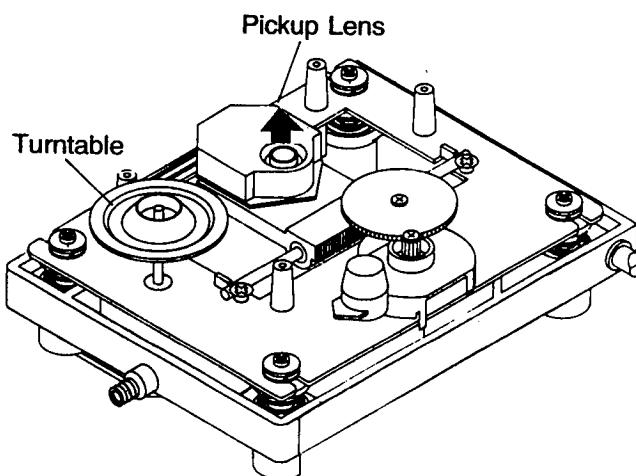

**CAUTION:**

Using controls and adjustment, or doing procedures other than those specified herein, may result in hazardous radiation exposure.

## SAFETY PRECAUTIONS



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**Caution:** To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

**Attention:** Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

### WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

### HANDLING LASER PICKUP

The laser diode in the optical system of this player can be damaged by electrostatic discharge from your clothes or your body. Proper electrostatic grounding for service personal is required during servicing.

## BEFORE REPAIRING THE COMPACT DISC PLAYER

### Preparation

- **Human Body Grounding:**  
Many of the components used in this compact disc player, including the laser pickup, are sensitive to electrostatic discharge. Service personal should be grounded with an electrostatic armband (1 Mohm).
- **Caution:**  
Static charge on clothing does not escape through a body grounding wrist band. Be careful not to contact the pickup or electrical components with your clothing.
- **Workbench and Tool Grounding:**  
A properly-grounded electroconductive plate (1 Mohm) or metal sheet should be fitted to the workbench surface. Tools and instruments (such as soldering irons and scopes) should be grounded to prevent AC leakage.

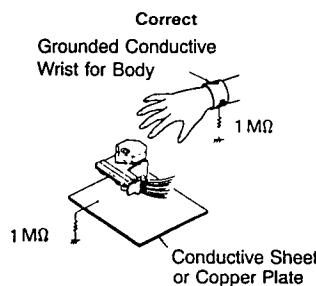


Figure 1

Figure 2

**Note:** Laser diodes are so susceptible to damage from static electricity that, even if a static discharge does not ruin a diode, it can shorten its life or cause it to work improperly.

## LEAKAGE TEST


Before returning the unit to the user, perform the following safety checks:

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metallic parts in the unit.
2. Be sure that any protective devices such as nonmetallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc. Which were removed for servicing are properly reinstalled.
3. Be sure that no shock hazard exists; check for leakage current using Simpson Model 229 Leakage Tester, standard equipment item no. 21641, RCA model WT540A or use alternate method as follows: plug the power cord directly into a 120-volt AC receptacle (do not use an Isolation transformer for this test).

Using two clip leads, connects a 1500 ohm, 10-watt resistor paralleled by a  $0.15\mu F$  capacitor, in series with all exposed metal cabinet parts and a known earth ground, such as a water pipe or conduit. Use a VTVM or VOM with 1000 ohms per volt, or higher sensitivity to measure the AC voltage drop across the resistor. (see diagram) Move the resistor connection to each exposed metal part having a return path to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor. (This test should be performed with the power switch in both the on and off positions.)

A reading of 0.35 volt RMS or more is excessive and indicates a potential shock hazard which must be corrected before returning the unit to the owner.

**SIMPSON MODEL 229 ETC. FOR LEAKAGE TEST**

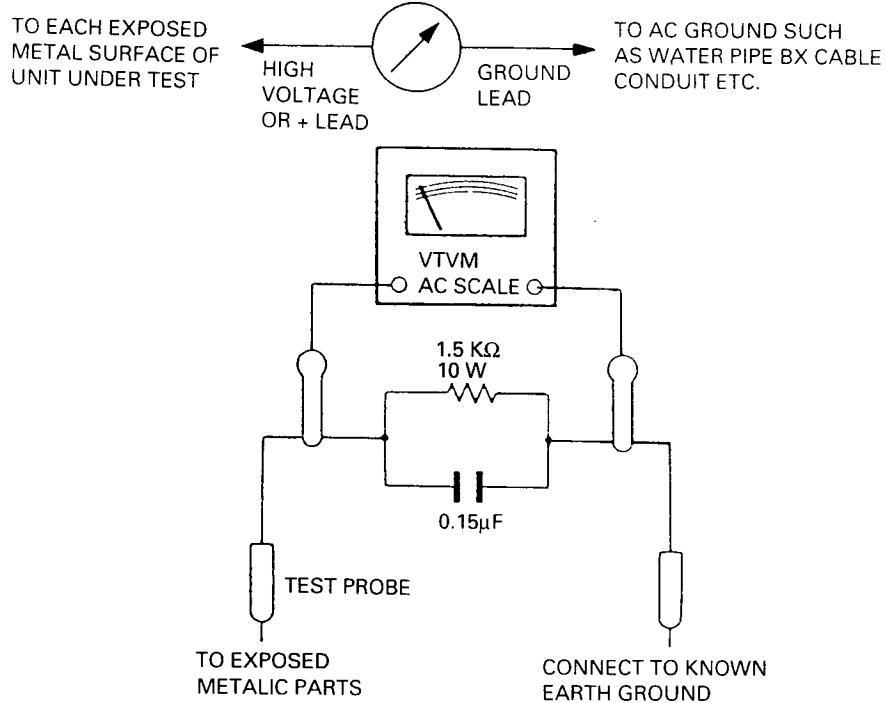

## SPECIFICATIONS

### General

Transmission bit rate ..... 4.3218 Mbit/sec  
 Transmission on clock ..... 16.9344 MHz  
 Error correction ..... CIRC C1, C2 double correction

### Pickup

System object lens drive type ..... Optical pickup  
 Object lens drive system ..... 2 dimensional parallel drive system  
 Optical source ..... Semiconductor AlGaAs laser  
 Wave length ..... 760-800 nm  
 Tracking system ..... 3 beam tracking servo type

### Others

Digital filter ..... 8 times oversampling type  
 Analog filter ..... 2 pole RC type  
 D/A converter ..... 1 bit twin with digital filter.  
 Power consumption ..... 12 W  
 Dimensions (HWD) ..... 3.7 × 17.3 × 14.9 inches  
                                          95 × 440 × 380 mm  
 Weight (net) ..... 6.5 kg (14 lbs 5 oz)

### Electrical

Test Item	Unit	Nominal	Limit
Output voltage at 1 kHz	V	2.0	2.0±0.2
Distortion and noise without filter:			
20Hz	%	0.007	0.01
1 kHz	%	0.007	0.01
10 kHz	%	0.01	0.02
16 kHz	%	0.008	0.01
18 kHz	%	0.008	0.01
20 kHz	%	0.008	0.01
Distortion and noise with filter 30 kHz:			
20 Hz	%	0.004	0.008
1 kHz	%	0.004	0.008
S/N ratio without filter	dB	88	82
S/N ratio with filter 30 kHz	dB	98	94
Dynamic range at 1 kHz	dB	98	95
Frequency response: (0 dB at 1kHz)			
20 Hz	dB	±0	±0.3
100 Hz	dB	±0	±0.3
10 kHz	dB	±0	±0.3
20 kHz	dB	-0.2	±0.3
De-emphasis:			
1 kHz	dB	-0.4	-0.4±0.2
5 kHz	dB	-4.5	-4.5±0.5
16 kHz	dB	-9.04	-9.04±0.5
Channel separation	dB	90	85
Channel Balance	dB	0	±0.3
Minimum operation voltage (% of normal supply voltage)	dB	80	85

## ENVIRONMENTAL

### Test to specification

Temperature between 59° F (15°C) and 95° F (35°C) and relative humidity between 45% and 75%, with power supply voltage of  $\pm 10\%$  the nominal supply voltage.

Test disc: SONY YEDS-7 Type-3 or ABEX TCD-781

### Operation

Unit must work properly and correctly at the temperature range from 32° F (0°C) to 113° F (45°C) and the relative humidity from 40% to 80%, and with the supply voltage.

### Storage

Temperature test: 48 hours each at -40° F (-40°C) and 149° F (65°C)

Humidity test: 95° F (40°C) 95% relative humidity.

### Notes:

1. Nominal specs represent the design specs. All units should be able to approximate these—some will exceed and some may drop slightly below these specs. Limit specs represent the absolute worst condition that still might be considered acceptable; in no case should a unit fail to meet limit specs.
2. This manual is based on the American standard, and provides information on regional circuit modification through the use of alternate schematic diagrams or wiring diagrams, and information on regional component variations through the use of parts lists. Design and specifications subject to change without notice.

## CONTROL AND FUNCTIONS

DH  
Thi  
firs  
firs


**RANDOM**  
This button  
automati  
on each C  
random.

**TIME BUTTON**  
This button is use  
elapsed playin  
beginning of the  
remaining playin  
track or remainin  
disc.

**PROGRAM/REVIEW**  
This button is used for  
your favorite tracks or  
reviewing the program  
selections.

**DISC TRAYS (1-5)**  
One disc per tray can be loaded with  
the labelled side up.

### FL8450

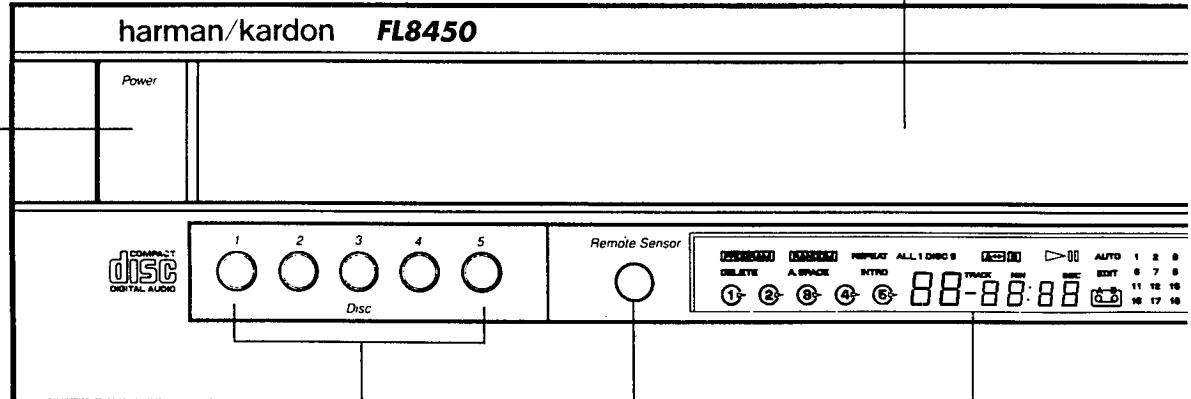


**DISC SELECTOR BUTTONS**  
These buttons are used for selecting  
the disc to be played.


**MULTI FUNCTION DISPLAY**  
This display shows the corresponding  
information according to each mode.

**INFRARED RECEIVER WINDOW**  
This receives the infrared signals  
transmitted by the commander and  
converts it into the electrical signal to  
control this unit.


**BACKWARD SKIP  
SEARCH BUTTO**  
This button is used  
the beginning of the  
returning to a previ  
searching for a part  
fast reverse.

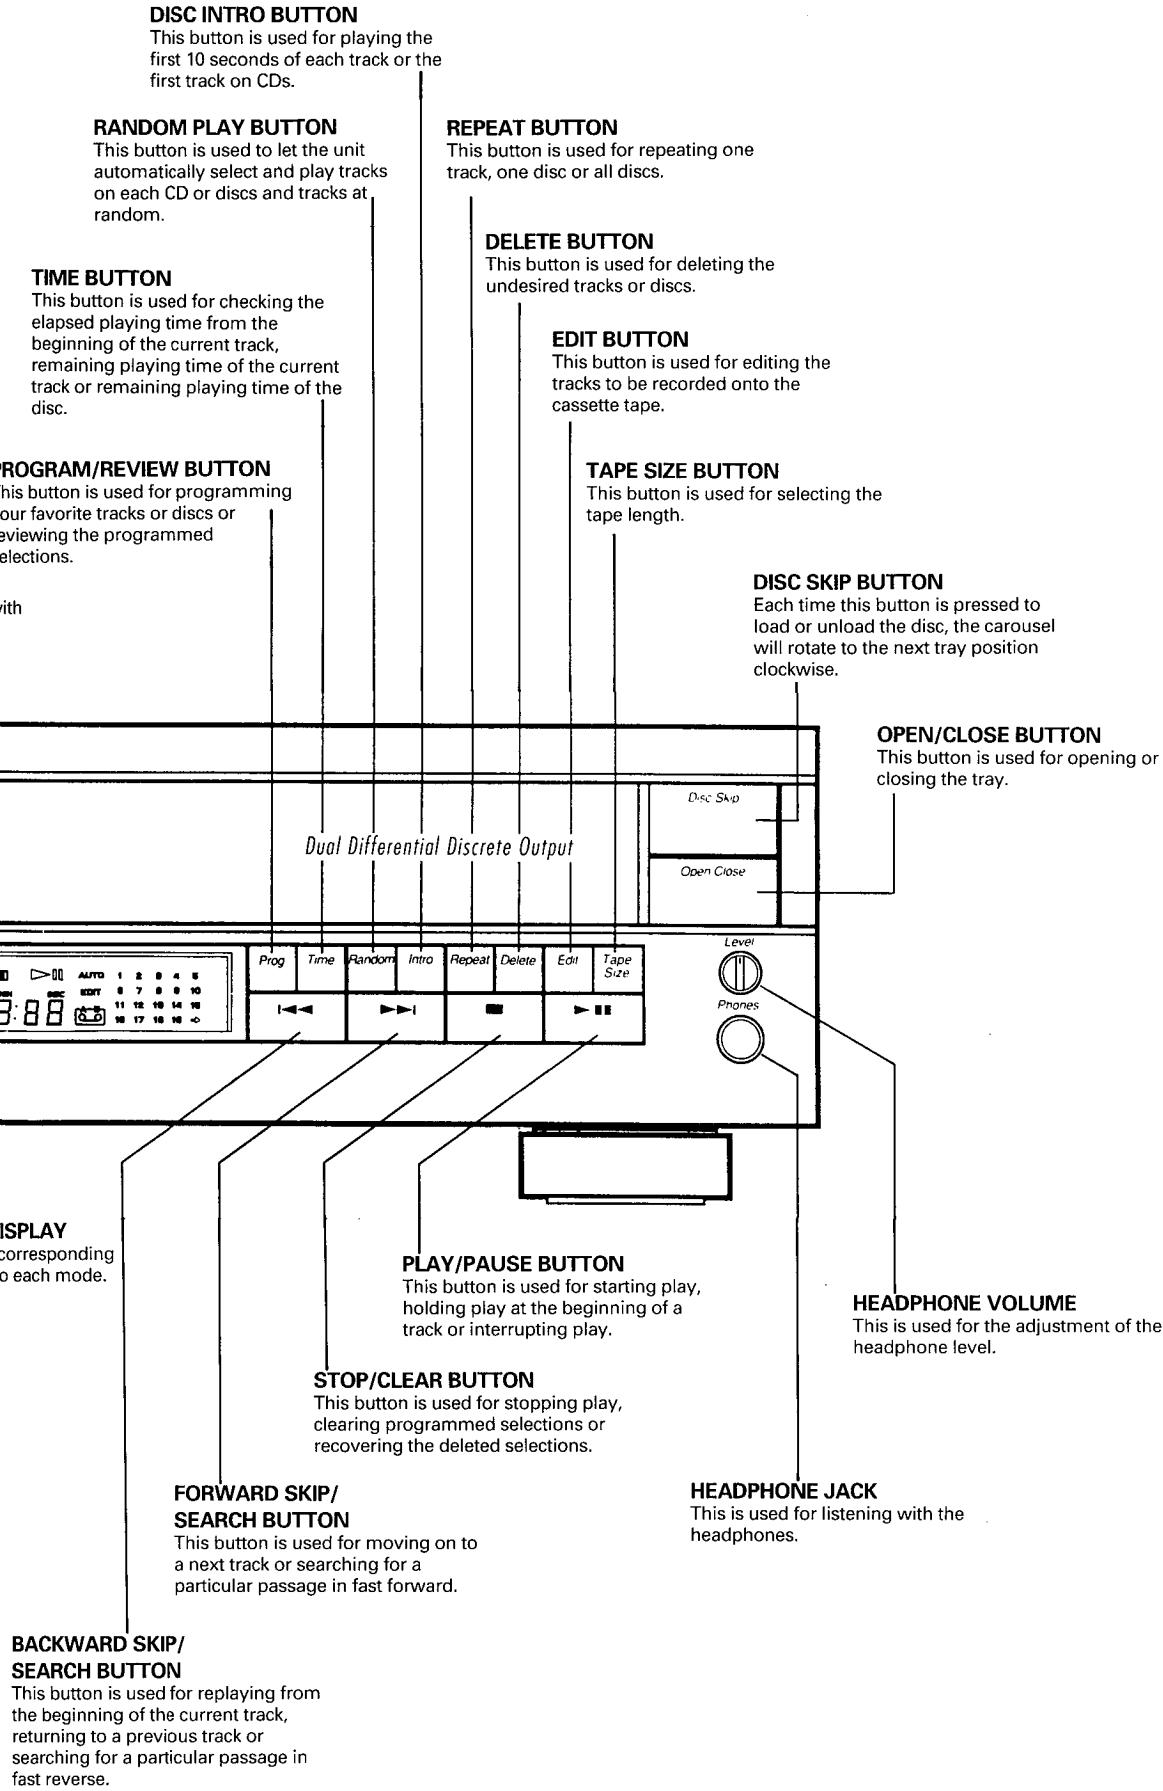


## BLOCK DIAGRAM

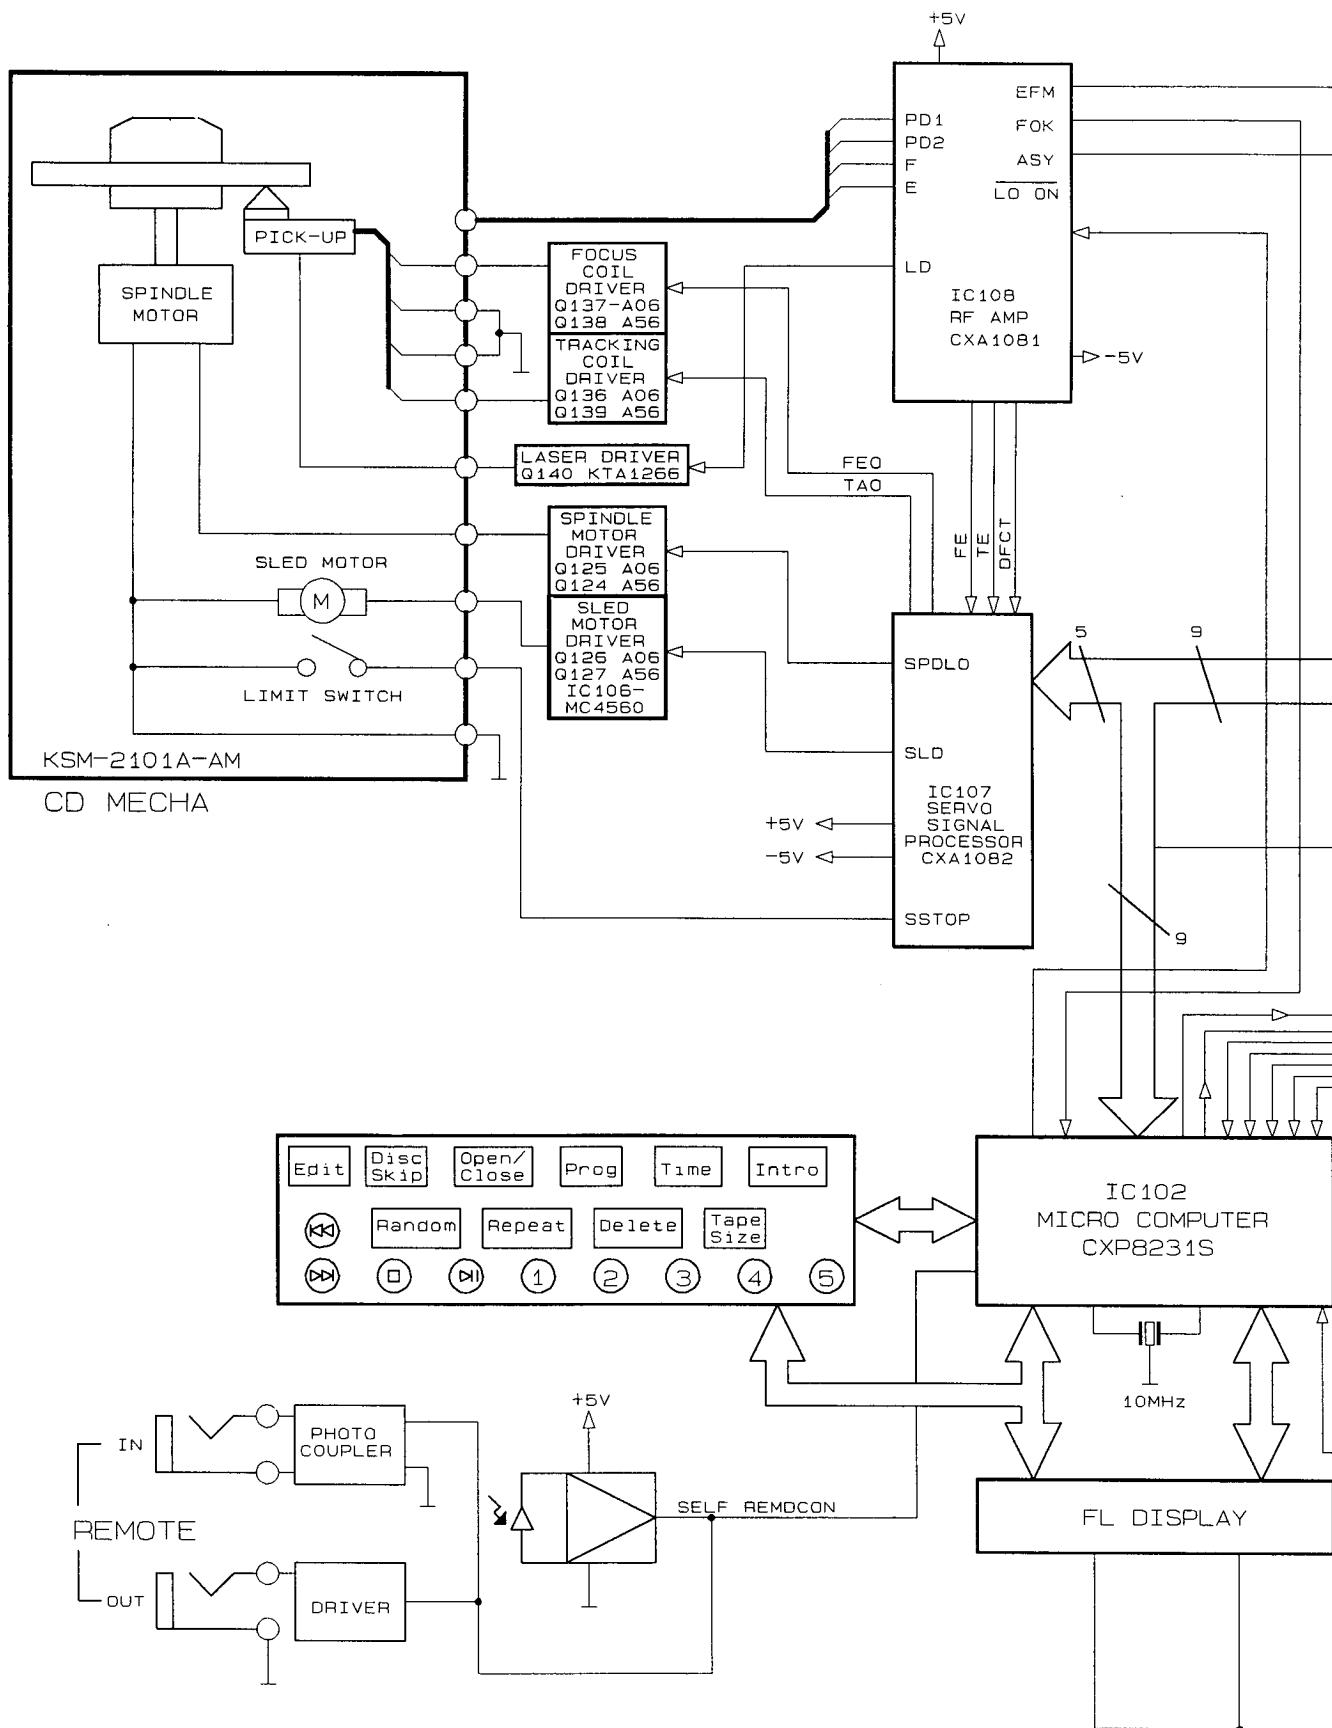

**Model No. : FL-8450**

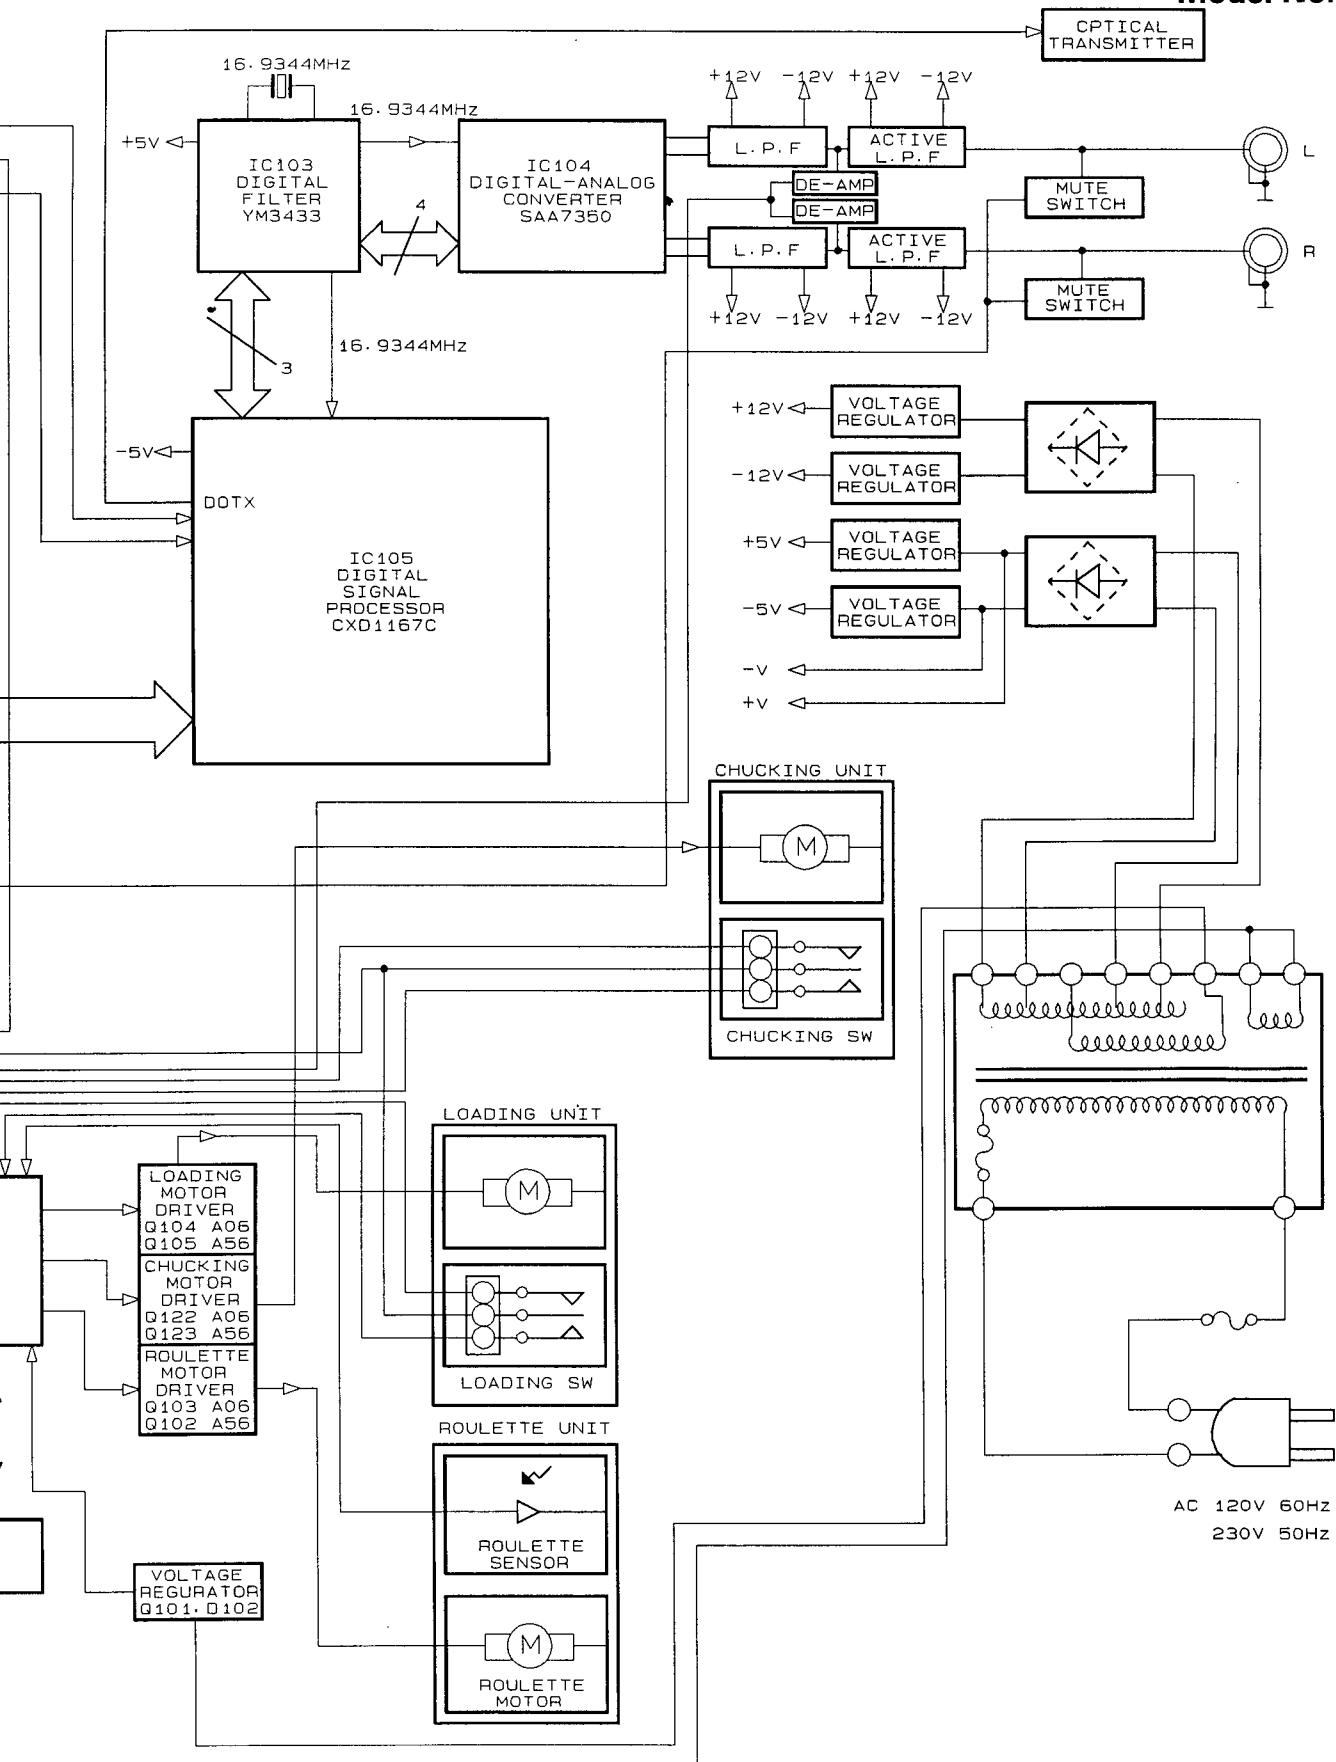

## DISASSEMBLY INSTRUCTIONS

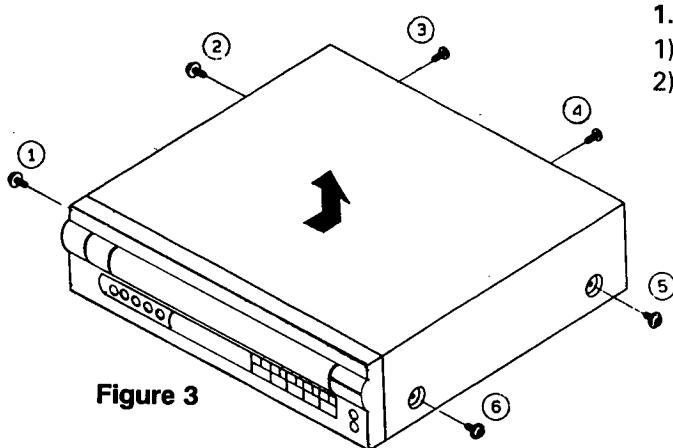


### 1. Remove the top cover (Figure 3).

- 1) Remove 6 screws (① to ⑥) holding the top cover.
- 2) Remove 1 screw and then lug wire from the bottom chassis.


### 2. Remove the bottom cover (Figure 4).

- 1) Turn the set over.
- 2) Remove 9 screws (① to ⑨) from the bottom chassis.
- 3) Remove 2 screws (⑩, ⑪) from the back chassis.

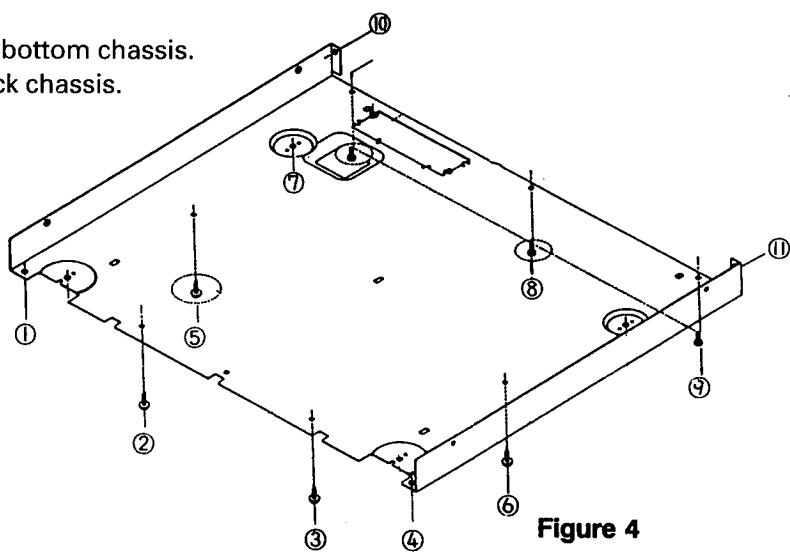


### 3. Remove the front panel (Figure 5).

- 1) Remove 3 screws (① to ③).
- 2) Remove 2 connectors (CNT101, CNT103) from the main B'D.
- 3) Remove 3 screws (④ to ⑥).
- 4) Turn to the clockwise gear loading of the assembly lock gear (see figure 6).
- 5) Hold the cover tray and then pull it up.
- 6) Remove 2 connectors (109, CNT112) from the main B'D.

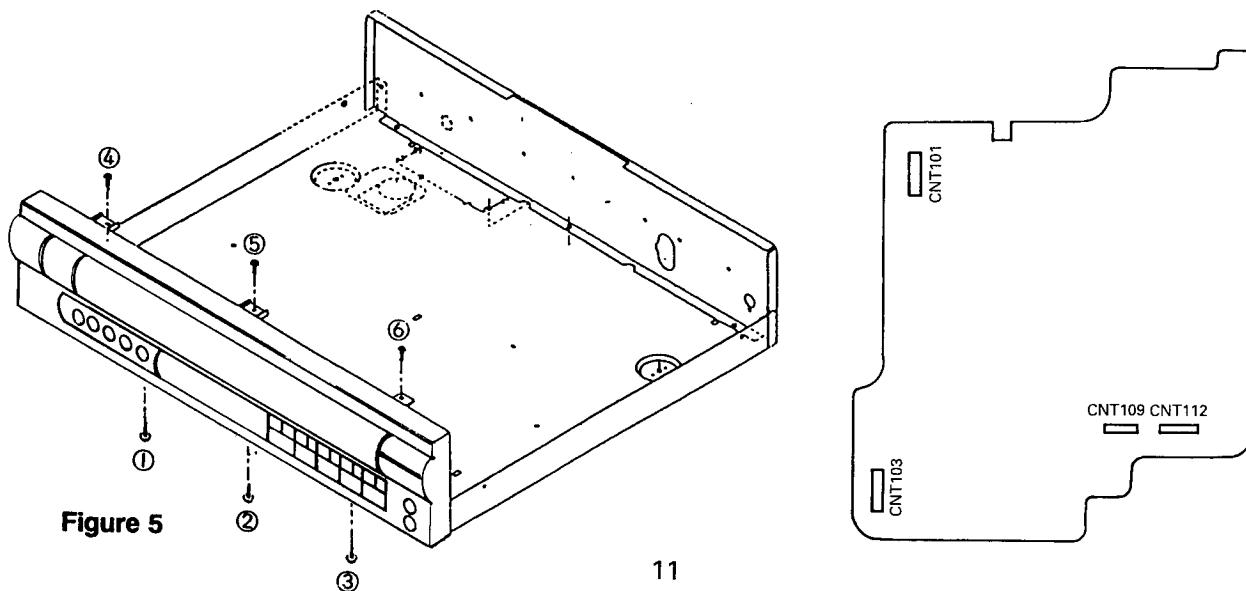


**4. Remove the loading table (Figure 6).**

- 1) Remove 4 screws (① to ④) holding the frame body.
- 2) Remove 4 screws (⑤ to ⑧) holding the assembly chuck.
- 3) Remove the assembly chuck.
- 4) Stretch out the frame body and then remove.
- 5) Remove 2 screws ⑨ and ⑩ holding the left guide tray (F) (same as right guide tray).
- 6) Pull the roulette tray up to the front and hold it up.
- 7) Remove the lead assembly 4P from CNT104-P on the sensor B'D.

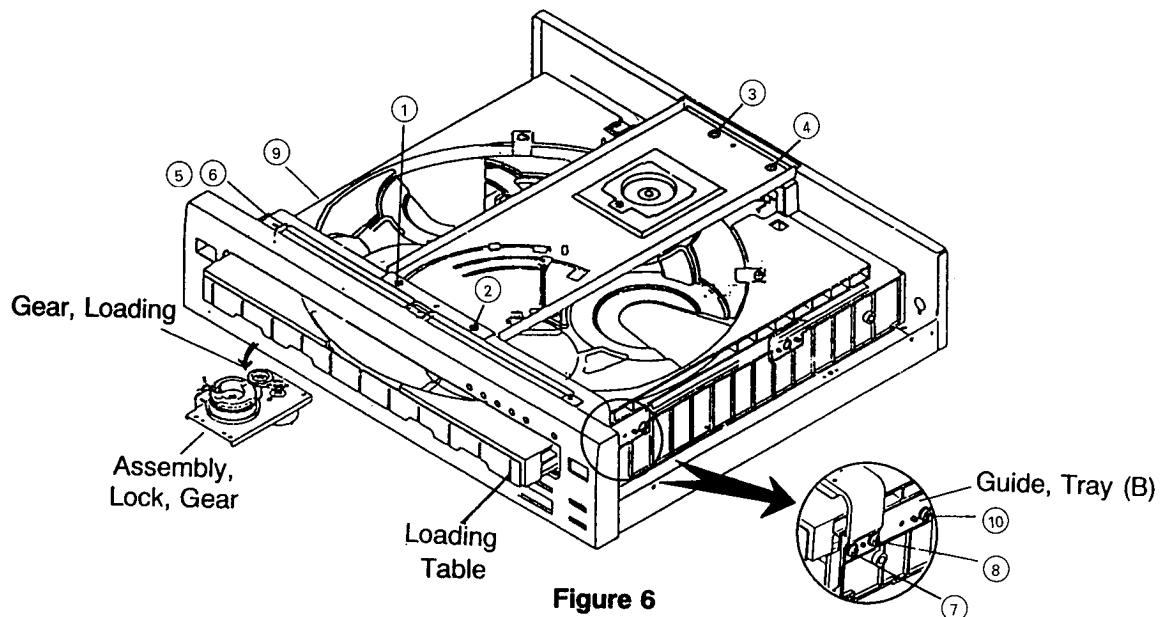**5. Remove the main board (Figure 7).**

- 1) Disconnect all lead assembly.
- 2) Release the 4 tabs (attached to the main board) from the body mechanism.

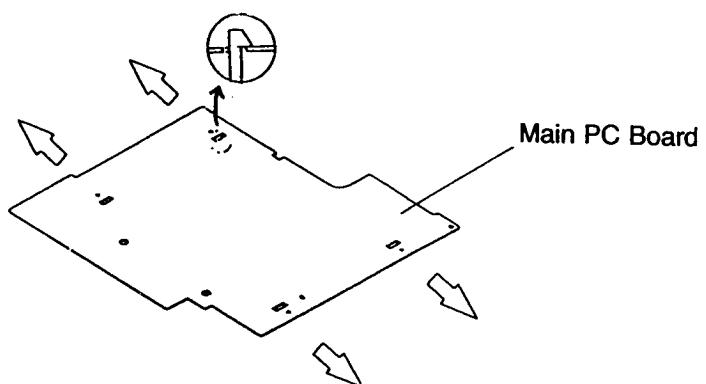


## PICKUP REPLACEMENT

### **Caution:**


Laser diodes are extremely susceptible to damage from static electricity. Even if a static discharge does not ruin the diode, it can shorten its life or cause it to work improperly. When replacing the pickup, take appropriate measures, such as using a conductive mat and a grounded soldering iron, to protect the laser diode from static damage.

1. Remove the CD mechanism assembly by referring to the "exploded view" (See Figure 8).

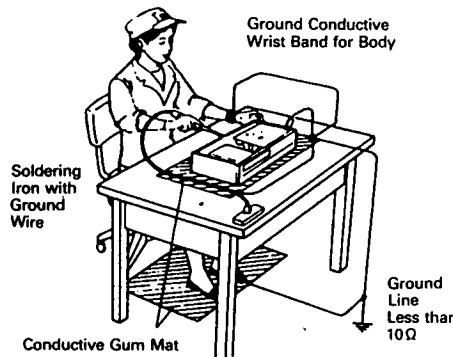


**Figure 8**

2. Remove four screws S12 (See Figure 9).

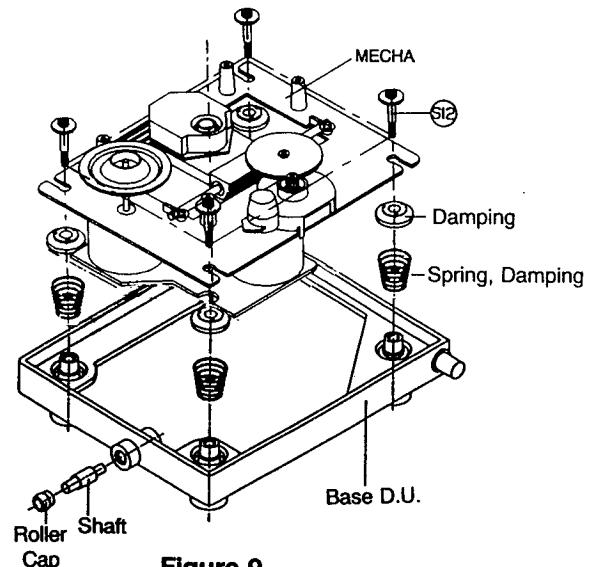

**Figure 9**

3. Remove the gear A (See Figure 10).
4. Pull out the slide shaft.

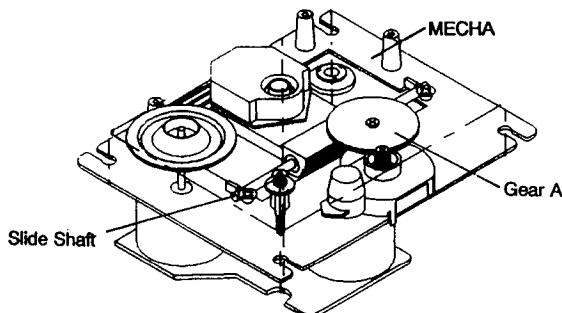

**Figure 10**

5. Remove the pickup (See Figure 11).

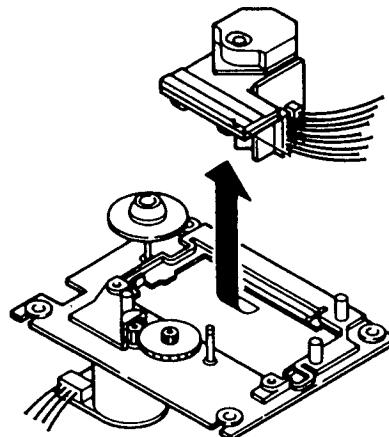


Figure 11

6. After you connect the wire connector, desolder and remove the shorting tab (See Figure 12).

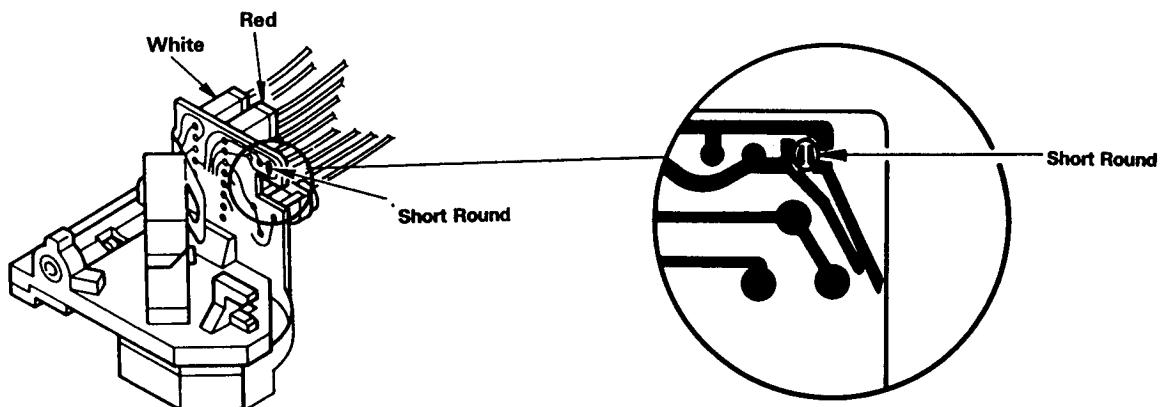


Figure 12

7. Refer to the exploded view of the compact disc mechanism on page 39 for detailed illustrations.

## OPERATION CHECK

When the power switch is turned on after the chucking arm is removed, observe the objective lens and check the following. (The optical system block should be at the lead-in position when it is checked.)

1. The disc table should be at the innermost position after the chucking arm is removed.
2. The diffused light of the laser beam can be seen when the power switch is turned on.
3. Vertical (up and down) movement of the objective lens take place (2 or 3 times).

## CIRCUIT DESCRIPTION

### 1. APC CIRCUIT

A semiconductor laser is used as the light source for the optical pickup. As the laser diode has large negative temperature characteristics in its optical output when driven with a constant current, a circuit must be provided to stabilize this output. For this purpose, a monitor diode which detects the optical output of the laser diode is used in the semiconductor laser.

As the laser diode emits light from its bonded surface, light is emitted both in front and behind. The light emitted behind is monitored with the monitor diode installed on its rear surface, and the optical output is thus controlled. The light emitted in front becomes the light source for the pickup.

Fig. 1 Shows the APC circuit.

When the temperature rises and the optical output decreases, the monitor diode current ( $I_S$ ) decreases, the electric potential of IC108 pin 5 rises, the base current of the driving transistor increases, and the laser diode current increases. This causes the reduced optical output to return to its former level.

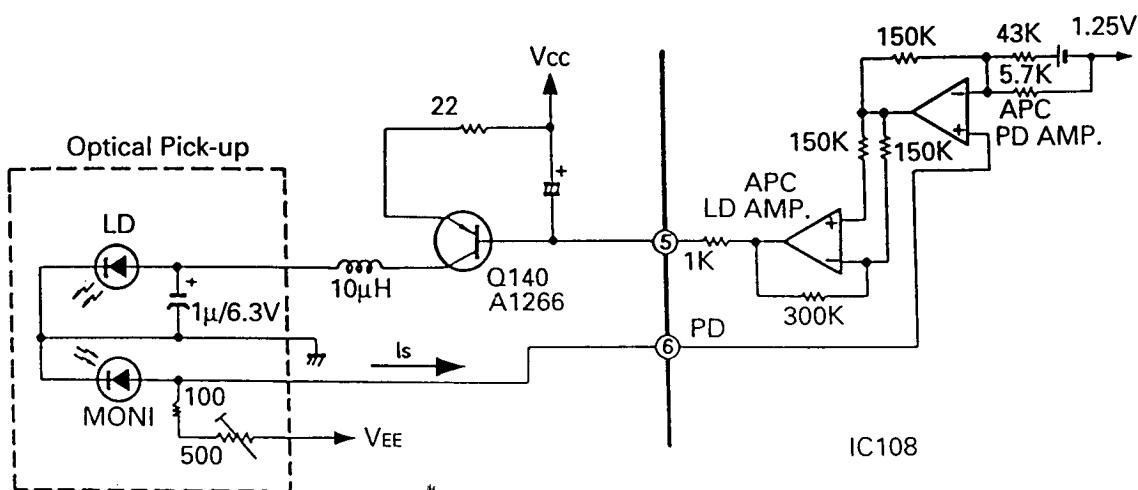


Fig. 1

### 2. FOCUS SERVO

#### 2-1. Optical pickup

This set employs a three-beam optical pickup comprised of six division photodiodes, A through F as shown in Fig. 2. The four photodiodes (A through D) at the center provide focus error detection by using their property to allow the beam to focus into a round image only at a certain point.

The sums of outputs from diagonal two elements of four division photodiodes (A+C and B+D) are compared by the differential amplifier in IC108 to detect the shape of the beam image.

The remaining two diodes (E and F) provide tracking error detection by means of sub-beam spots.

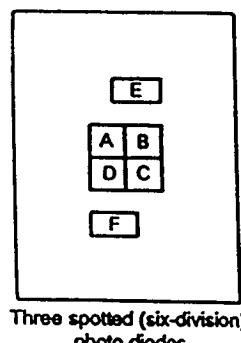


Fig. 2

## 2-2. Focus error detecting operation

The reflected laser beam from a disc is polarized 90° with the beam-splitter and sent to the cylindrical lens. The beam passed through this cylindrical lens is then sent to the four division photodiodes and focuses into an image whose shape varies with the distance between the disc and the objective lens. Such change in the beam shape causes the current flowing from the photodiodes to vary.

Shown in Fig. 3 is the principle of the focus error detection.

The currents from the photodiodes (A+C and B+D) are applied to pins 7 and 8 of IC108 and converted to voltage by RF I-V amplifiers (1) and (2) included in IC108.

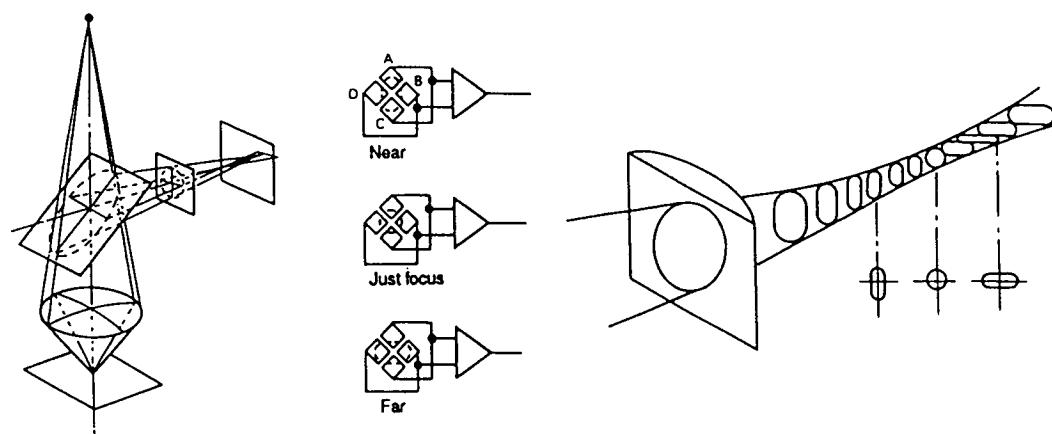


Fig. 3

## 2-3. Focus servo control operation

The focus error signal, after being converted to voltage by the RF I-V amplifier, is transmitted to the operation amplifier in the IC and output from pin 19.

When the disc to objective lens distance is in focus, the beam forms a true round. In this state, the beams applied to four elements of four division photodiodes become equal and thus the output provided then is 0(zero). When the disc to objective lens distance is too close (near focus), the beam is reflected divergently to form an oval in crosswise direction. In this state, the outputs provided from photodiodes A and C are higher than those from B and D, resulting in negative (-) output voltage. On the other hand, when the distance is too far (far focus), the beam is reflected convergently to form an oval in longitudinal direction. Then the outputs from photodiodes B and D are higher, resulting in positive (+) output.

The output voltage (focus error signal) from pin 19 of IC108 passes through IC107, in from pin 6 and out from pin 11, as shown in Fig. 4. It is amplified in IC107 and fed to the focus coil which then drives the objective lens of the pickup.

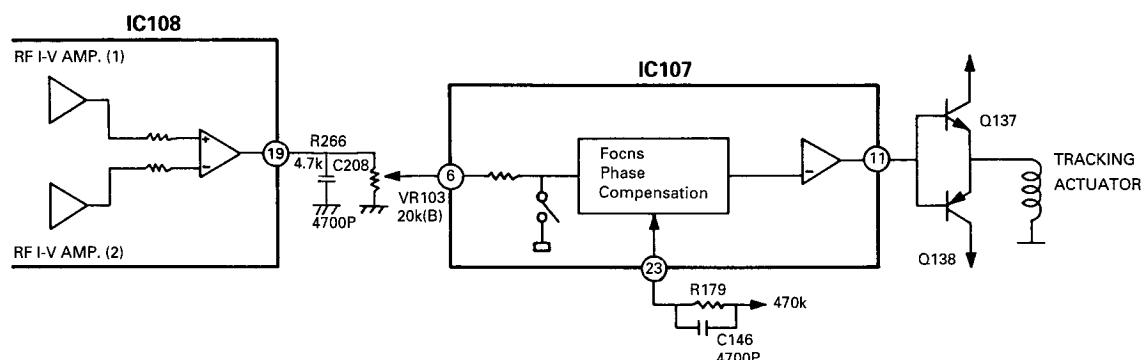


Fig. 4

## 2-4. Tracking error detection system

Fig. 5 Shows the principle of the tracking error detection system which employs the three beam system. The laser beam is divided into the main beam and two sub-beams by diffraction grating and they are arranged on one line. The center line connecting these three beams has a slight offset angle against the main beam. The main beam is received by photodiodes A, B, C and D and two sub-beams by E and F respectively.

Fig. 5-A shows the on-track state. As both auxiliary beams 1 and 2 are slightly on the track in this state, the outputs of photodiodes E and F are equal and the tracking signal is 0(zero). When the track is shifted to the left (Fig. 5-B), the auxiliary beam 1 is off the pit. This allows more light to be received by the photodiode E, resulting in positive (+) tracking signal output. On the other hand, when the track is shifted to the right (Fig. 5-C), the amount of light received by the photodiode F increases, resulting in negative (-) tracking signal output. And these extreme signals are detected as tracking error signals.

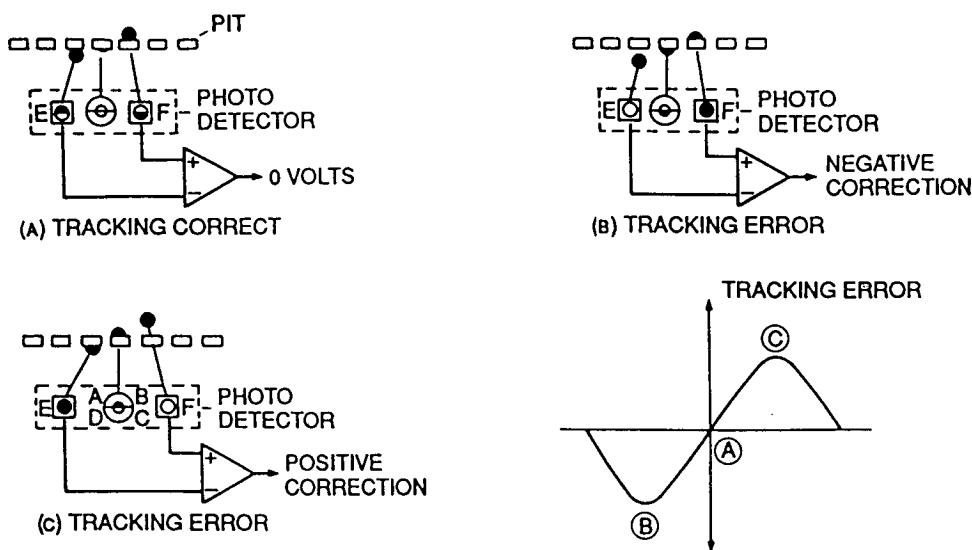


Fig. 5

## 2-5. Tracking servo control operation

When a tracking error signal is detected by photodiodes E and F, it is fed to pins 11 and 10 of IC108 respectively as shown in Fig. 6. In IC108, the signal is converted into voltage by the E I-V amplifier and F I-V amplifier, transmitted to the tracking error amplifier and output through pin 20. While it passes through IC107, in from pin 3 and out from pin 17, it is amplified in IC107 and sent to the tracking coil to adjust pickup so that the amount of track shift is reduced as closely to none as possible.

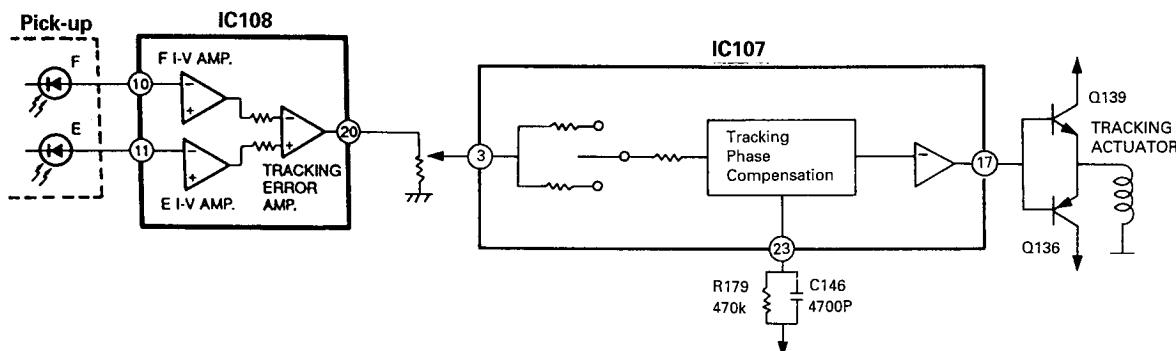


Fig. 6

### 3. Regenerative Circuit

#### 3-1. RF circuit

The currents from photodiodes (A, B, C and d) are fed to IC108 through pins 7 and 8 and converted to voltage by RF I-V amplifiers (1) and (2) respectively there, added by the RF summing amplifier and output from pin 2 as a signal. It can be checked at the test point (RF T.P.) provided on its way by means of the eye pattern check.

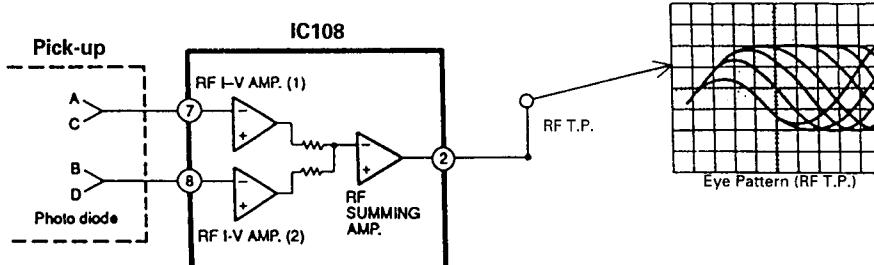


Fig. 7

#### 3-2. EFM demodulation, error correction, serial/parallel conversion

The EFM comparator changes RF signal into a binary value. As the asymmetry generated due to variations in disc manufacturing cannot be eliminated by the AC coupling along, the reference voltage of EFM comparator is controlled utilizing the fact that the generation probability of 1, 0 is 50% each in the binary EFM signals.

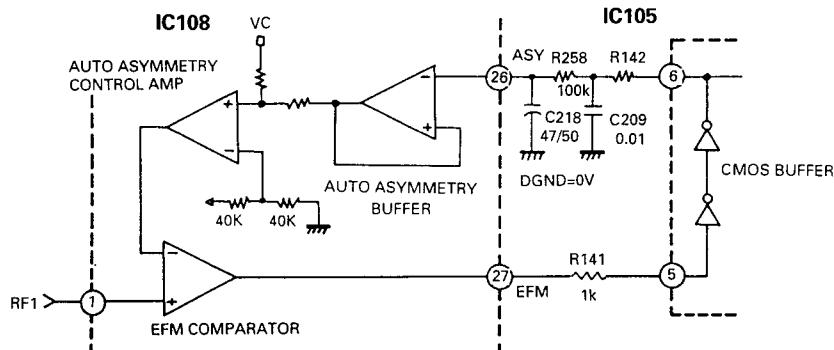


Fig. 8

As this comparator is a current SW type, each of the H and L levels does not equal the power supply voltage, requiring feedback through a CMOS buffer.

R8, R9, C8, and C9 form a LPF to obtain  $(V_{cc} + DGND)/2V$ , When  $f_c$  (cut-off frequency) is made more than 500 Hz the EFM low-frequency component leaks badly, degenerating the block error rate.

#### 3-3. Digital Signal Processor

The EFM signals from pin 27 of IC108 are sent to pin 5 of IC105, then demodulated from 14 bits to 8 bits by EFM readjustment. At the same time any error, if found, is corrected (CIRC) and the signals are sent to the D/A converter interface. After that they are output as 16-bit digital signals from pins 76, 78 and 80 of IC105 and fed to the D/F of IC103. In this case, EFM demodulation, error correction and serial/Parallel conversion are performed by the internal circuitry of IC105.

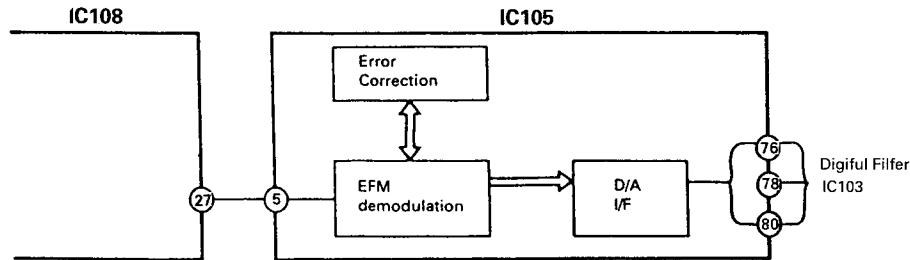


Fig. 9

#### 4. Audio Circuit

##### 4.1 Configuration of SAA7350

Fig. 10 Shows the configuration of the SAA7350.

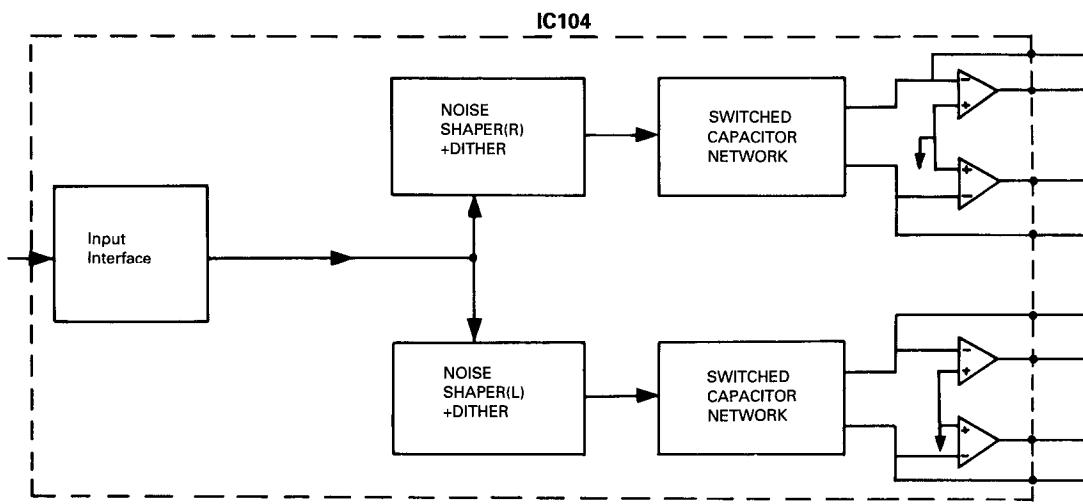


Fig. 10

The digital-to-analogue conversion in the SAA7350 is performed using the Philips Bitstream Conversion technique. The input from the digital filter is oversampled and converted to a 1-bit pulse density modulated (PDM) signal. A switched capacitor technique is used for the Bitstream Conversion to convert the PDM signal to an analogue signal. A fixed charge is either added or subtracted from the virtual earth node of an integrator. As this output is a continuous time output, a highly symmetrical operational amplifier is used to give a low distortion figure.

##### 4.2 Audio Circuit

Fig. 11 Shows a block diagram of the audio circuit.

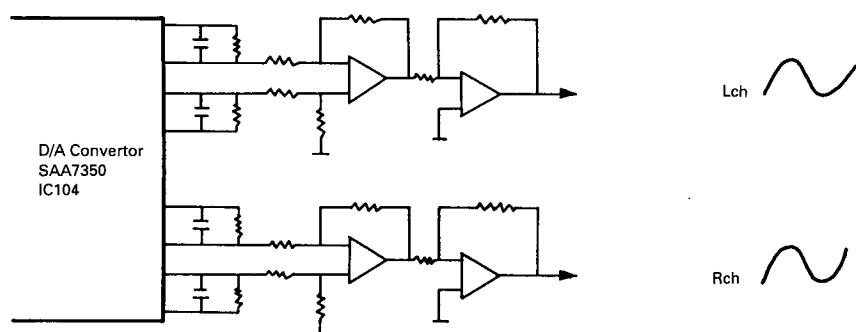


Fig. 11

The output from pin38 (INTC+) and pin34 (INTL-) of the IC104 DIA Converter SAA7350 is input to the differential input amplifier, which is symmetrical in the up and down directions, of the discrete circuit configured of the following stage, which includes Q132, Q133, Q134, Q135, Q145, Q146, Q147 and Q148. The output undergoes differential synthesis in this circuit, and after synchronous-phase noise has been eliminated, the resulting signal is output.

To the low-pass filter of the discrete circuit configuration of the following stage as an audio signal.

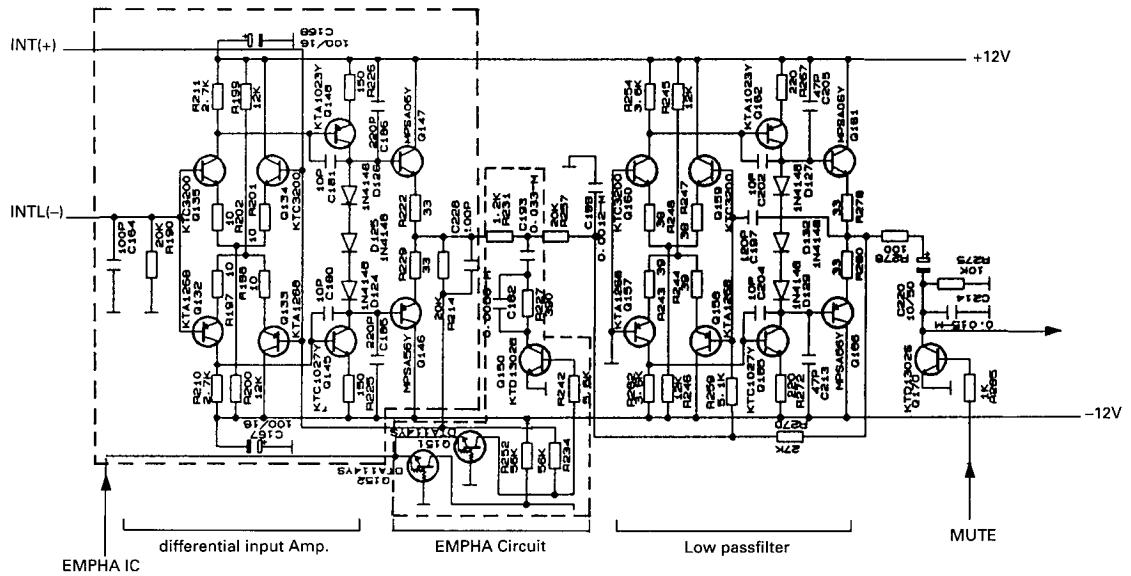


Fig. 12

## ALIGNMENT AND ADJUSTMENT

### TEST POINT LOCATION

#### EQUIPMENT REQUIRED:


- Oscilloscope over 50 MHz
- Frequency counter
- Test disc PHILIPS 5A
- A regular compact disc

#### BEFORE ADJUSTMENTS:

- Make adjustments in numerical order.
- Use the dualtrace oscilloscope with high impedance (greater than 10 Mohm).
- How to enter into the test mode:
  - 1) Open the disc tray.
  - 2) Turn off power.
  - 3) Turn on power while pressing "SW102 (TEST MODE)".
  - 4) "0" or all segments appear in the display indicates the test mode
  - 5) If you press PLAY, again the test mode change to TEST MODE 1.
  - 6) If you press PLAY, again the test mode change to TEST MODE 2.
  - 7) If you press PLAY, again the test mode change to TEST MODE 3.
- Initial semi-fixed VR setting.


Set the semi-fixed resistance tentatively as follows:

VR101 (PLL)	Center position
VR103 (F. Gain)	Turn fully counterclockwise
VR105 (T. Gain)	Turn fully clockwise
VR102 (F. Bias)	Center position
VR104 (EF Balance)	Center position

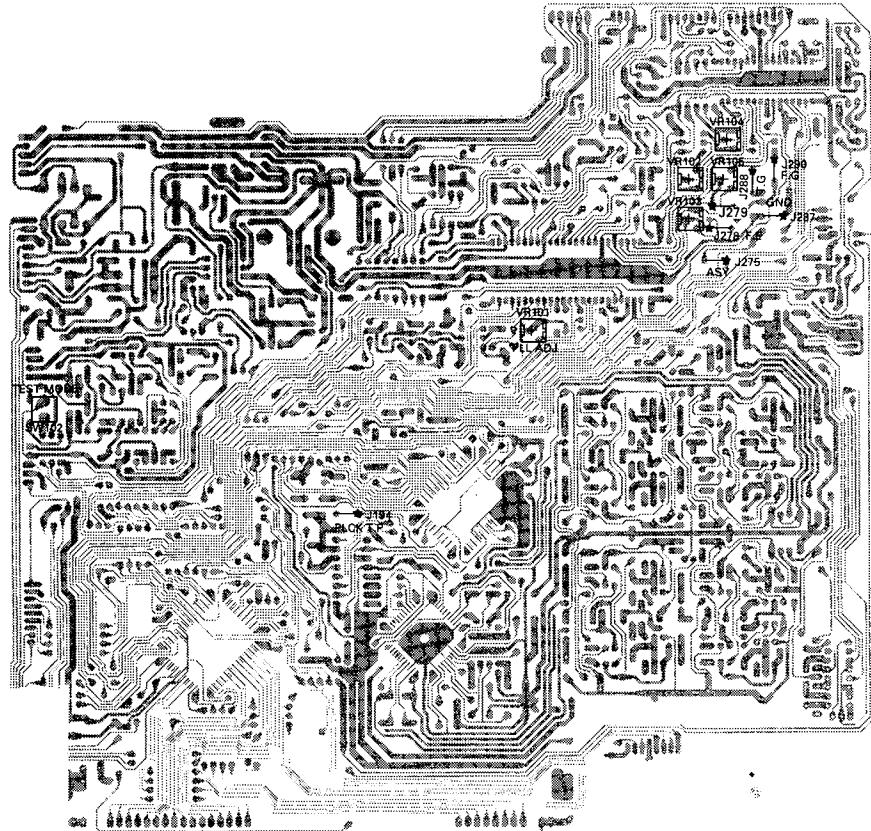

Test point Locations

**CIRCUIT ADJUSTMENT**

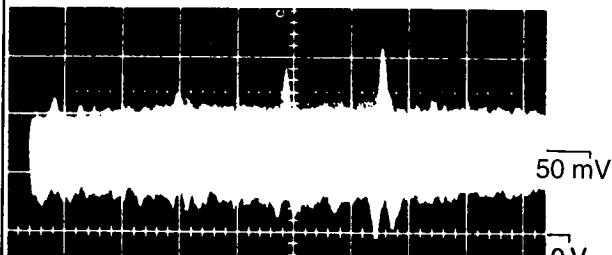Step	Connect	Setting	Adjust	Remarks
<b>Focus Gain Adjustment</b>				
1	See figure 13	In TEST MODE 2	VR103	 <p>Focus error signal of about 50 mV.</p>
2	To increase the focus gain, turn VR103 clockwise.			
<b>Tracking Gain Adjustment</b>				
1	See figure 14	In TEST MODE 2	VR105	 <p>Obtain a tracking drive signal of about 200 mV.</p>
2	Place PHILIPS test disc 5A in the tray and play section with the 800μm black dot. Confirm there is no skipping.			
3	If there is any skipping, adjust VR105 to reduce the tracking servo gain until no skipping occurs. To reduce the gain, turn VR105 clockwise.			

VOLT/DIV : 50 mV

TIME/DIV : 5 ms

Oscilloscope

Set

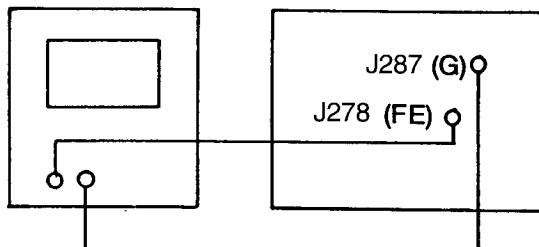


Figure 13. Focus Gain Adjustment

VOLT/DIV : 100 mV

TIME/DIV : 1 ms

Oscilloscope

Set

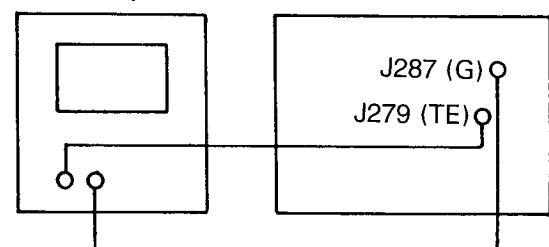
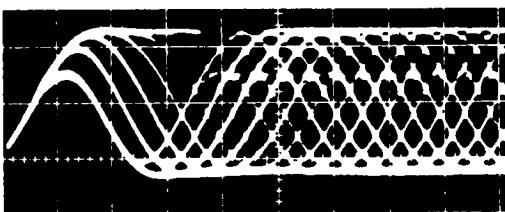


Figure 14. Tracking Gain Adjustment

Step	Connect	Setting	Adjust	Remarks
<b>Focus Offset Adjustment</b>				
1	See figure 15	In TEST MODE 2	VR102	<p>Obtain the maximum amplitude and the biggest diamond windows of the eye pattern.</p>  <p>The above an example of a good eye pattern.</p>
2	To make the diamond windows in the portion large and clear, turn VR102 clockwise.			

Coupling : AC  
 VOLT/DIV : 500 mV  
 TIME/DIV : 0.2  $\mu$ S





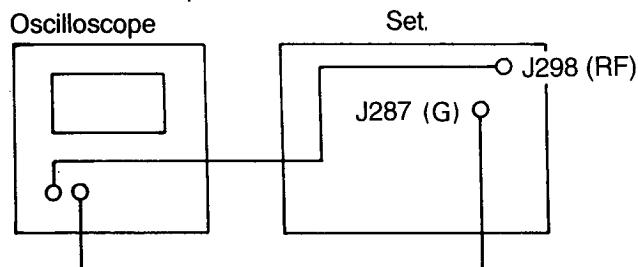


Figure 15. Focus Offset Adjustment


Step	Connect	Setting	Adjust	Remarks
<b>PLL (Phase Locked Loop) Adjustment.</b>				
1	See figure 16	In TEST MODE 0	VR101	Counter reading should be 4.3218 MHz
2				Disconnect between J287 (GND) and J275 (ASY).
3				Check the counter reading to be $4.3218 \pm 0.0025$ MHz in TEST MODE 0.
<b>EF Balance Adjustment</b>				
1	See figure 17	In TEST MODE 1		
2		Turn a disc gently with your finger and adjust VR104 to obtain a symmetrical waveform.	VR104	
3				Obtain a symmetrical waveform. The above adjustments must be made very carefully, as misadjustment may cause skipping.

**Figure 16. PLL Adjustment****Figure 17. EF Balance Adjustment**


## TROUBLESHOOTING

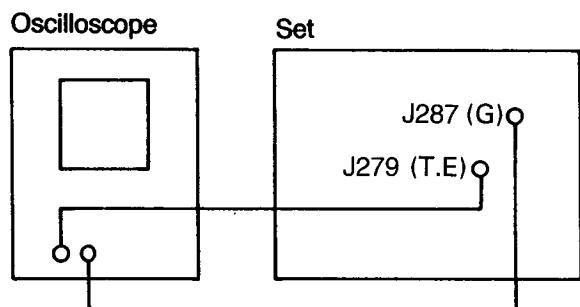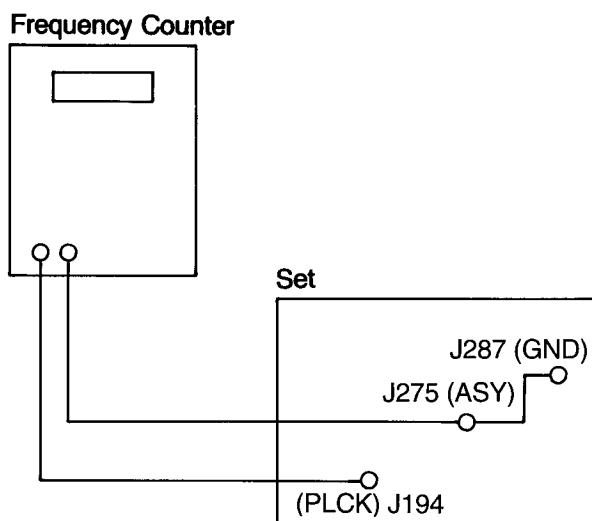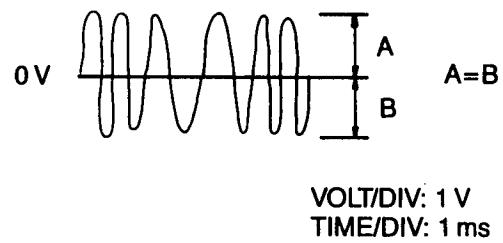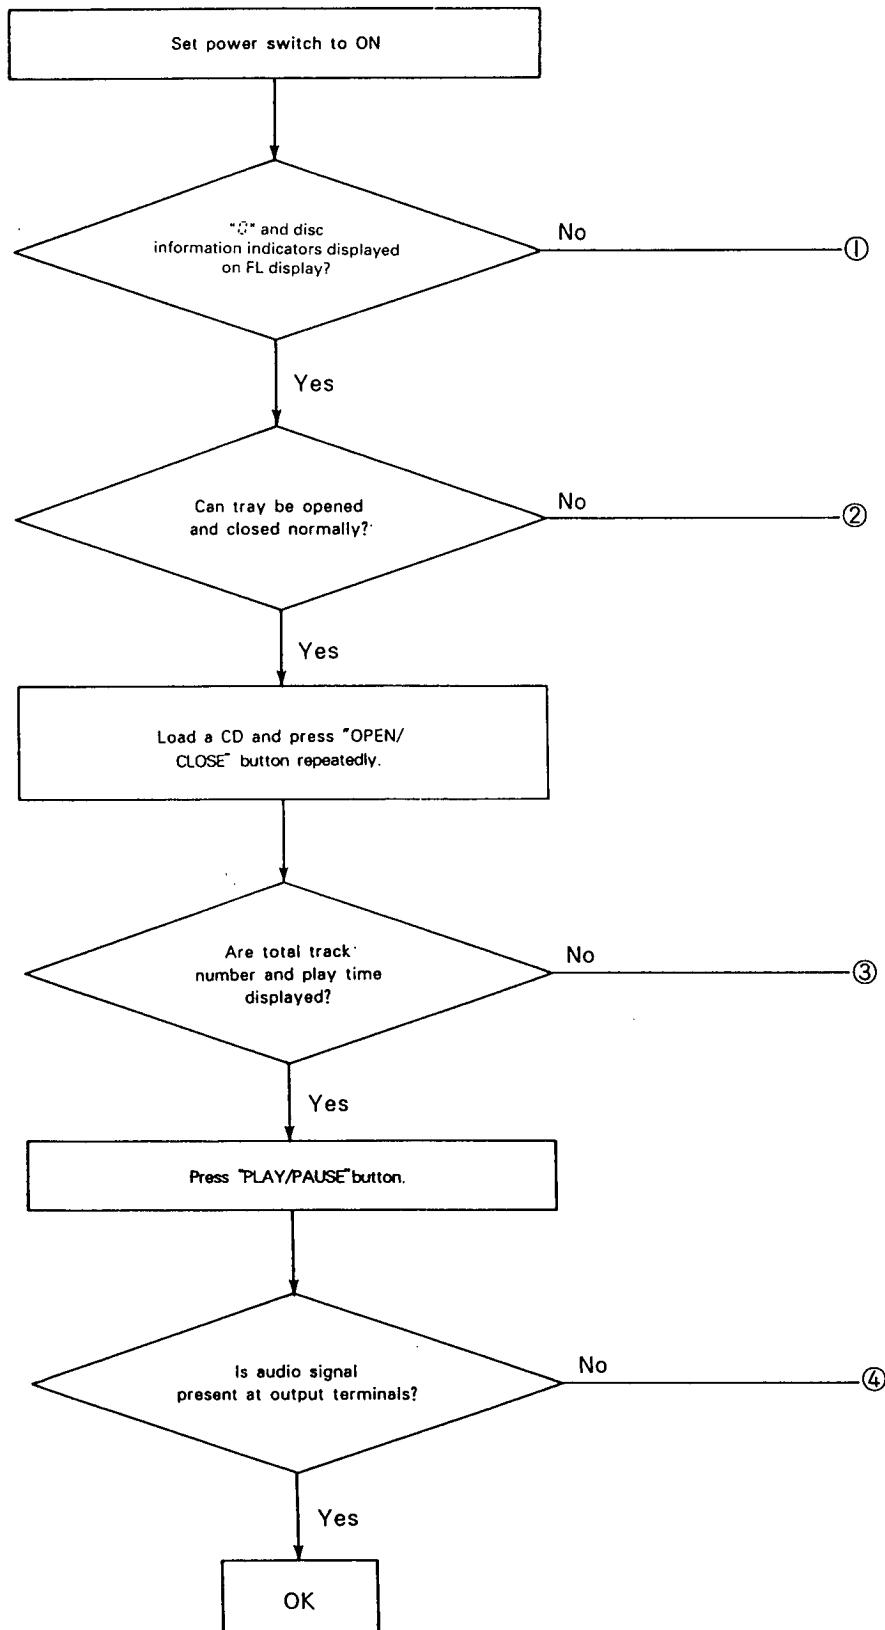


At power on. "G" and some parts are not displayed.

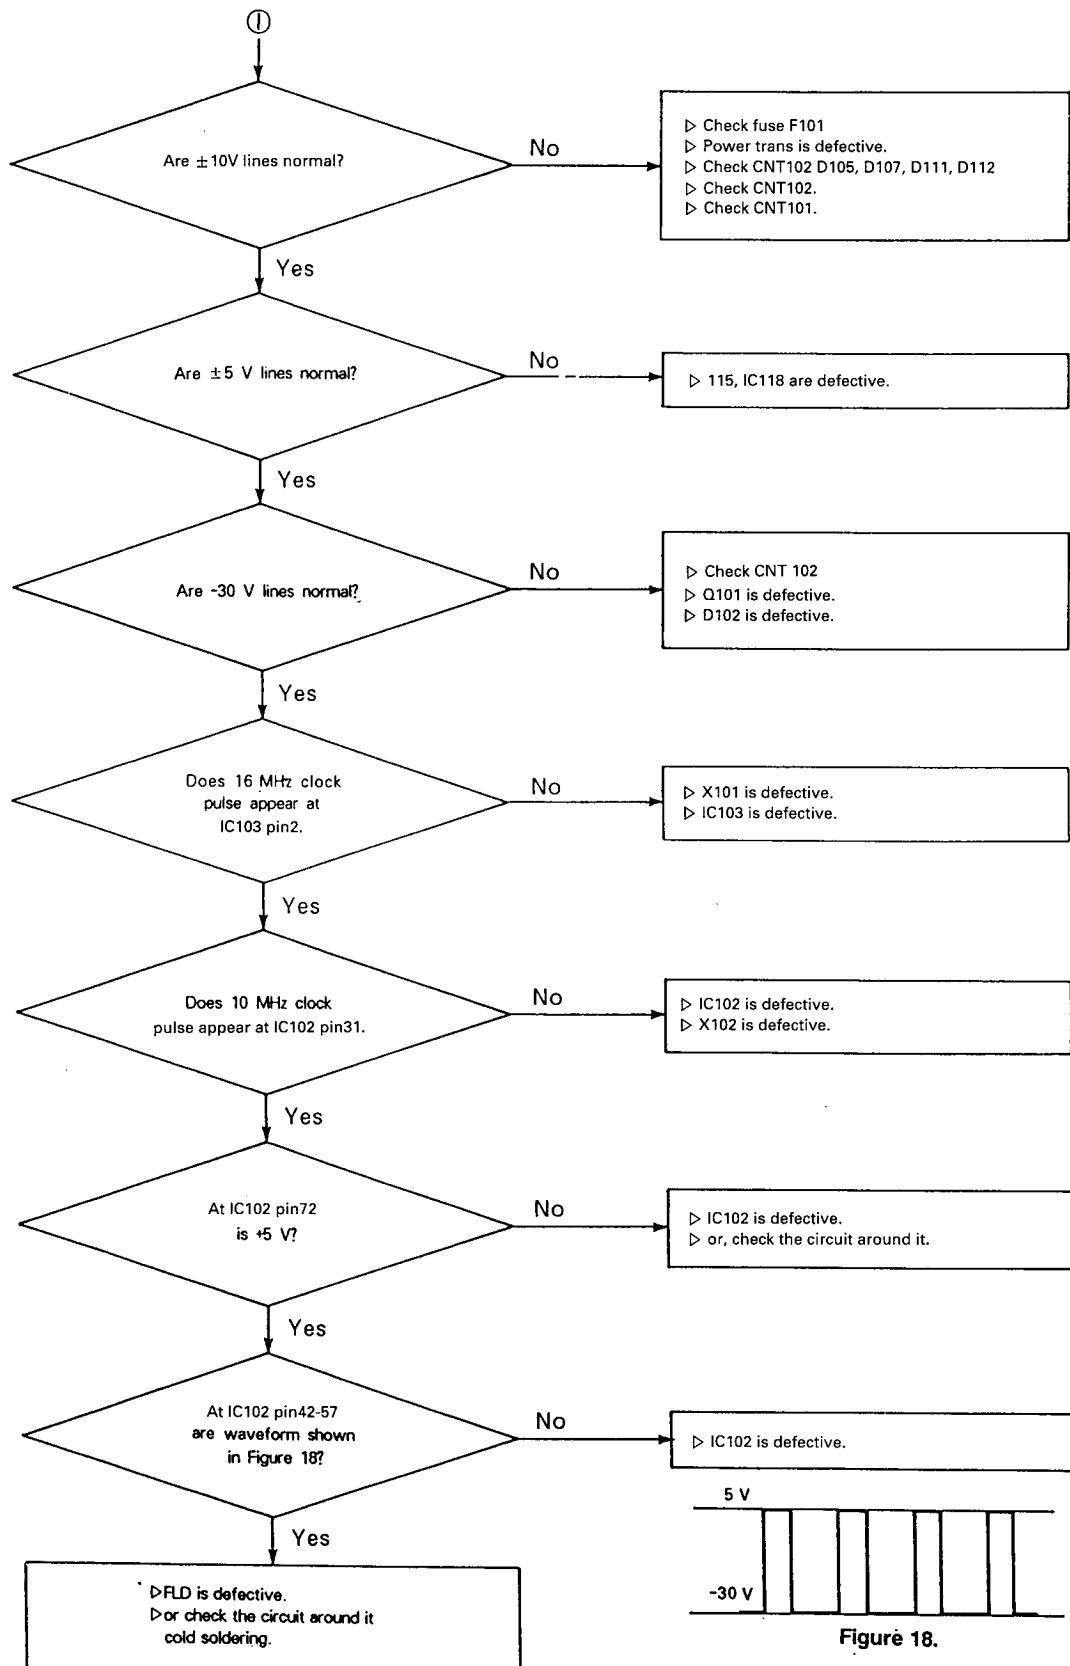


Tray cannot be opened and closed by pressing "OPEN/CLOSE" button.

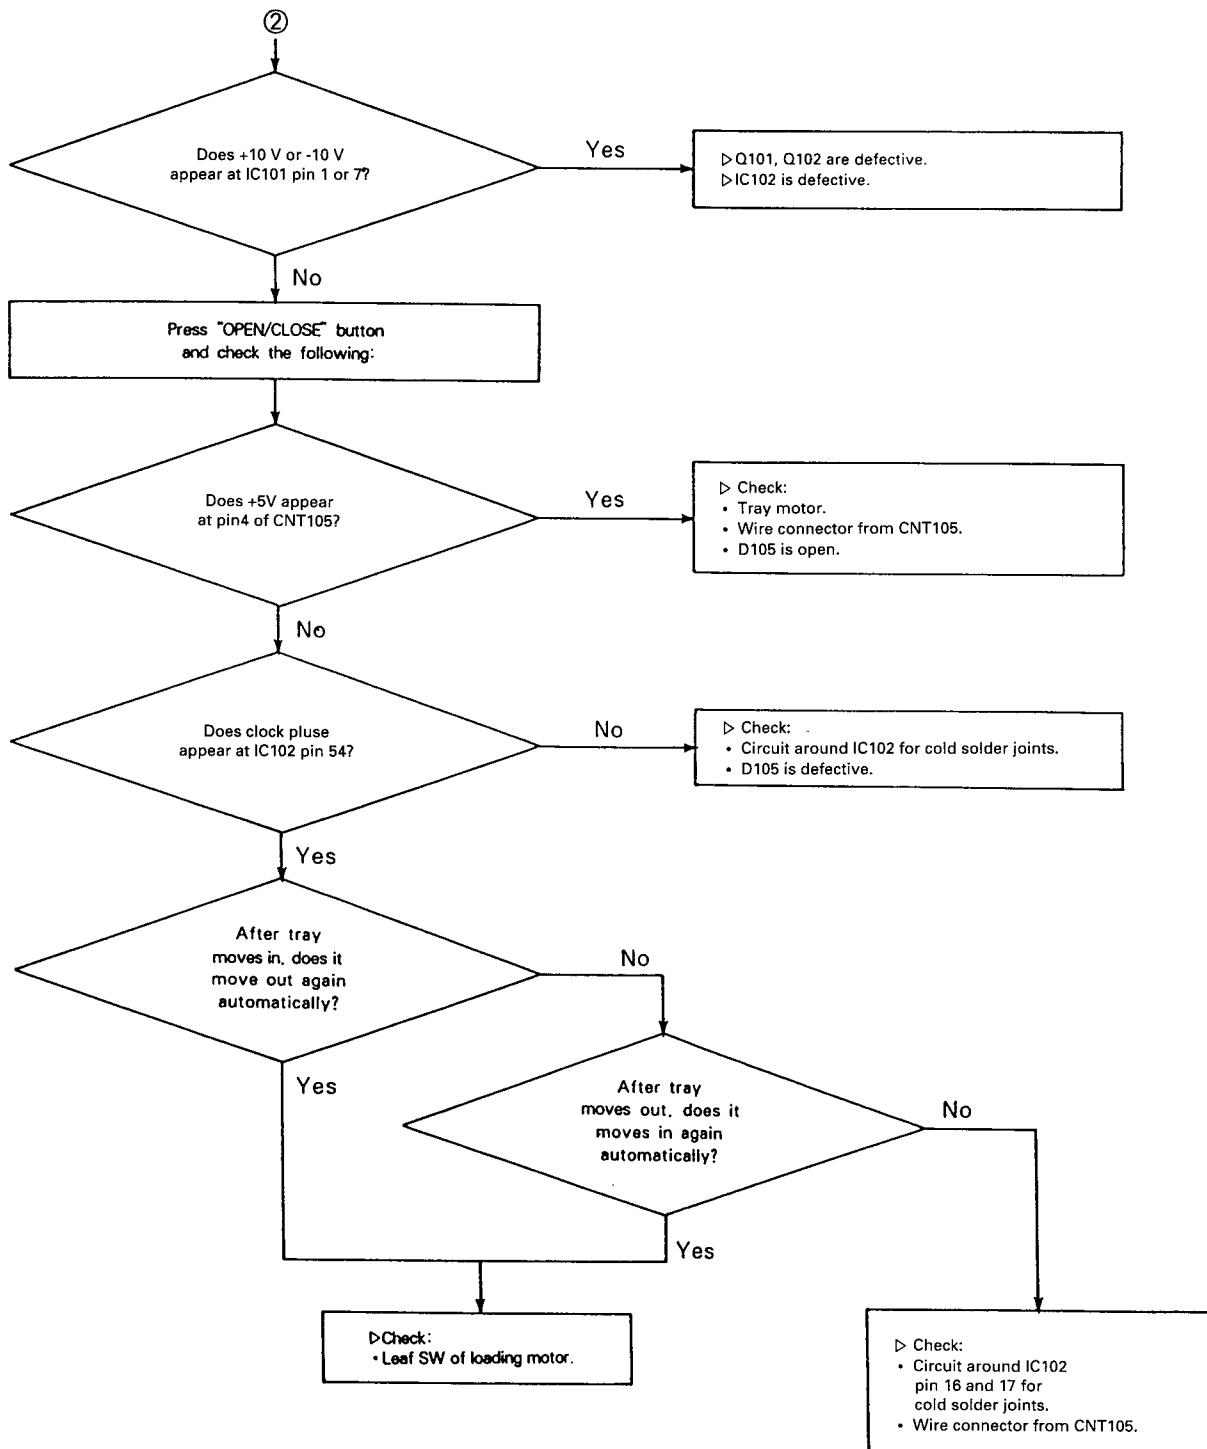

"0" is displayed instead of total track number and play time.

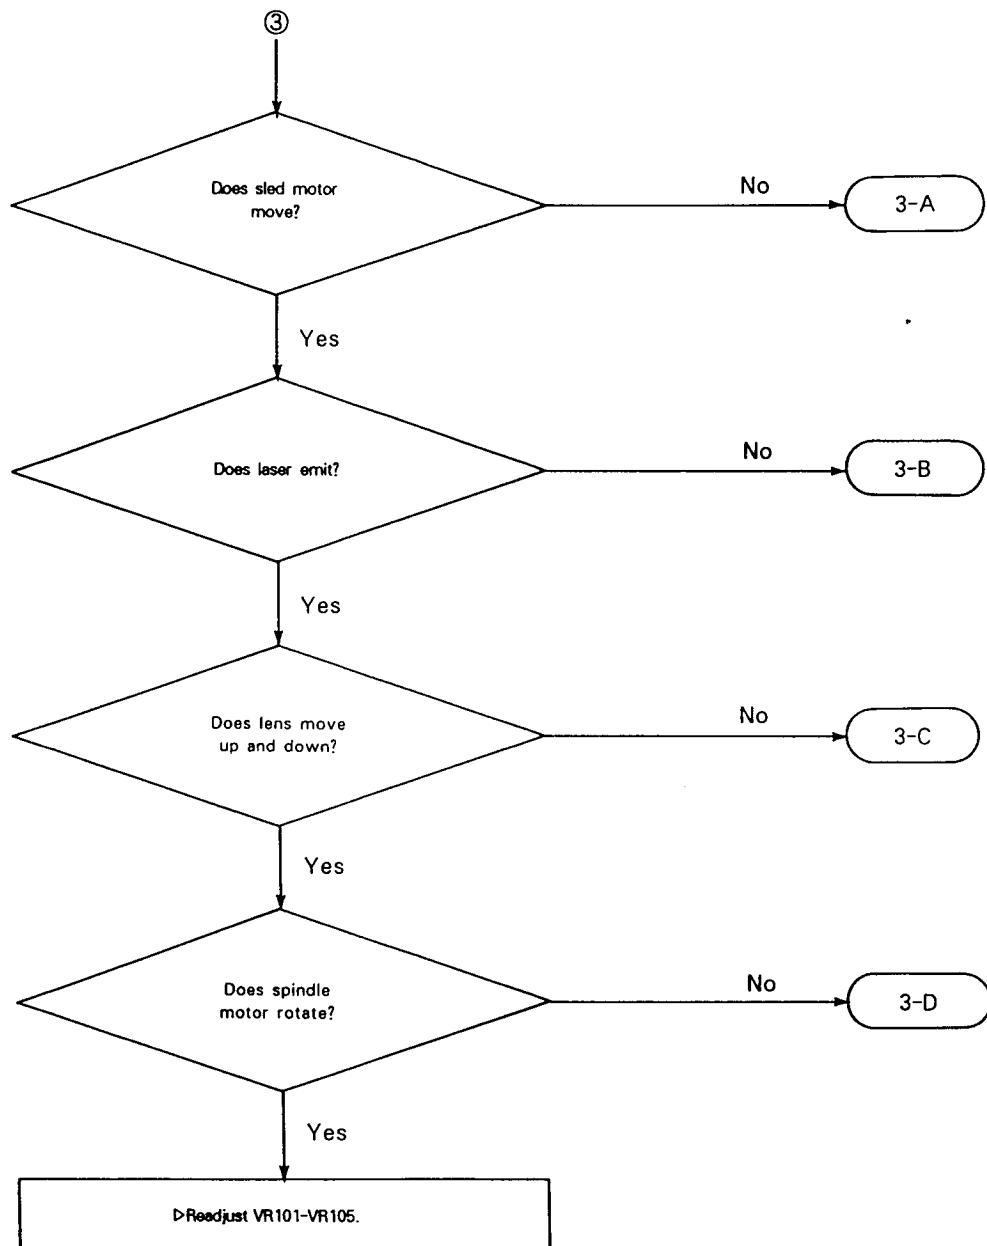

Sled motor does not move.

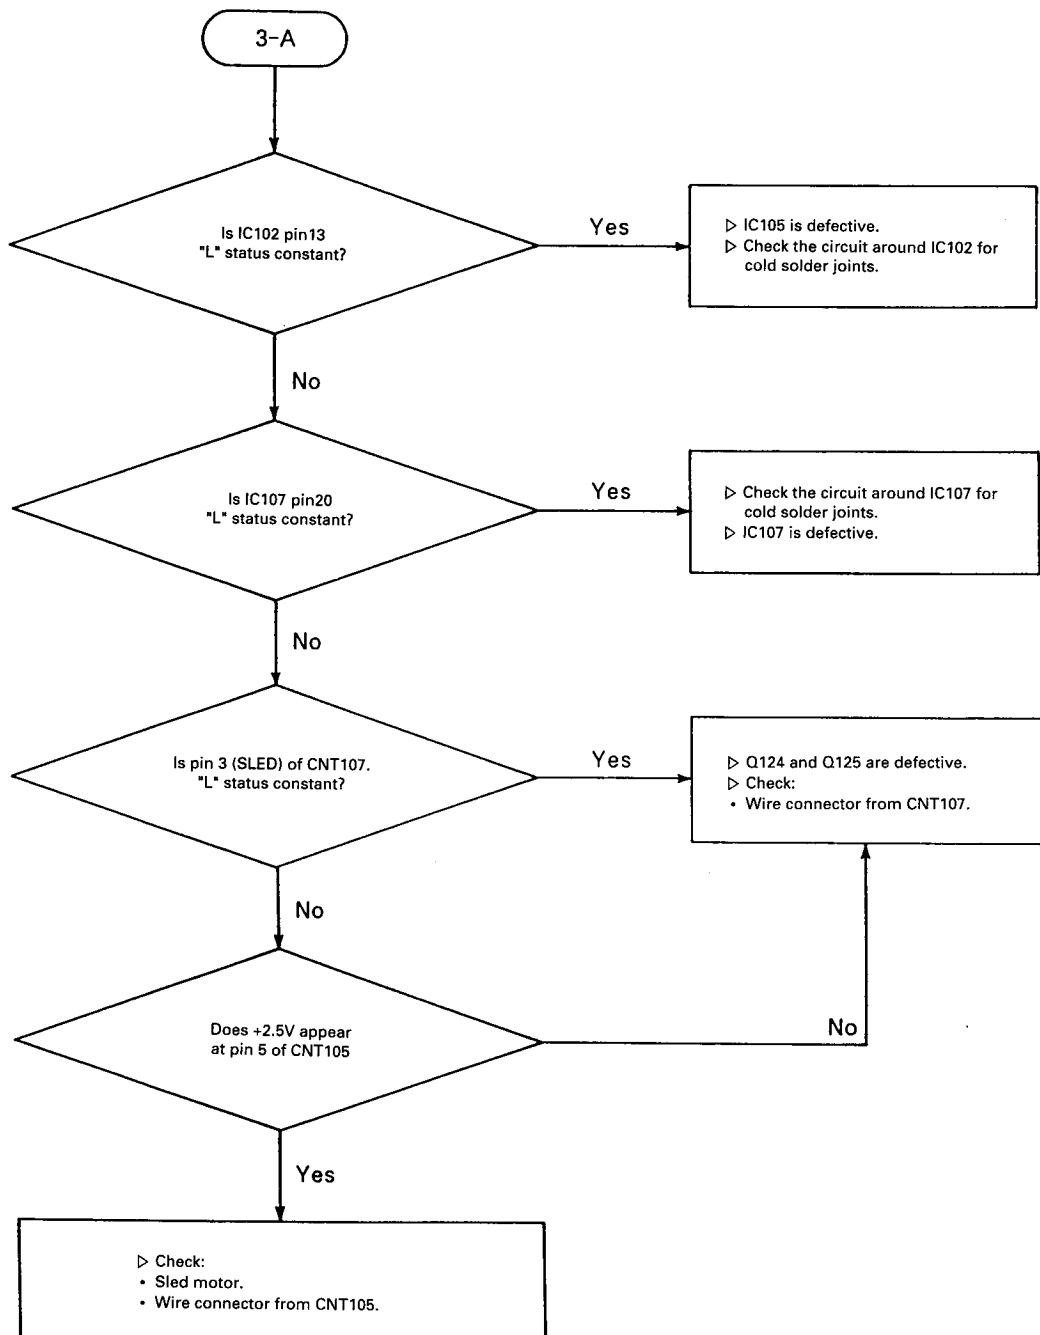

Laser does not emit.



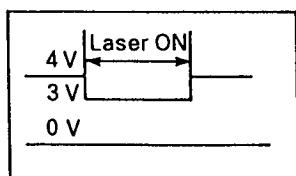


Figure 19

Object lens of pickup unit does not move up and down.

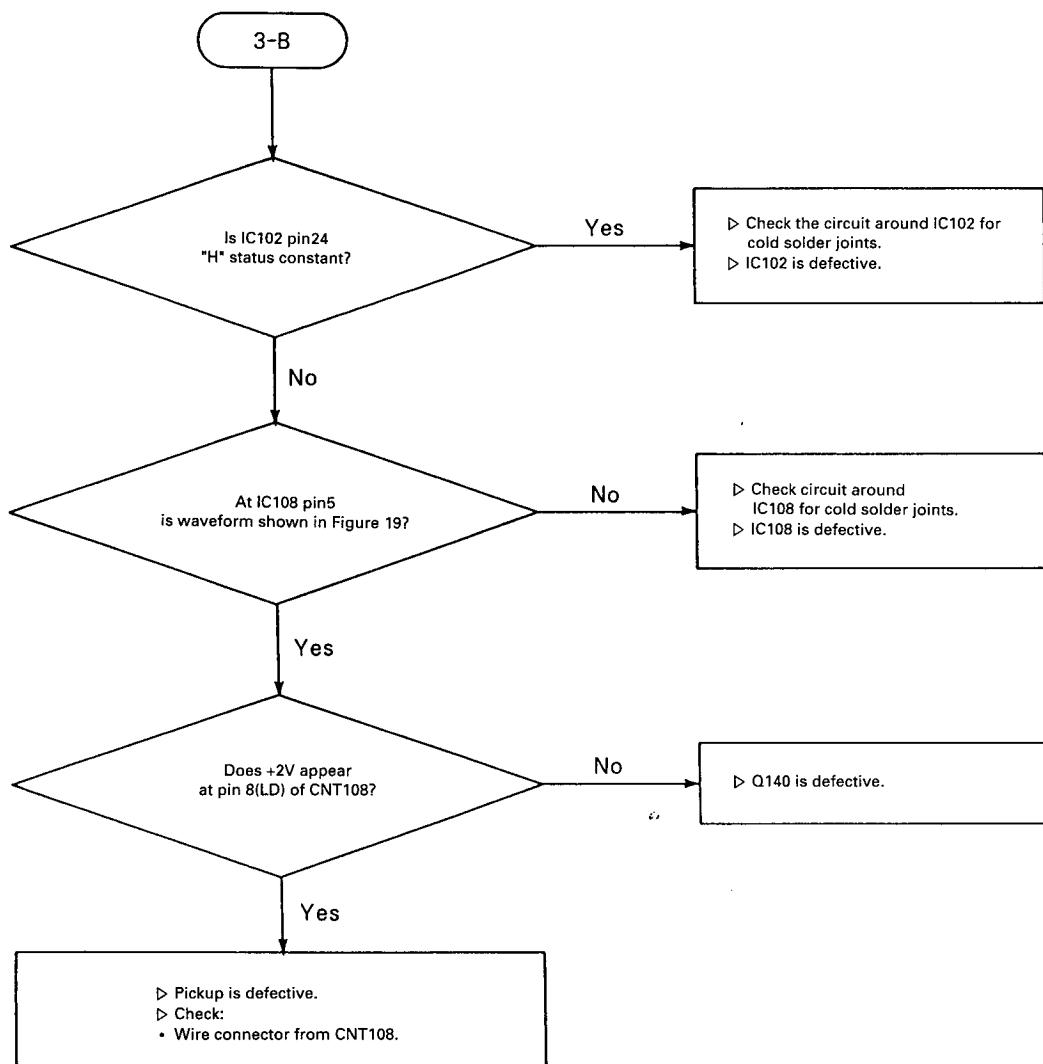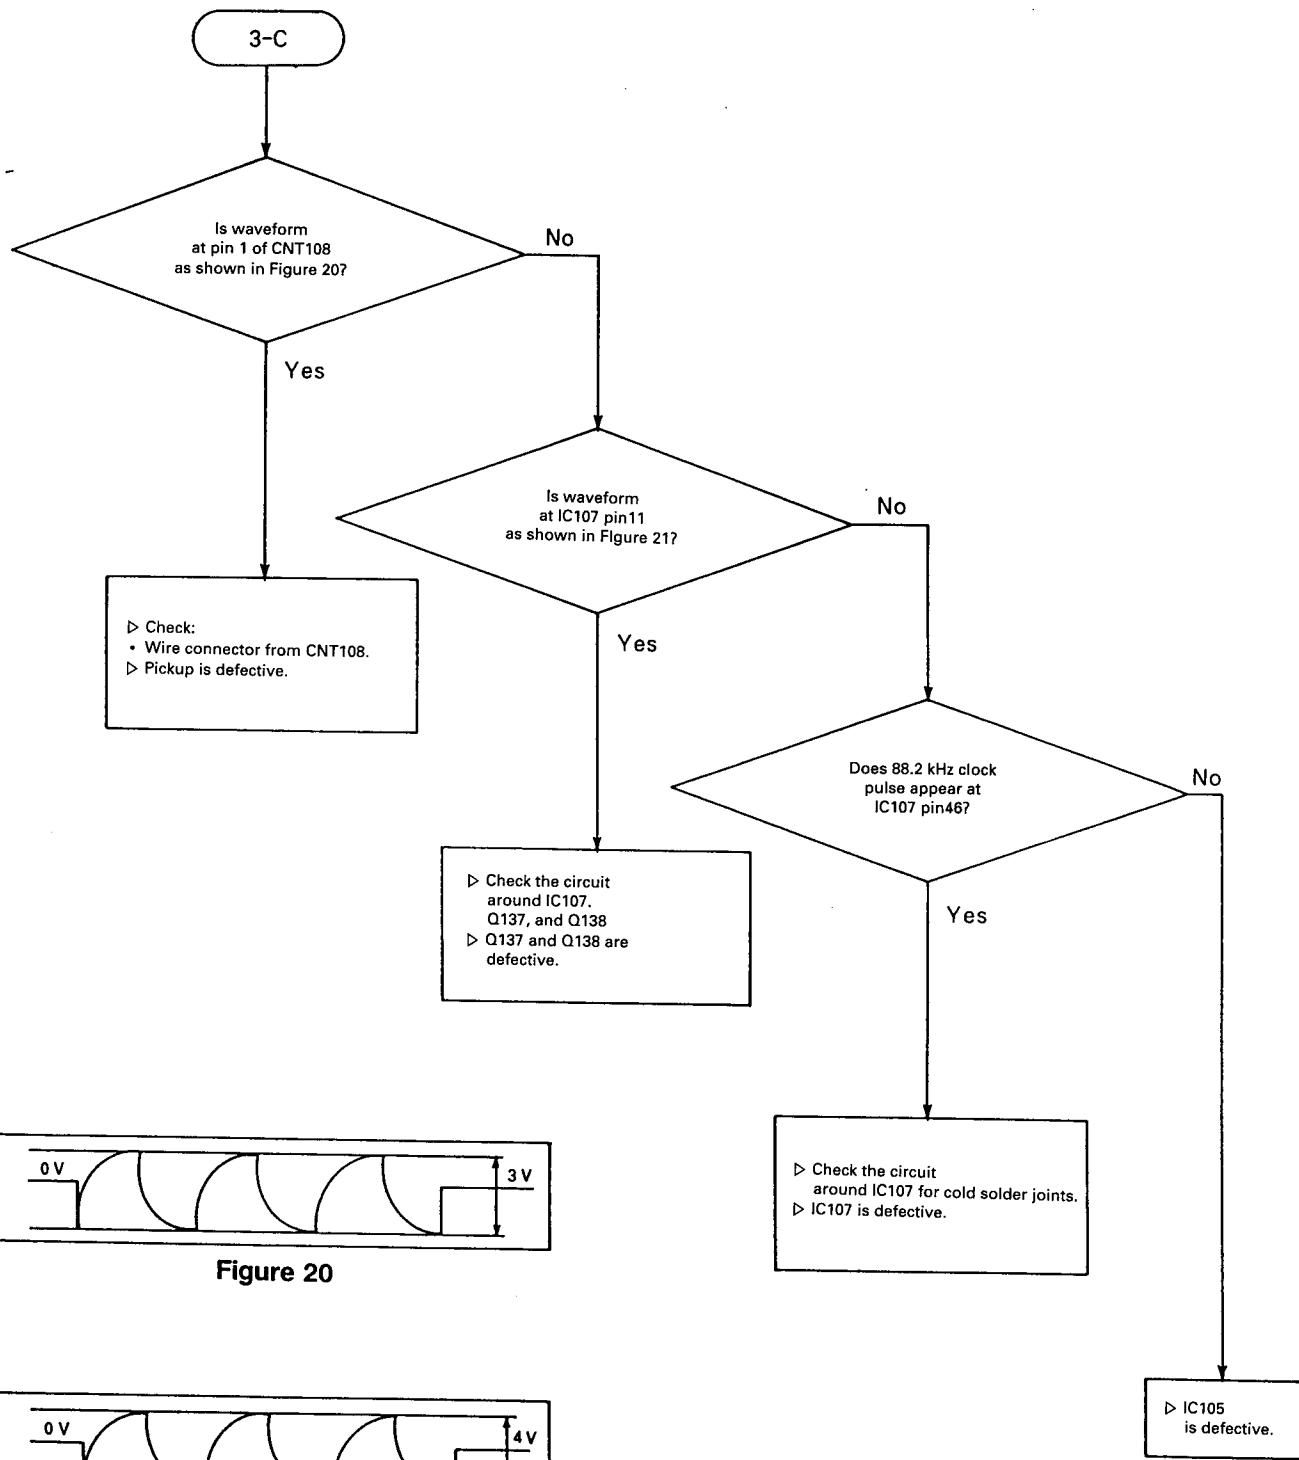

Spindle motor does not rotate.


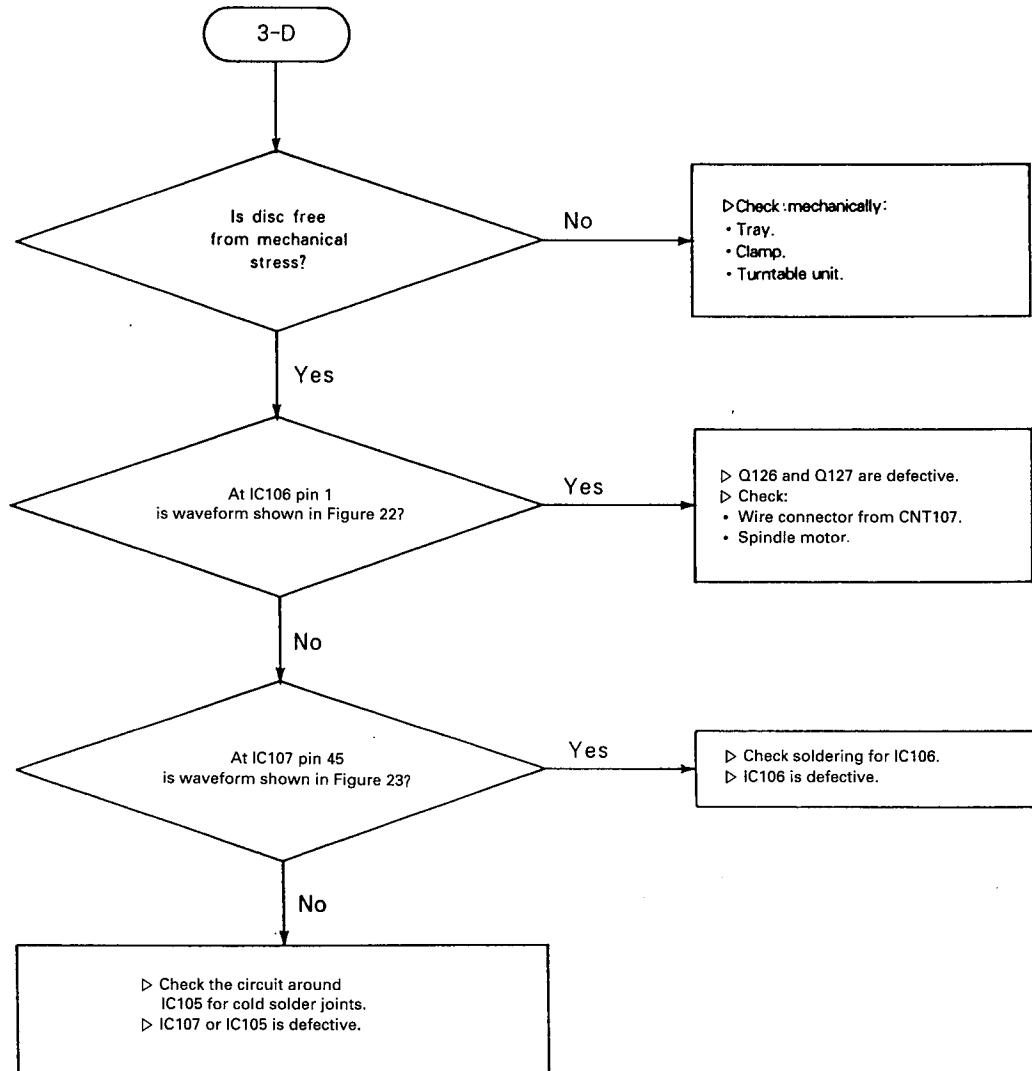


Figure 22











Figure 23

No sound signal.

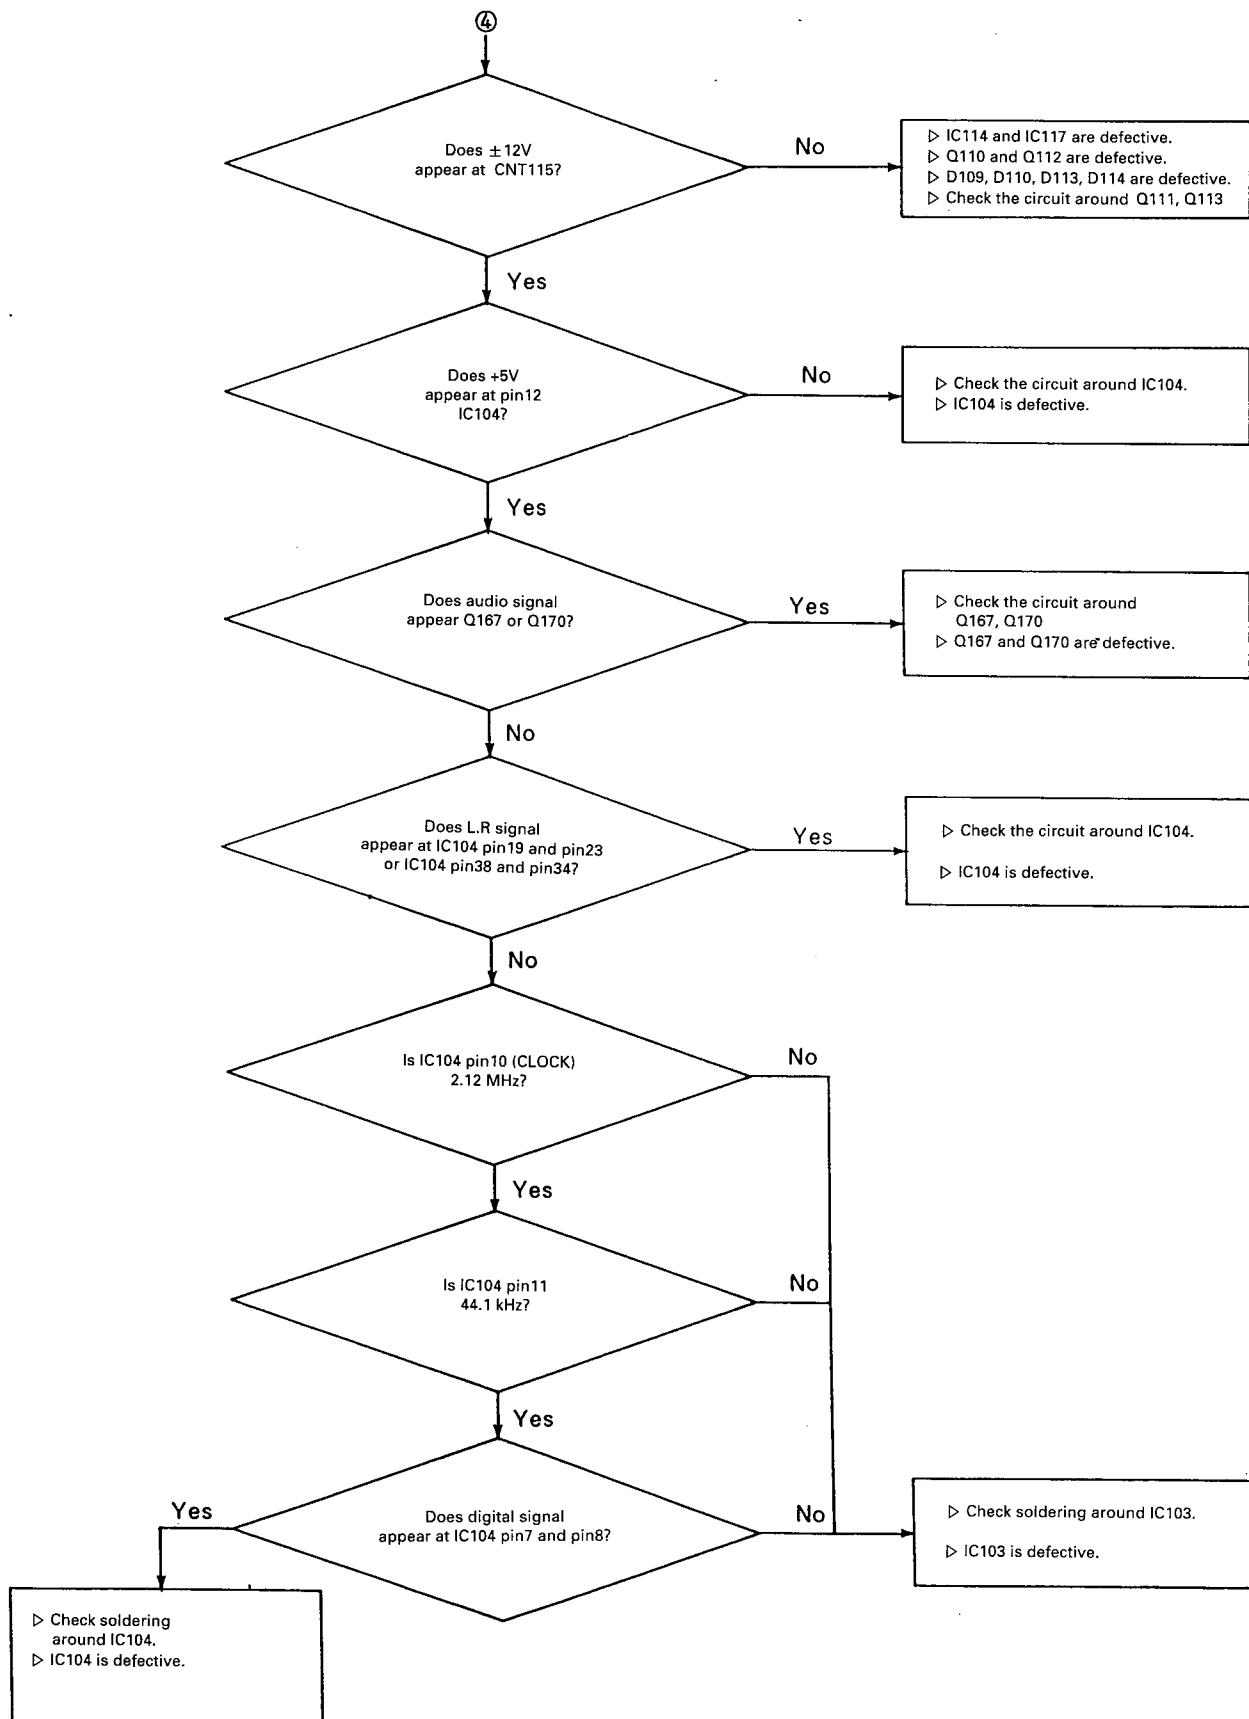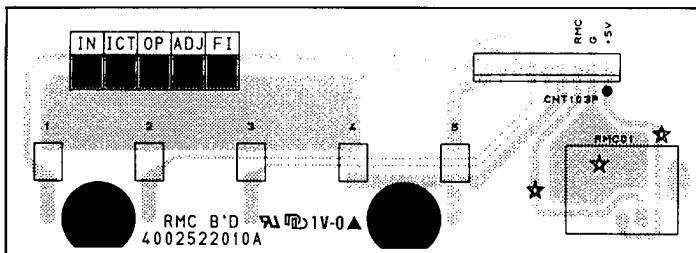



**PRINTED CIRCUIT BOARDS****RMC P.C.BOARD**

Model No. : FL-8450

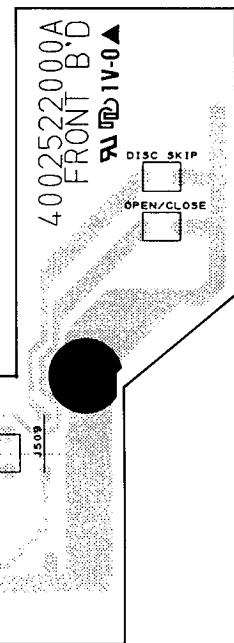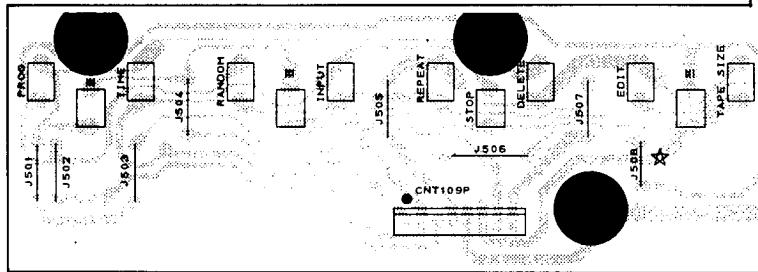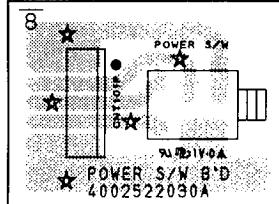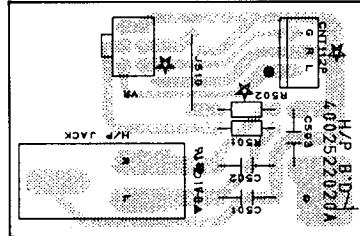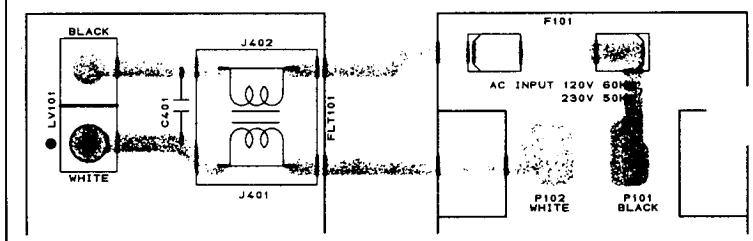
**FRONT P.C BOARD****POWER S/W P.C.BOARD****HEAD PHONE P.C.BOARD****TRANS P.C.BOARD**FL8450 TRANS B'D  
4005512200 4002522010A

## MAIN P.C BOARD

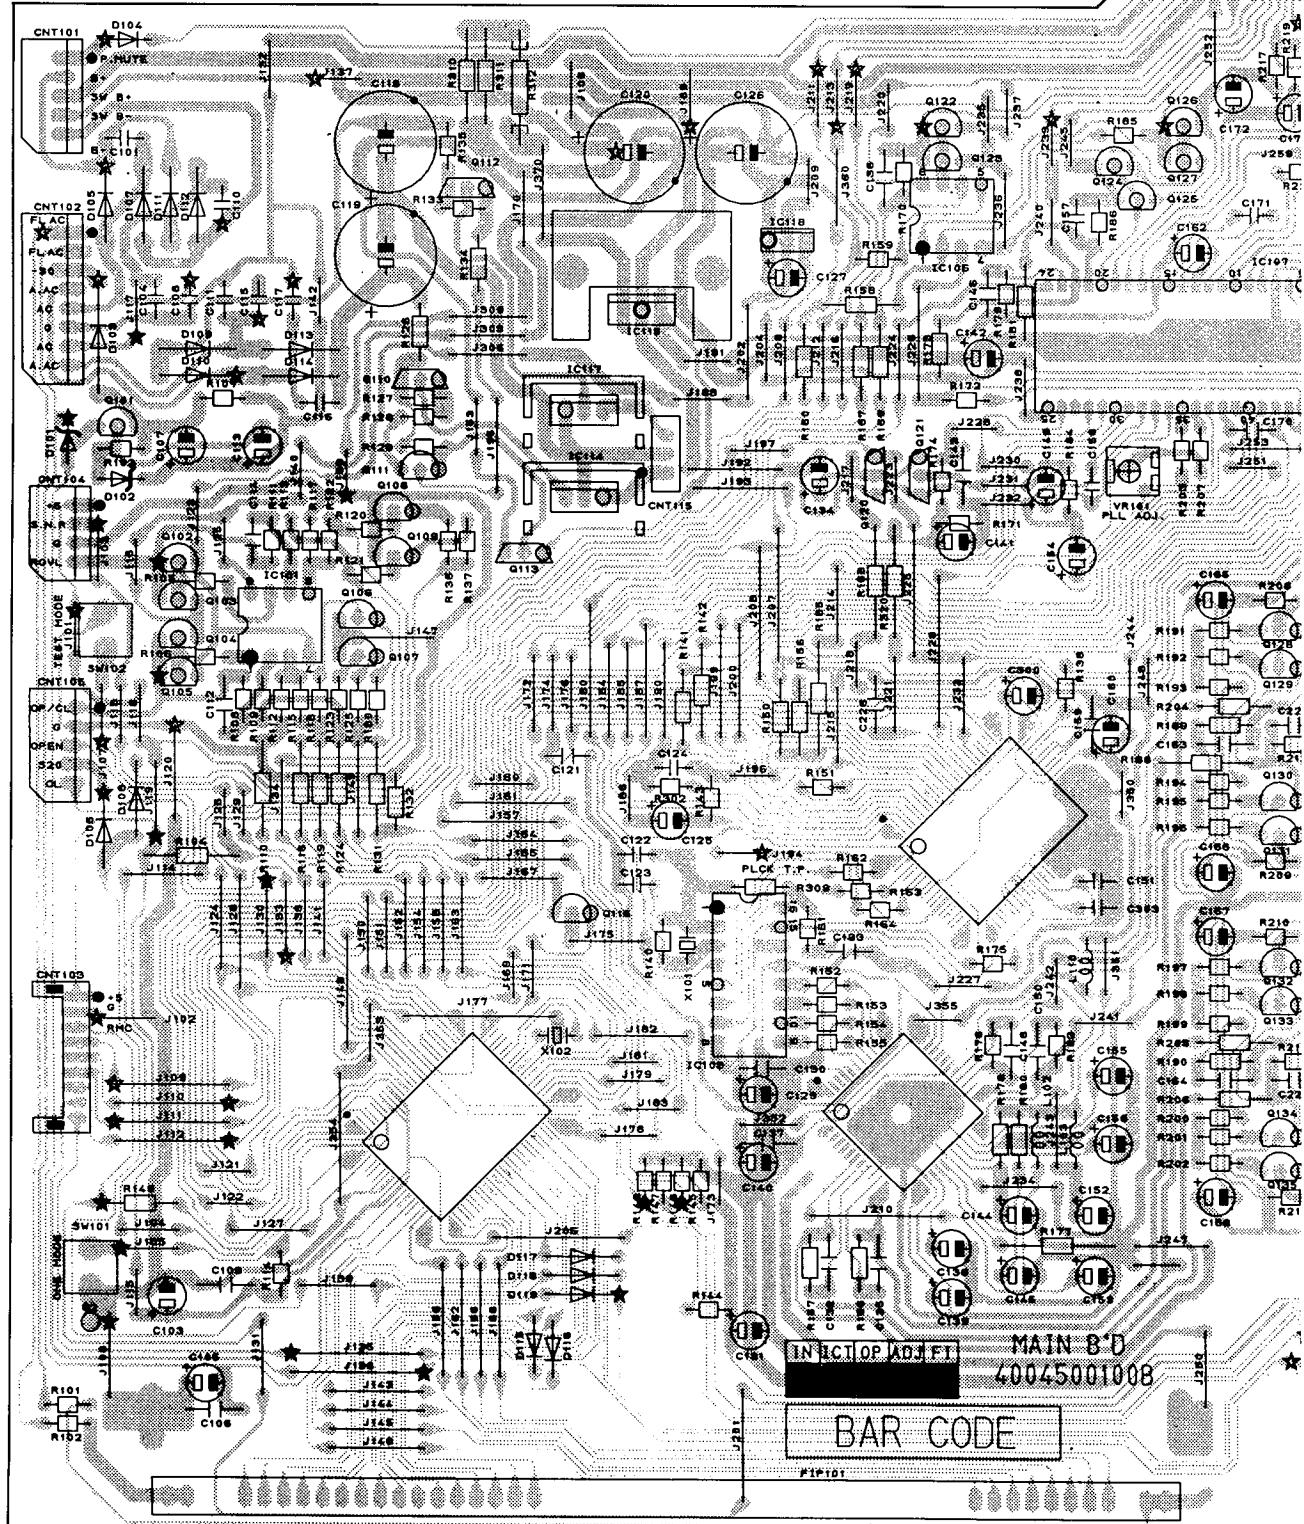


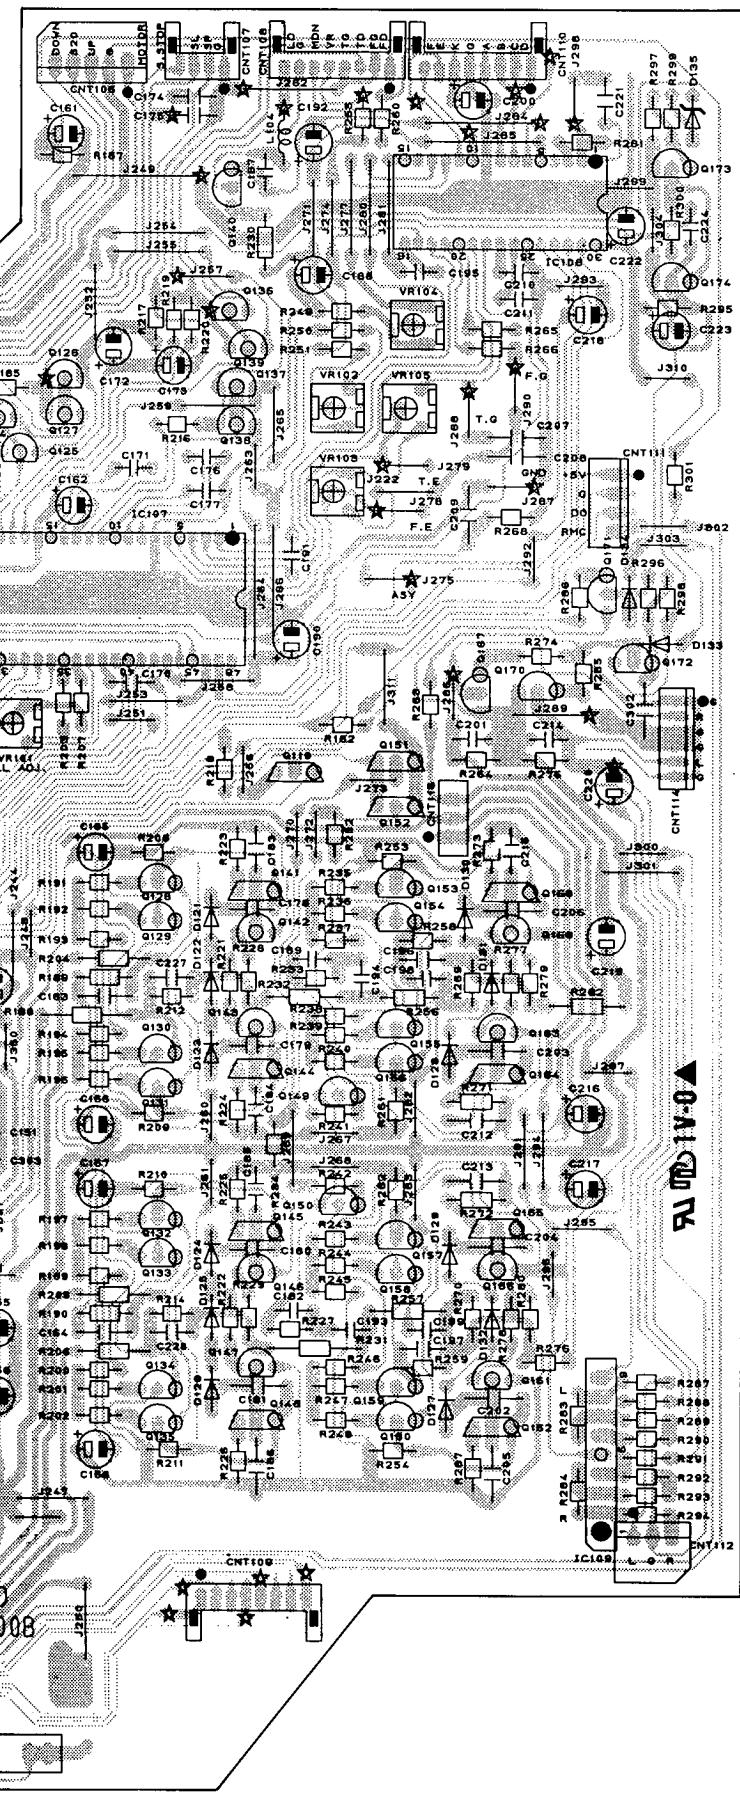


**SENSORA P.C.BOARD**

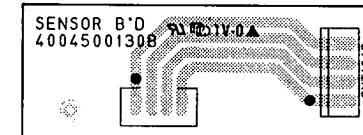

**RCA JACK P.C.BOARD**

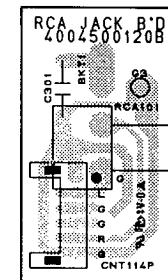



**OPTICAL/DIGI P.C.BOARD**

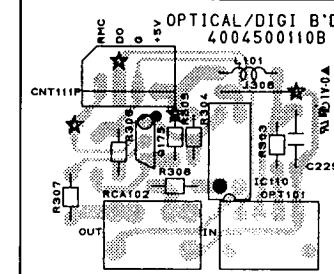

# GENERAL UNIT EXPLODED VIEW


## CABINET AND CHASSIS

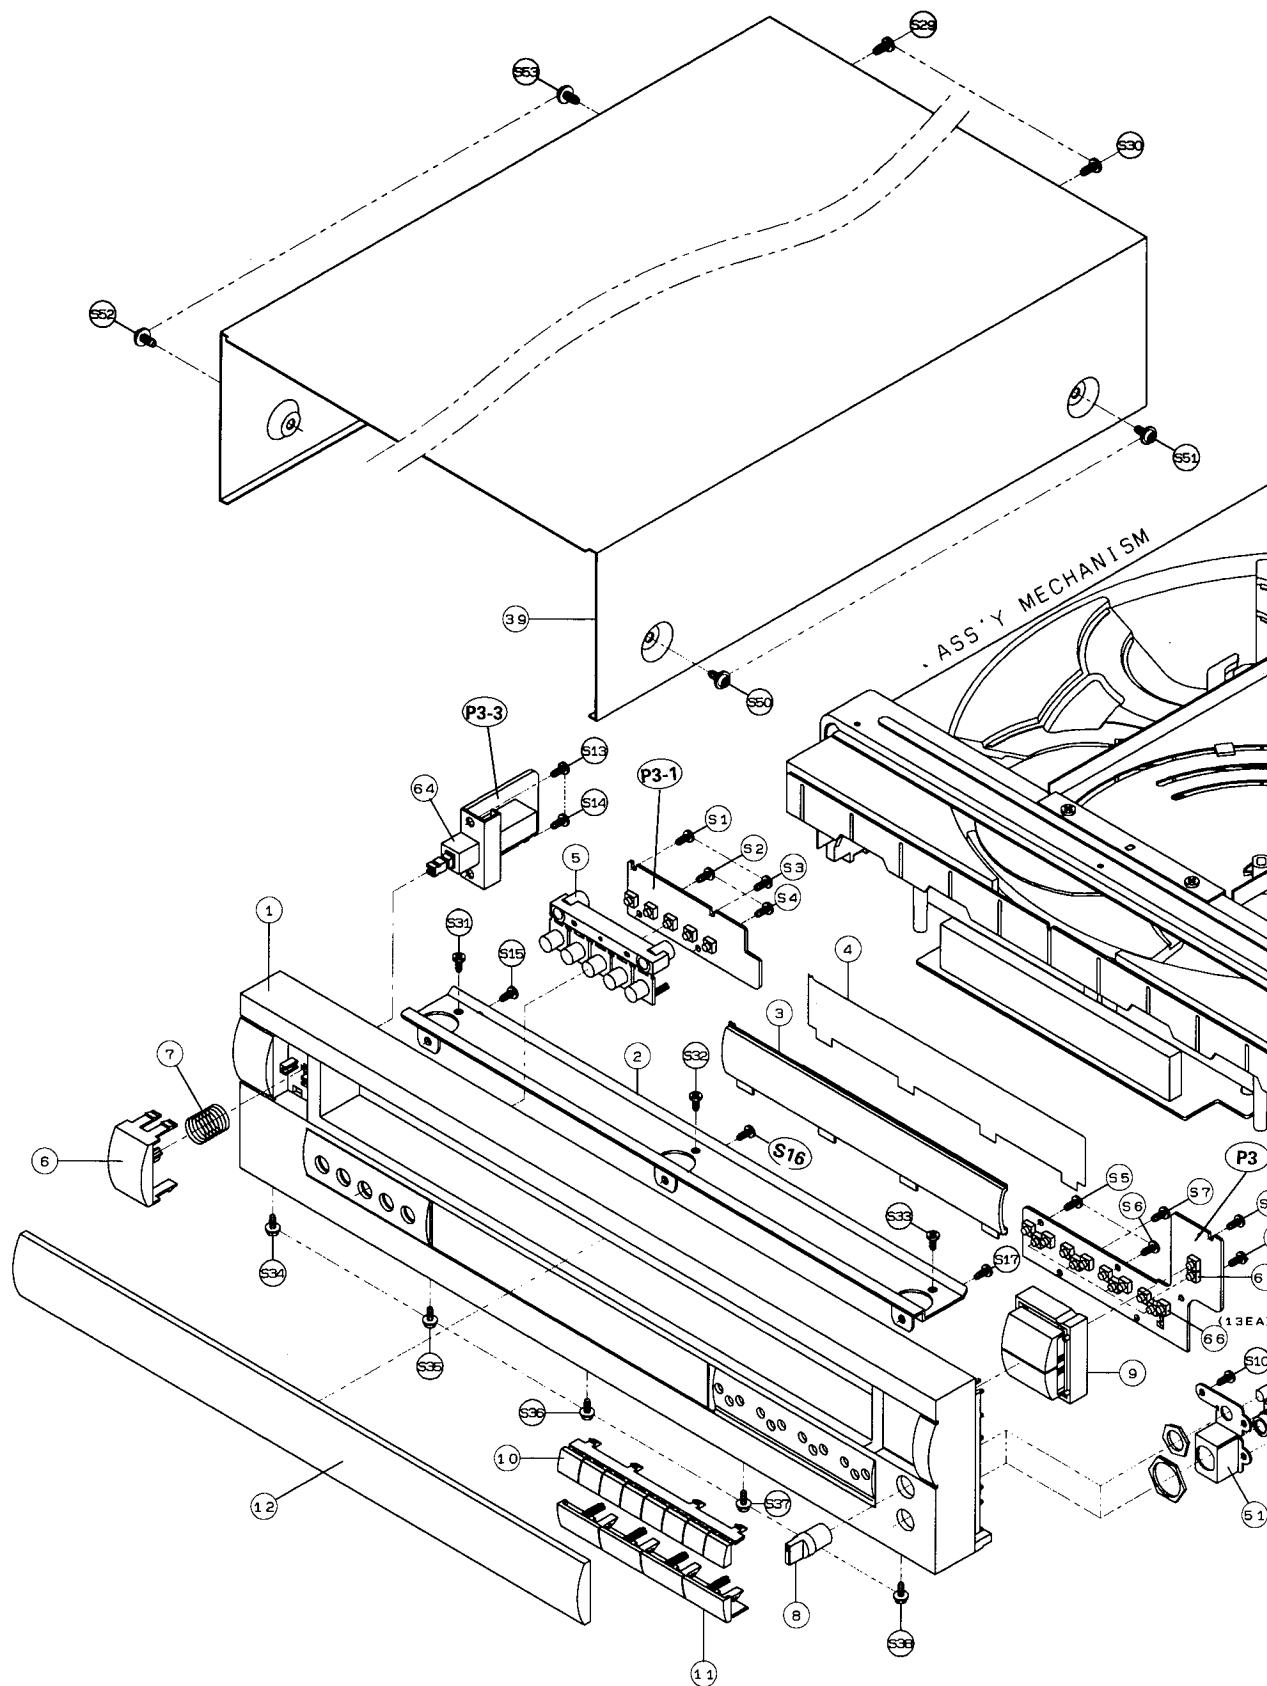


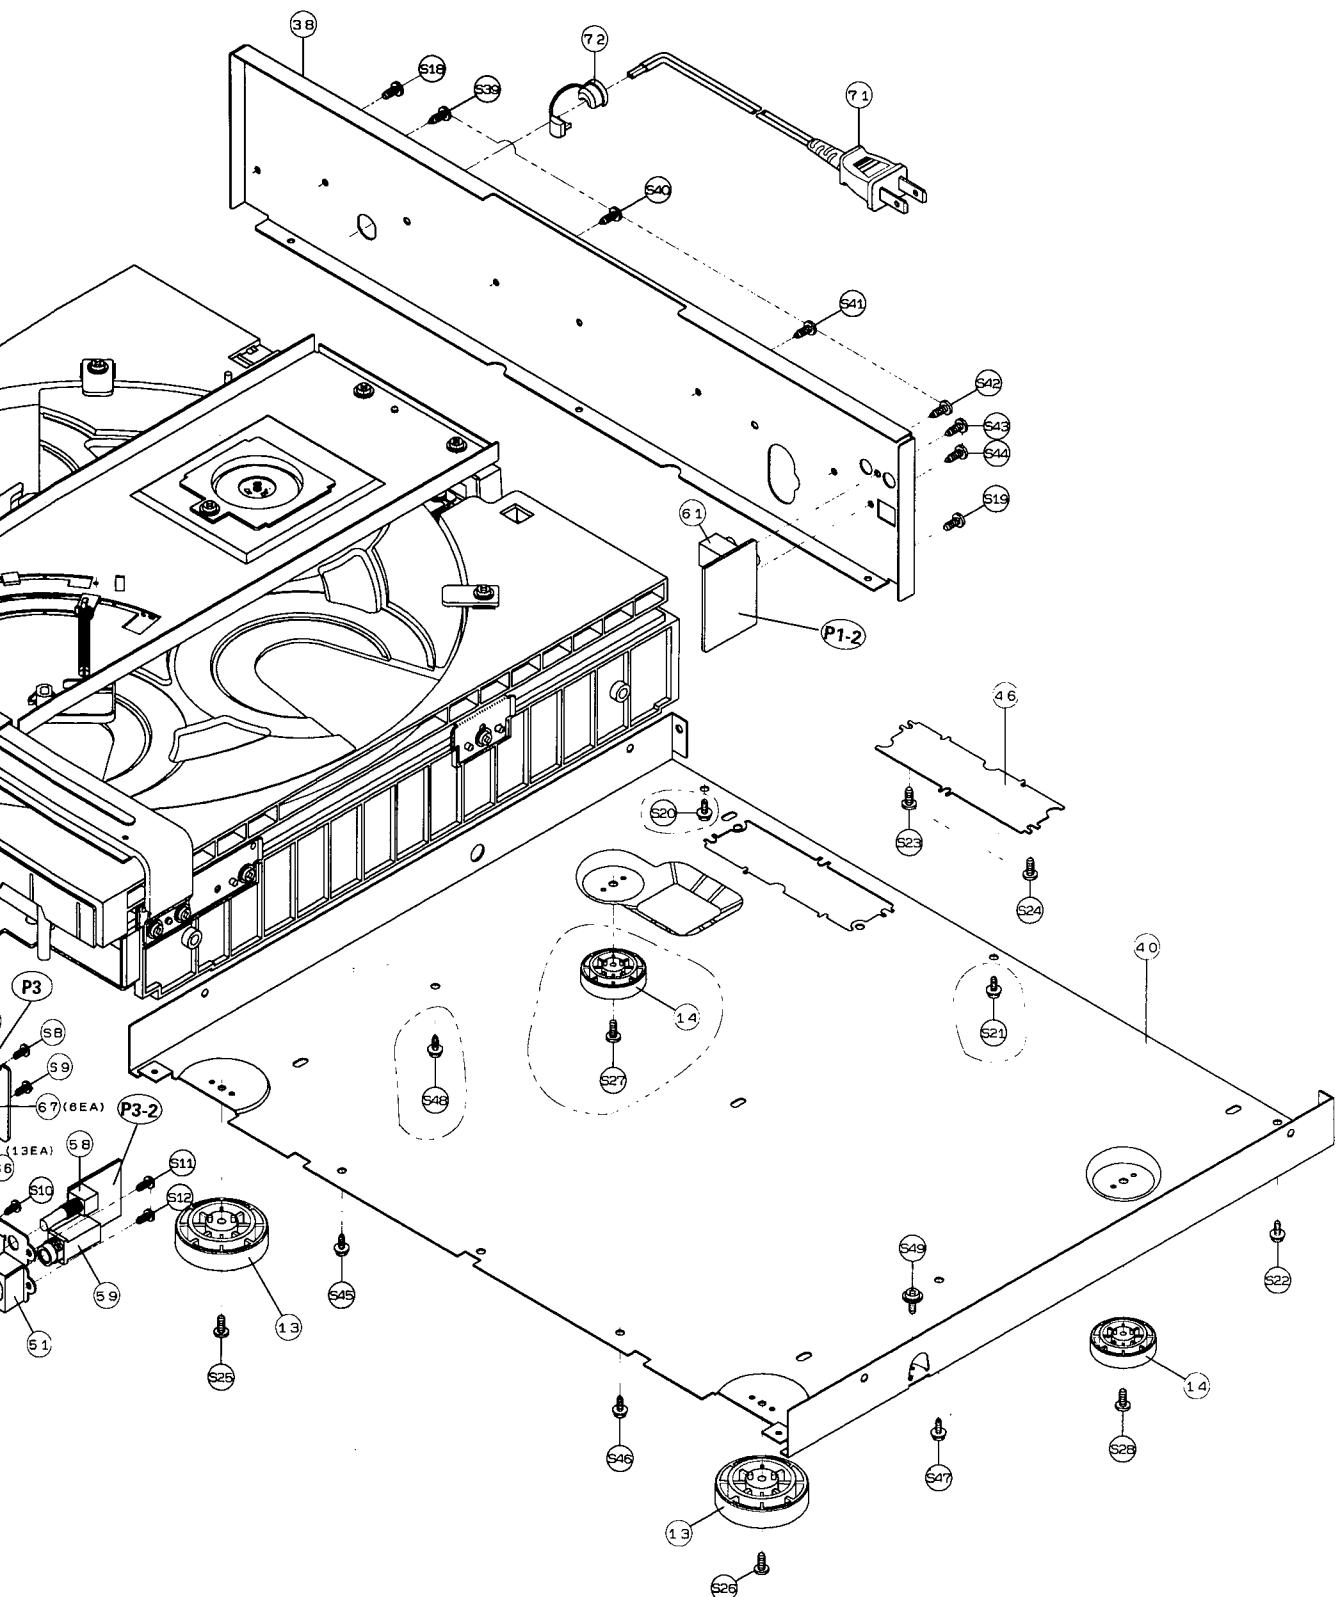



## MECHANISM

EXPLODED VIEW OF ASS'Y MECHANISM

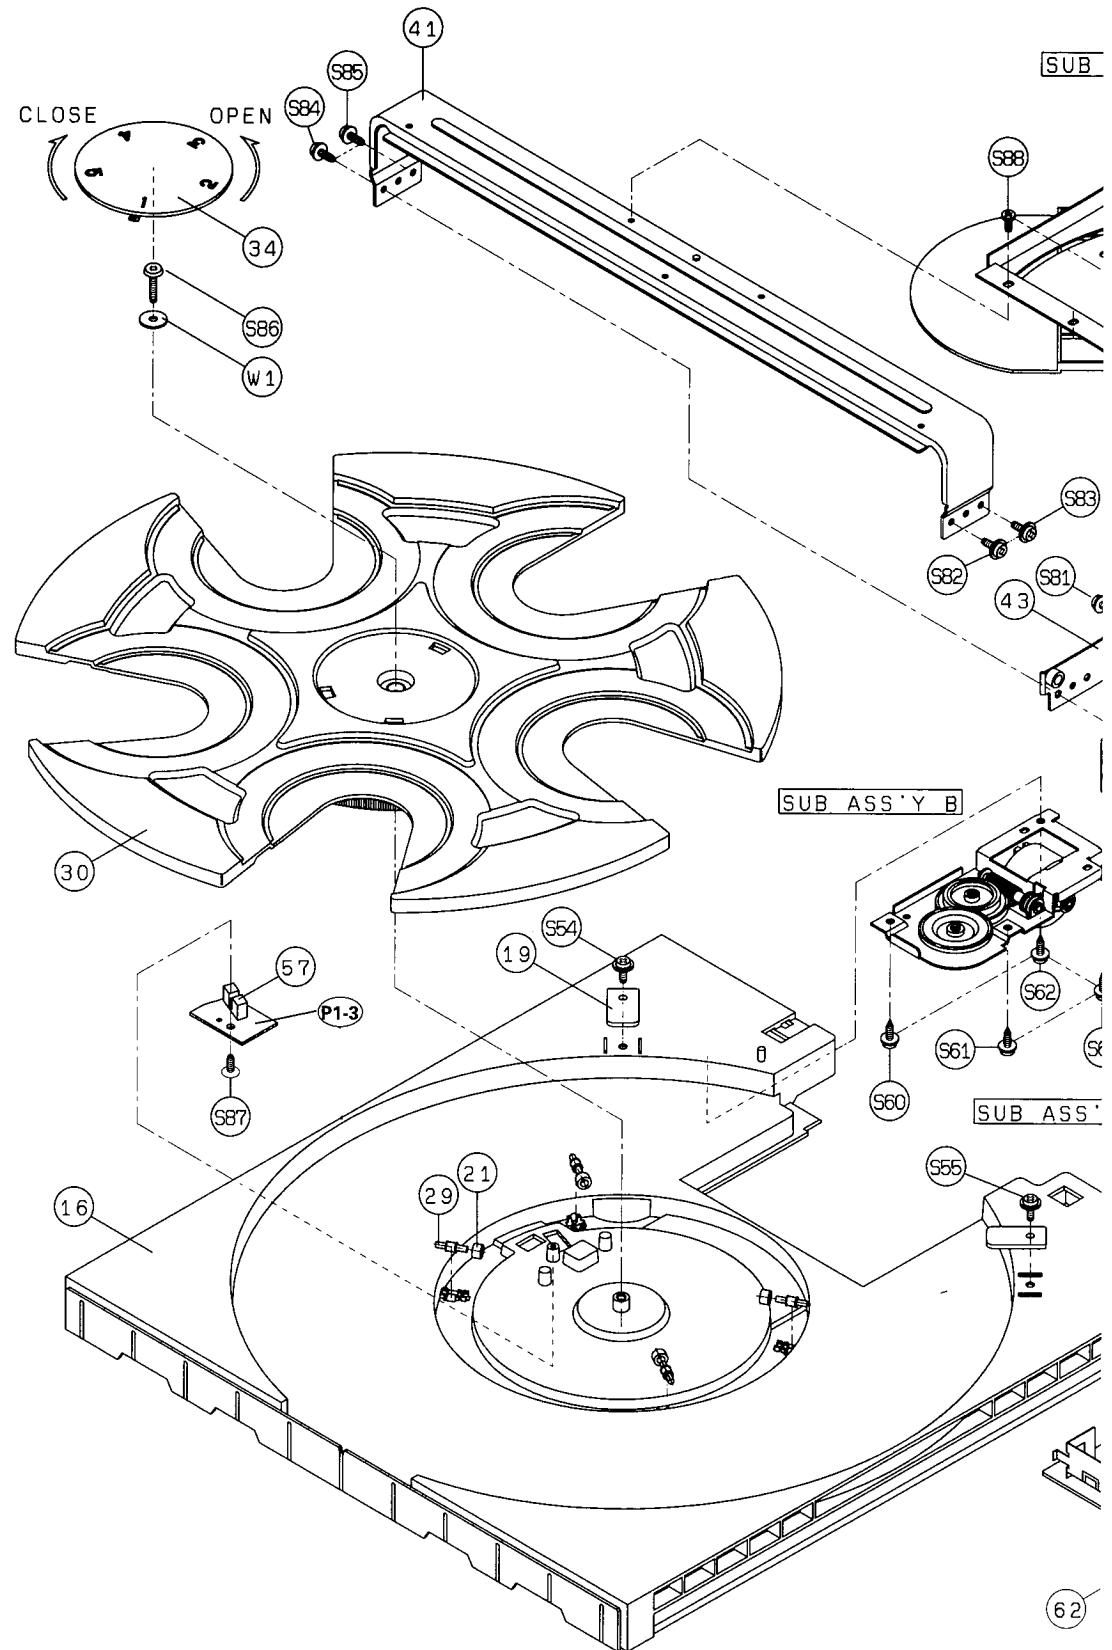


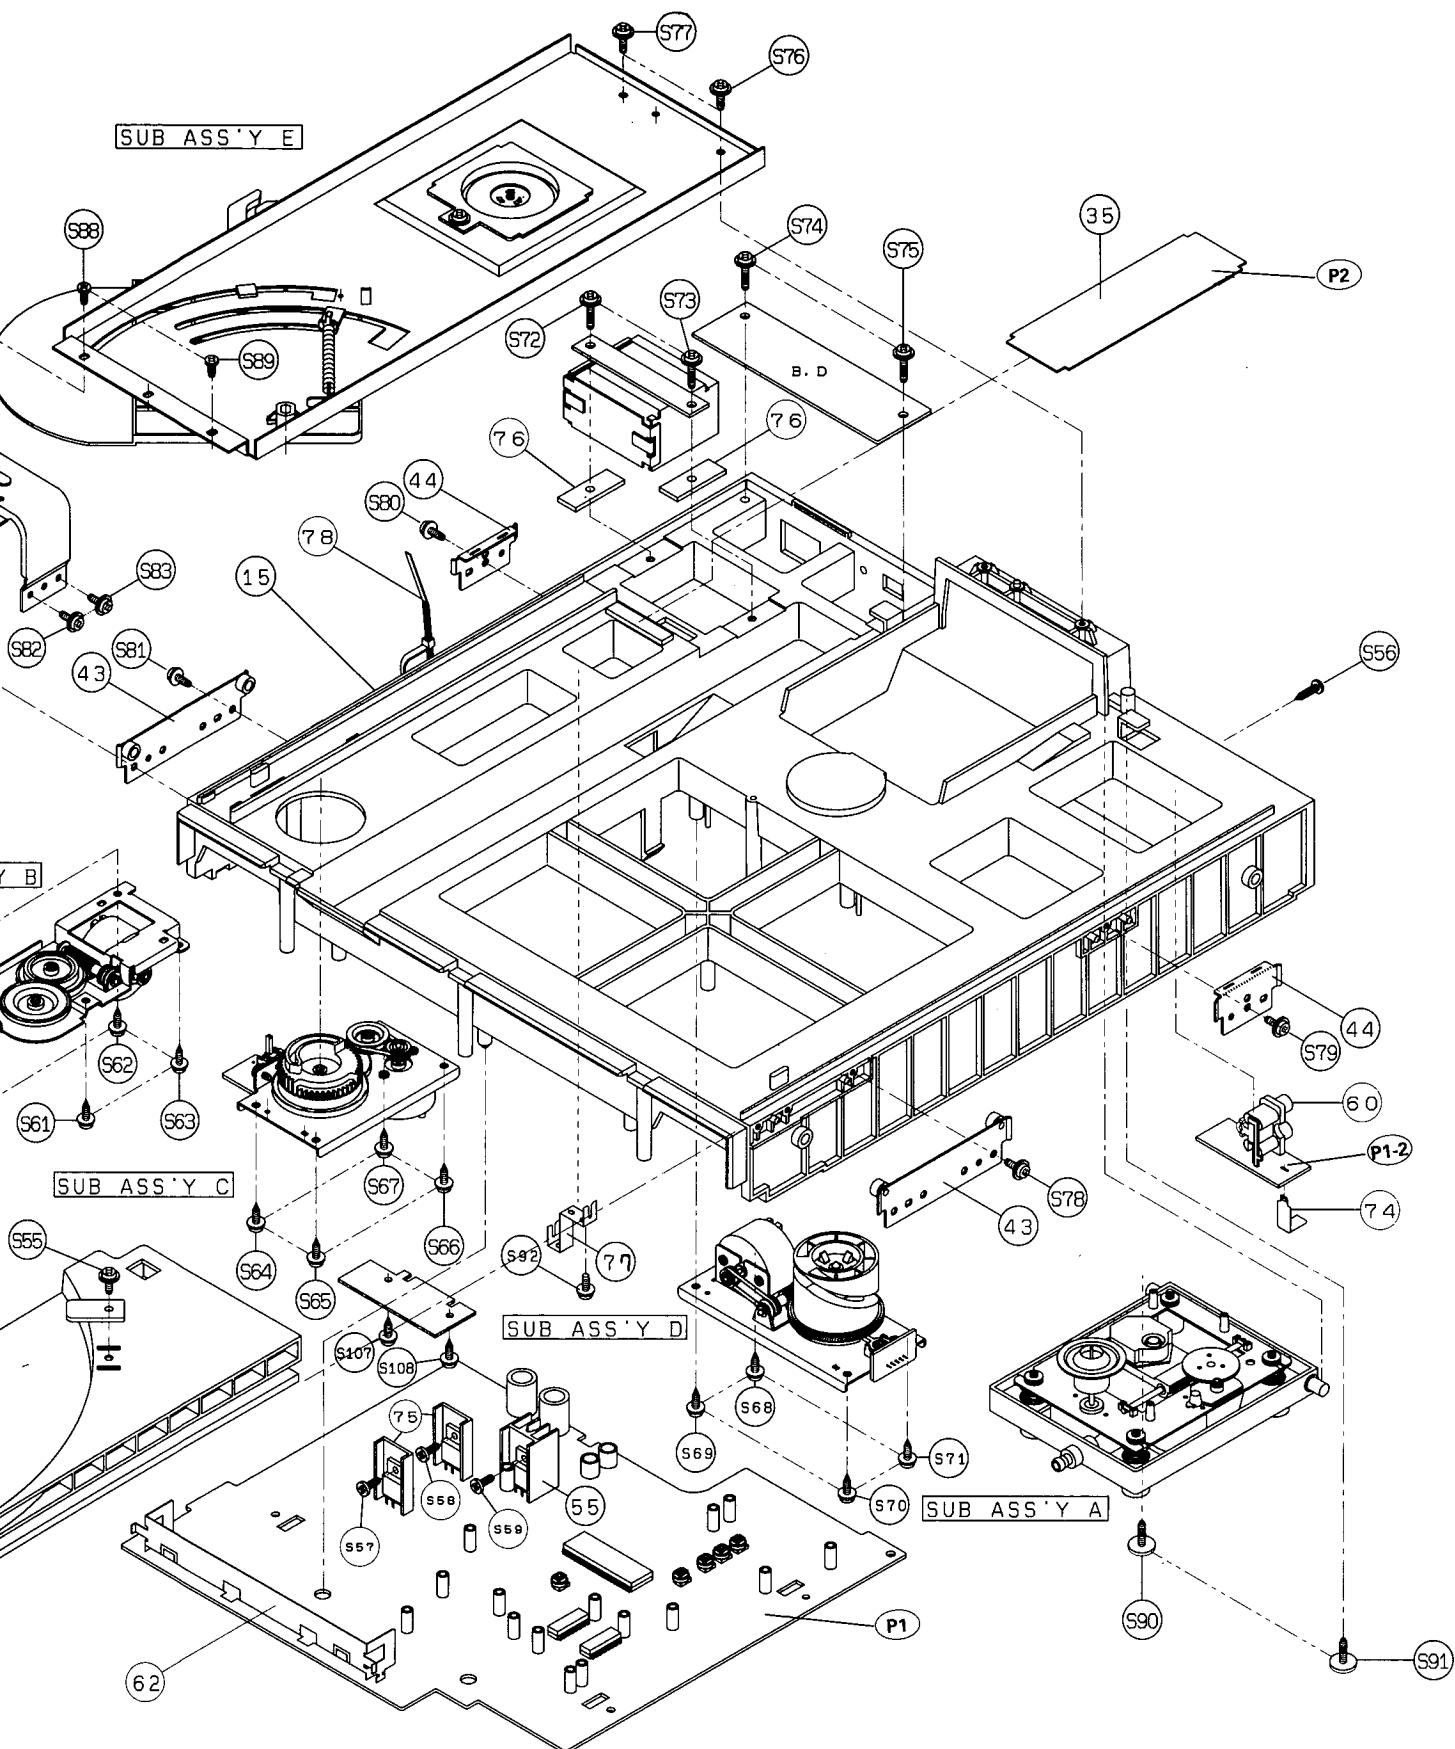


## MECHANISM ASSEMBLES

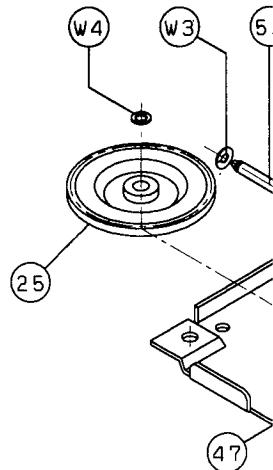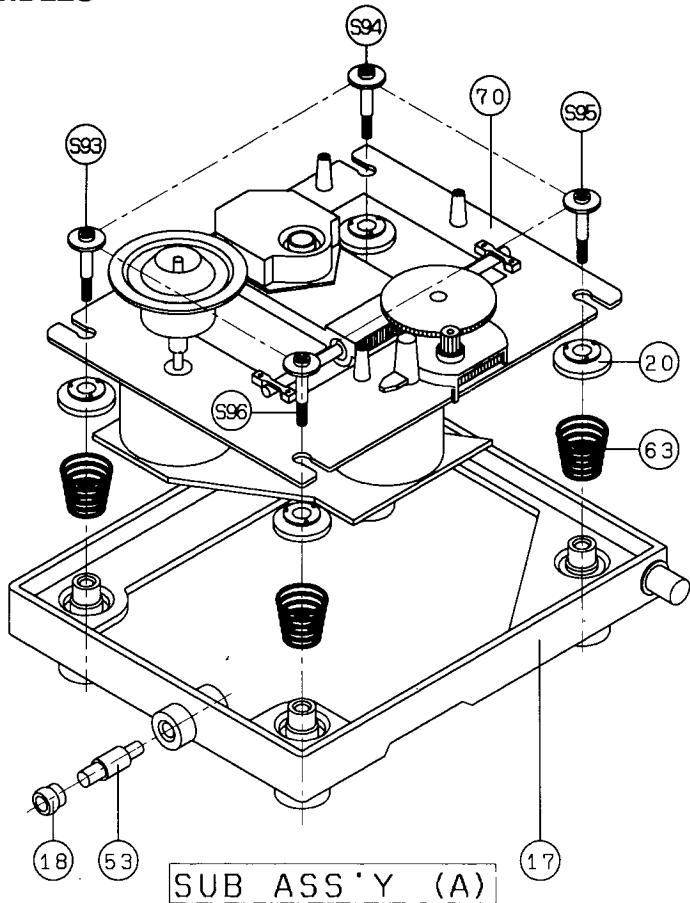


SUB ASS'Y

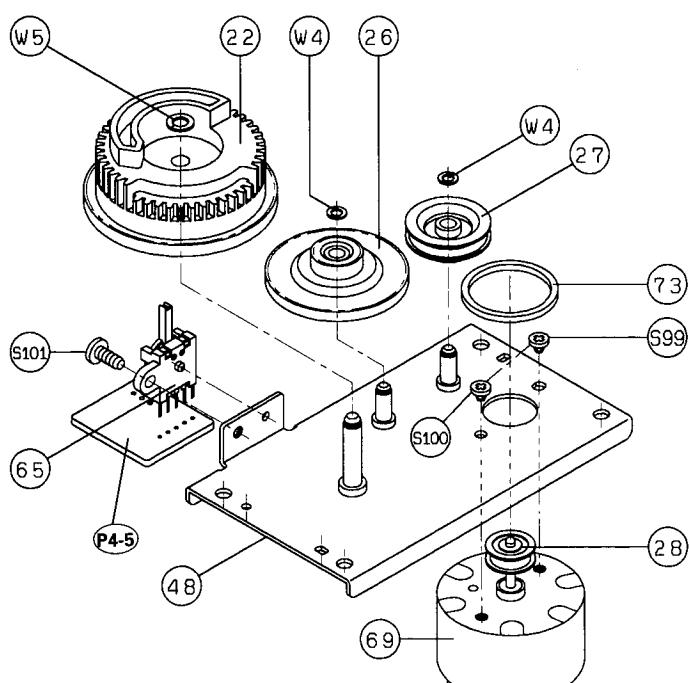


SUB ASS'Y (C)

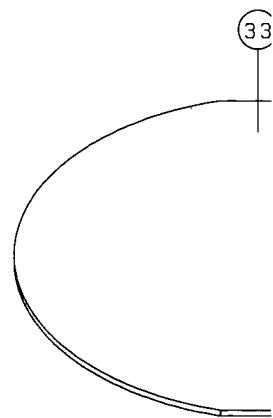

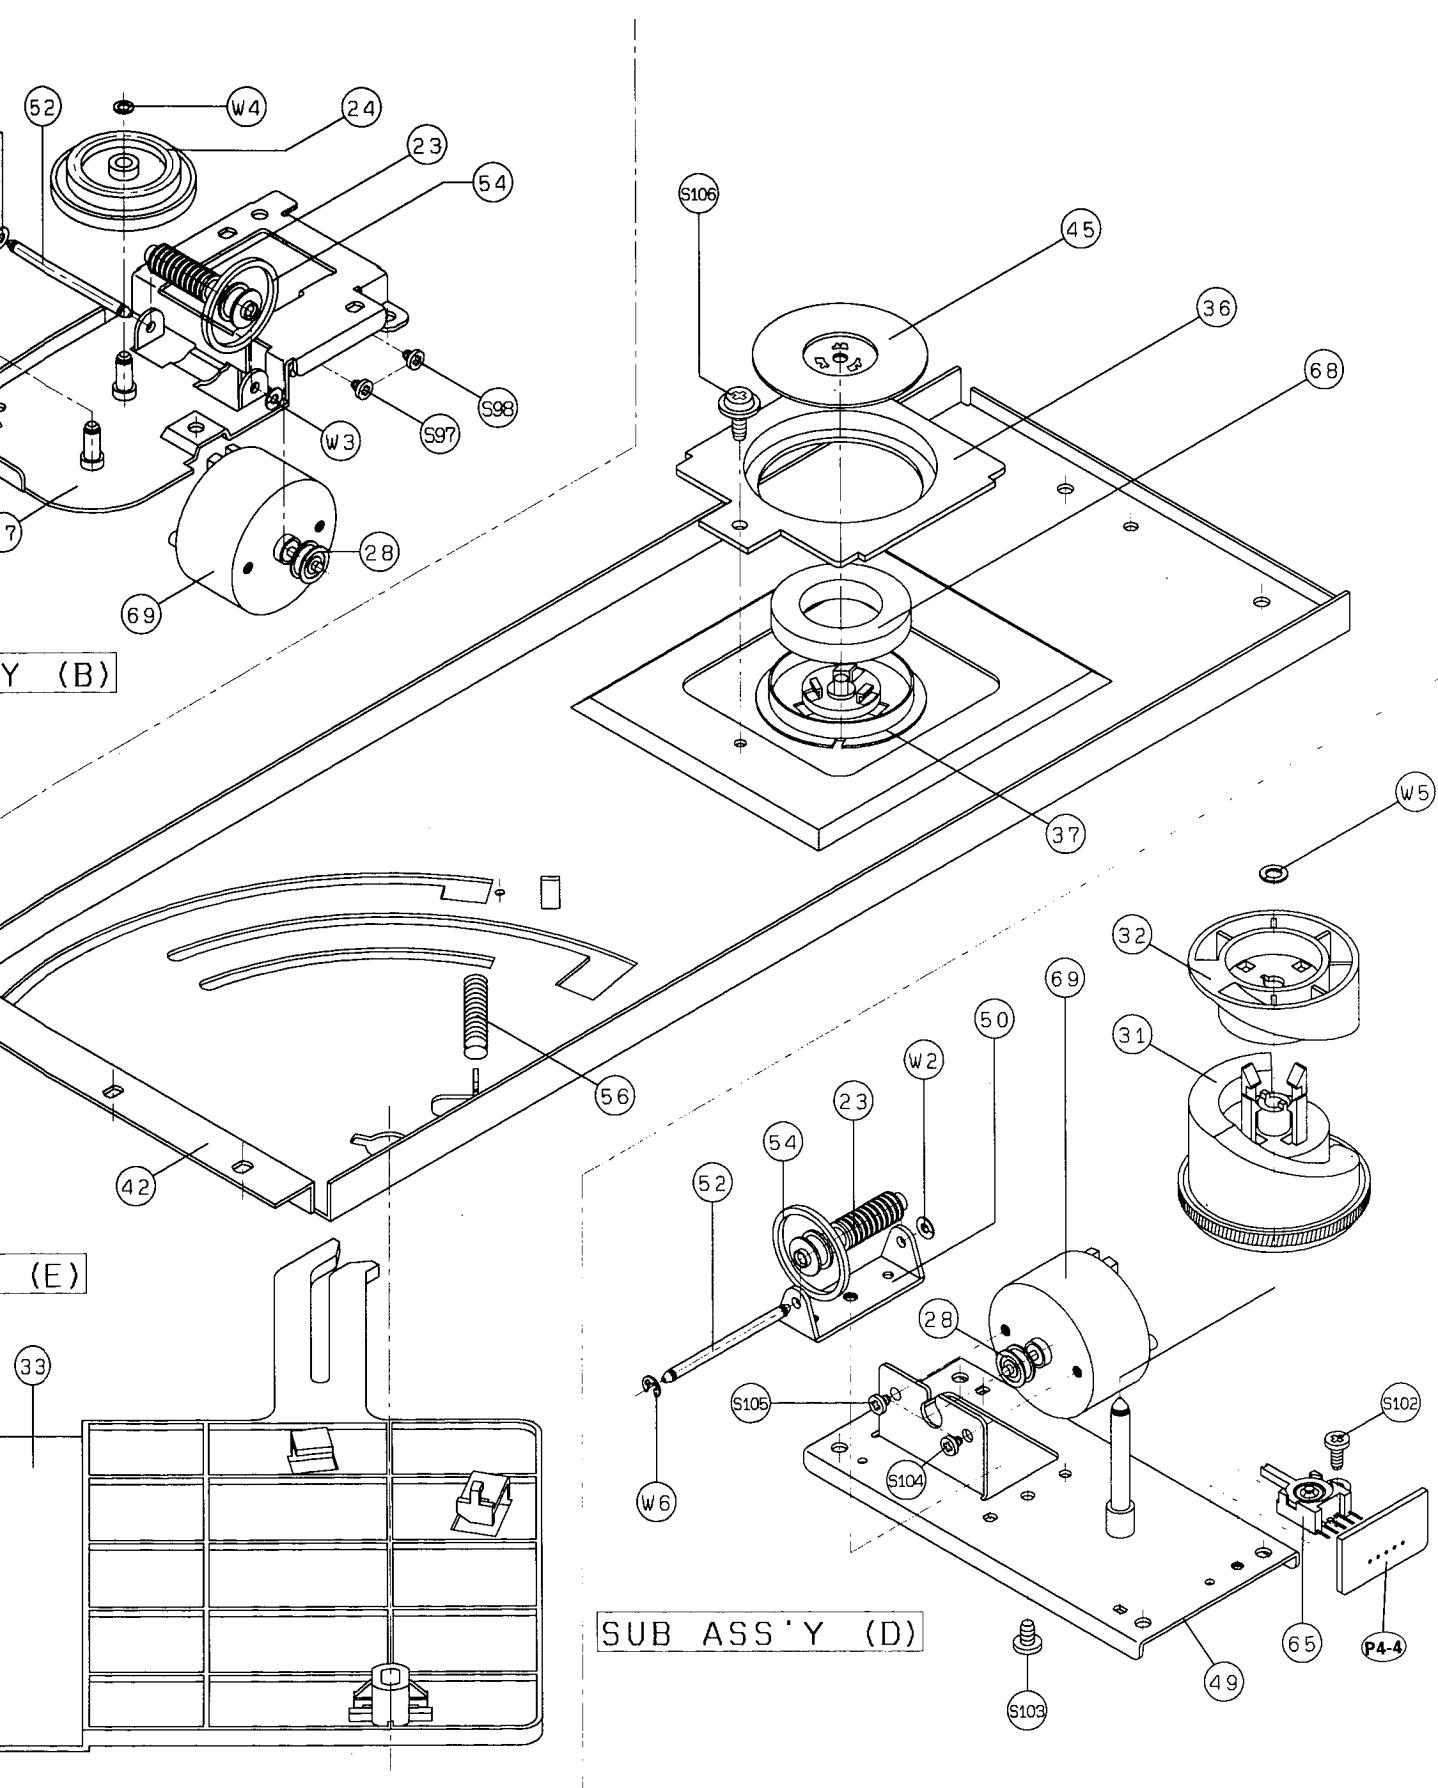

## CD MECHANISM (KSM-2101A-AM)

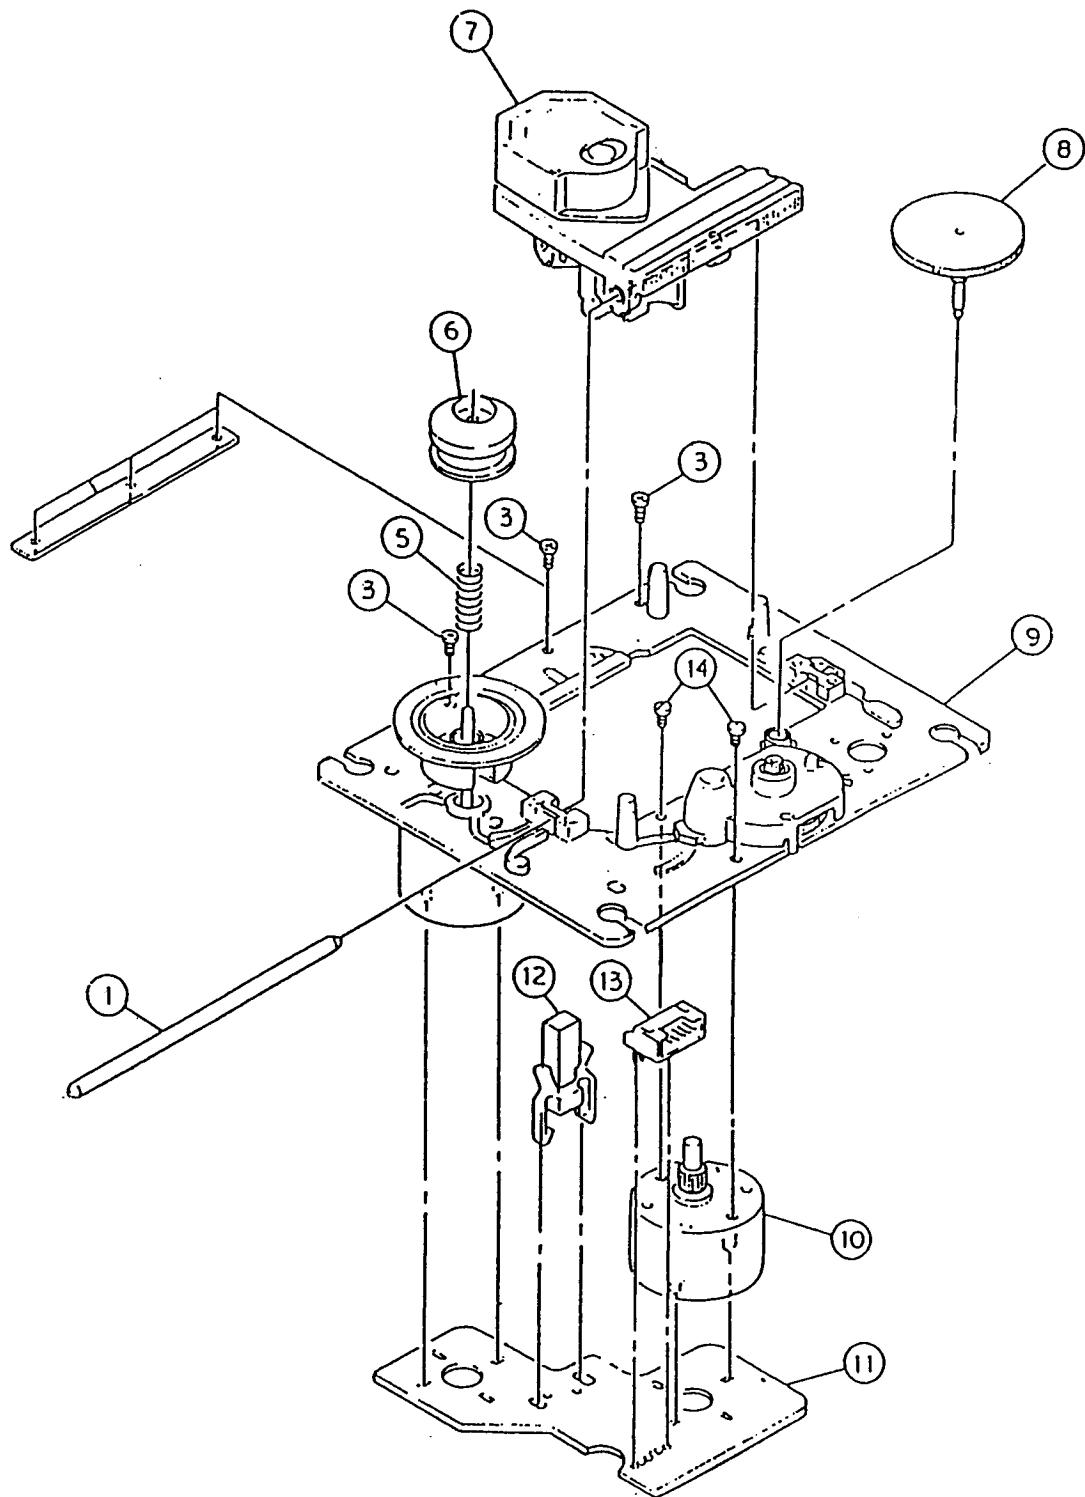

## GENERAL UNIT PARTS LIST

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
<b>CABINET &amp; CHASSIS PARTS LIST</b>							
		<b>CABINET AND CHASSIS</b>				<b>05570800040</b>	Sub Ass'y "A", CD mechanism
8	04854508741	Knob Rotary	1	17	6022601810	Base D. U.	1
13	04603310251	Foot (H. S)	2	18	6065105610	Rolling Cap	1
14	04603510151	Foot Base	1	20	6715018420	Rubber Damping	4
15	6020600010	Body Mecha	2	53	7005007230	Shaft Base D. U.	1
16	6020800010	Tray Roulette	4	63	6555009220	Spring Damping	4
19	6065104120	Cover Drop	2	70	5708012910	CD Mecha KSM-210A-AM	1
21	6715018820	Rubber Roller	4	S93-S96	8155001110	Screw Damping	4
29	7115003210	Roller Roulette	4				
30	7121400220	Roulette	1				
34	04858300412	Cover Roulette	1				
35	8585006040	Cover Power B'D	1				
38	04610204052	Chassis Back	1	23	05650000002	Sub Ass'y "B", Roulette Gear	1
39	04612202201	Cover Top	1	24	7103000910	Worm	1
40	6121606610	Chassis Main	1	25	7103001110	Gear Roulette	1
41	6122631530	Frame Body	1	28	7103001210	Gear Idle	1
43	6143001120	Guide Tray, F	2	47	7113001310	Pulley, Motor	1
44	6145002120	Guide Tray, B	2	52	6503019420	Bracket, Roulette	1
46	6165138410	Cover Fuse	1	54	7005007110	Shaft Worm	1
71 △	4308001410	AC Cord, EHD-0008-266P, 2000mm, Black	1	54	7165002420	Belt, 18x1.5x1.5	1
76	8585006410	Holder, Trans	2	69	5558200310	Motor RF-500TB-14415	1
72	6518000710	Stopper, Cord	4	S97/S98	8009126031	Screw BM 2.6x3Y	2
77	4205003510	Terminal, Lead	1	W3	8338300710	Poly Washer 2.1x5x0.5	2
78	6528002810	Tie, Locking	1	W4	8338300810	Poly Washer 2.6x6x0.5	2
	6725002830	Sponge, Tray, 2t	1	P4-2	4002517720	P.C.B Skip Motor	1
	6725002840	Sponge, Tray, 4t	5	CNT107	4428515410	Wafer 4P	1
				CNT201	4428505710	Wafer 3P	1
		<b>CONNECT LEAD ASSEMBLIES</b>		C302	3509222233	Ceramic Disc	0.0022 uF 50 V J
(CNT101)	4358508201	Lead Ass'y 8P, 200 mm, CD mecha to Main B'	1	R301	3069151970	Cabon Film	150 ohm 1/5 W J
(CNT102)	4358508202	Lead Ass'y 8P 200 mm, CD mecha to Main B' White and blue	1	R302	3069103970	Cabon Film	10 kohm 1/5 W J
(CNT103)	4358504105	Lead Ass'y 4P, 100 mm, CD mecha to Main B'	1				
(CNT107)	4358504290	Lead Ass'y 4P 290mm, with tube, yellow, Ass'y Rolett gear to Sensor Motor B'D.	1	CNT104	05650000001	Sub Ass'y "C", Loading Gear	1
				4358105203	Lead Ass'y 5P 200mm, to Main B'D		
			22	7102000110	Gear Loading	1	
S57-S59	8109230061	Screw #2BTC 3x8Y	3	26	7103001310	Gear Center	1
S18-S30	8109230083	Screw #2BTC 3x8B	13	27	7103001420	Gear Pulley 2	1
S78-S85	8109230101	Screw #2BTC 3x10Y	8	28	7113001310	Pulley, Motor	1
S86	8109230161	Screw #2BTC 3x16Y	1	48	6503019520	Bracket, Loading (2)	1
S39-S44,S56	8119130123	Screw #1PTC 3x12B	7	73	7165002210	Belt, 25x1.5x1.5	1
S88/S89	8119430051	Screw SAM 3x5Y	2	69	5558200310	Motor RF-500TB-14415	1
S87	8129126103	Screw #1FT 2.6x10B	1	S99/S100	8009126031	Screw BM 2.6x3Y	2
S90,S91	8155001210	Screw Mecha	2	S101	8009126061	Screw BM 2.6x6Y	1
S60-S77	8159130121	Screw #1WPTC 3x12Y	18	W4	8338300810	Poly Washer 2.6x6x0.5	2
S45-S48	8159130121	Screw #1WPTC 3x12Y	4	W5	8338300910	Poly Washer 3.2x6x0.5	1
S49,S92	8159230081	Screw #2WPTC 3x8Y	2	P4	4002517700	P.C.B Motor	1
S31-S33	8159230083	Screw #2WPTC 3x8B	3	65	4638003210	SW Lever, SSCF21028A	1
S54/S55	8159230083	Screw #2WPTC 3x8B	2	P4-5	4002517750	P.C.B IN/OUT Leaf	1
S37/S38	8159230083	Screw #2WPTC 3x8B	2				
S50-S53	8159440083	Screw WSAM 4x8B	4				
W1	8305003810	Washer Plain Ø14	1	CNT108	05650000001	Sub Ass'y "D", Cam Gear	1
			23	4358105204	Lead Ass'y 5P 200mm, to Main B'D		
			28	7103000910	Worm	1	
			31	7113001310	Pulley, Motor	1	
			32	7142000210	Cam Gear	1	
			49	7142000310	Cam Cover	1	
			50	6503019610	Bracket, Cam	1	
			52	6505105610	Bracket, Worm 2	1	
			54	7165002420	Shaft Worm	1	
			69	5558200310	Belt, 18x1.5x1.5	1	
			S104/S105	8009126031	Motor RF-500TB-14415	1	
			S101	8009126061	Screw BM 2.6x3Y	2	
			S103	8119430051	Screw SAM 3x5Y	1	
			W2	8338300610	Poly Washer 2.1x5x0.3	1	
			W5	8338300910	Poly Washer 3.2x6x0.5	1	
S10-S17	8109230083	Screw #2BTC 3x8B	17	W6	8339020011	Washer E-Ring Ø2	1
S34-S36	8159230083	Screw WPTC 3x8B	3				

Ref. No.	Part No.	Description	Q'ty
P4-1	4002517710	P.C.B Chucking	1
65	4638003210	SW Lever, SSCF21028A	1
P4-4	4002517740	P.C.B Up/Down Leaf	1

	05612000000	Sub Ass'y "E", Chuck	
33	8582001020	Cover Disc	1
36	6043008410	Guide Chuck	1
37	6063103010	Base Magnet	1
42	6125000120	Chassis, Chuk	1
45	6023408610	Cover, Magnet	1
68	5125000910	Magnet, Ferrite	1
56	6555306110	Spring Cover	1
S106	8119430051	Screw SAM 3x5Y	1
55	7505206150	Heatsink REG TR KA7805	1
57	2408001111	SG-2, Sensor Photo	1
58	3208067210	VR, Level	1
59	4438005010	Jack, Phone, ABS, Gold	1
60	4438103010	Jack RCA 2P	1
61	4438007510	Jack Mini 2P	1
62	6513004420	Holder FIP	1
64	4628055810	SW Push Power	1
66	4658003710	SW Tact, SKHV10910D01	13
66	4658003710	SW Tact, SKHV10910D01	6
67	4658004410	SW Tact, EVQ-PJJ-05T	5
74	6505139410	Bracket, Ground	1
75	7505202410	Heatsink REG TR KA7812	1
75	7505202410	Heatsink REG TR KA7912	1

#### CD MECHANISM (KSM-2101A-AM)

Ref. No.	Part No.	Description	Q'ty
1	5798900002	Shaft, Slide	1
3/4		Not Used.	1
5	5798900003	Spring TT	1
6	5798900004	Centering L/O	1
7	5798900001	Pick-up, KSS-210A (S)-RP	1
8	5798900005	Gear A	1
9	5798900006	T/T Chassis Assembly (MT)	1
10	5798900007	Motor Gear Assembly (MT)	1
11	5798900008	P.C.B Motor	1
12	5798900009	Switch, Leaf	1
13	5798900010	Wafer 4P	1
14	8019120031	Screw PM 2x3 ZNY	1

The following parts are only for European version.

Ref. No.	Part No.	Description	Q'ty
38	046102043021	Chassis Back	1
72	6518000111	Stopper, Cord	4
71 	4308000430	AC Cord, EHD-0008-266P, 2000mm, Black	1

#### PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol  in the parts list and the safety can be of special significance. When replacing a component identified with  , use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

SOME OF THE 12 DIGIT PART NUMBERS  
ARE MISSING THE LAST DIGIT. THEY  
CAN BE CORRECTED BY USING THIS SHEET

The followings are the full parts number for summary of 12-digit parts number.

Ref #	Parts number	description	Q'ty per unit	Remark
8	048545087411	Knob Rotary	1	
13	046033102511	Foot (H.S)	2	
14	046035101511	Foot Base	1	
34	048583004121	Cover Roulette	1	
38	046102040521	Chassis Back	1	120V only
39	046122022011	Cover Top	1	
	048501002000	Assembly Front Panel		
1	048501033021	Panel, Front	1	
4	048553019511	Filter F/L	1	
5	048543058511	Button, Display	1	
6	048545123312	Button, Power	1	
9	048545123412	Button, Play	1	
10	048543058312	Button, Function (A)	1	
11	048543058412	Button, Function (B)	1	
12	048562005112	Door, Tray	2	
	055708000408	Sub Ass'y "A", CD Mechanism		
	056500000025	Sub Ass'y "B", Roulette Gear		
	056500000016	Sub Ass'y "C", Loading Gear		
	056500000017	Sub Ass'y "D", Cam Gear		
	056120000008	Sub Ass'y "E", Chuck		
38	046102043021	Chassis Back	1	230V only

# ELECTRICAL PARTS LIST

**PRODUCT SAFETY NOTICE:** Products marked with  $\triangle$  have special characteristics important to safety.

If you replace of these components, read carefully the product safety notice in this manual.

Don't degrade the safety of the product though improper servicing.

Resistor/Capacitor Tolerance, D: ( $\pm 0.5\%$ ), J: ( $\pm 5\%$ ), K: ( $\pm 10\%$ ), M: ( $\pm 20\%$ ), Z: (+80, -20%).

Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
P1	054002008030	<b>ASS'Y P.C.B MAIN</b>	1	C178-C181	3519100935	Ceramic tubular	10 pF
		<b>Miscellaneous</b>		C182	3679562120	Mylar	0.006 uF
55	7505206150	Heatsink REG TR KA7805	1	C183-C186	3519221935	Ceramic tubular	220 pF
75	7505202410	Heatsink REG TR KA7812	1	C187	3679222120	Mylar	0.002 uF
75	7505202410	Heatsink REG TR KA7912	1	C188	3479310121	Electrolytic SG	100 uF
62	6513004420	Holder FIP	1	C189	3679562120	Mylar	0.006 uF
		<b>Switches</b>		C190	3479310121	Electrolytic SG	100 uF
SW101	4658003710	SW Tact, SK-HV10910D01	1	C191	3679222120	Mylar	0.002 uF
SW102	4658003710	SW Tact, SK-HV10910D01	1	C192	3479310121	Electrolytic SG	100 uF
		<b>Capacitors</b>		C193-C195	3679333120	Mylar	0.033 uF
C101	3679103120	Mylar	0.01 uF	3519121935	Ceramic tubular	120 pF	50V J
C103	3479310121	Electrolytic SG	100 uF	C196/C197	3679121935	Ceramic tubular	0.001 uF
C104	3679103120	Mylar	0.01 uF	C198/C199	3679122120	Mylar	100 uF
C105	3479347061	Electrolytic SG	47 uF				100 pF
C106	3519223935	Ceramic tubular	0.022 uF	C200	3479310121	Electrolytic SG	50V J
C107 $\triangle$	3479347071	Electrolytic SG	47 uF	C201	3679153120	Mylar	0.015 uF
C108	3679103120	Mylar	0.01 uF	C202-C204	3519100935	Ceramic tubular	47 pF
C109 $\triangle$	3519104935	Ceramic tubular	0.1 uF	C205	3519470935	Ceramic tubular	10 pF
C110/C111	3679103120	Mylar	0.01 uF	C206	3519100935	Ceramic tubular	10 pF
C112	3519471935	Ceramic tubular	470 pF	C207	3519561935	Ceramic tubular	560 pF
C113	3479347071	Electrolytic SG	47 uF	C208	3519472915	Ceramic tubular	4700 pF
C114	3519471935	Ceramic tubular	470 pF	C209	3679103120	Mylar	0.01 uF
C115-C117	3679103120	Mylar	0.01 uF	C210	3679333120	Mylar	0.033 uF
C118/C119	3409310249	Electrolytic SG	1000 uF	C211	3679103120	Mylar	0.01 uF
C120 $\triangle$	3409322249	Electrolytic SG	2200 uF	C212/C213	3519470935	Ceramic tubular	47 pF
C121	3519102935	Ceramic tubular	0.001 uF	C214	3679153120	Mylar	0.015 uF
C122/C123	3529220210	Ceramic Disc(Ch)	22 pF	C215	3519470935	Ceramic tubular	0.01 uF
C124	3679333120	Mylar	0.033 uF	C216/C217	3479322141	Electrolytic SG	100 uF
C125	3479347871	Electrolytic SG	0.47 uF	C218	3479347871	Electrolytic SG	220 uF
C126 $\triangle$	3409322249	Electrolytic SG	2200 uF	C219/C220	3479310071	Electrolytic SG	47 uF
C127	3479310971	Electrolytic SG	1 uF	C221	3519103915	Ceramic tubular	10 uF
C129	3479310121	Electrolytic SG	100 uF	C222	3479310121	Electrolytic SG	0.01 pF
C130	3519223935	Ceramic tubular	0.022 uF	C223	3479347871	Electrolytic SG	16 V J
C131	3479333971	Electrolytic SG	3.3 uF	C224	3679222120	Mylar	0.47 uF
C132	3519101935	Ceramic tubular	100 pF	C226	3519223935	Ceramic tubular	0.002 uF
C133	3519220935	Ceramic tubular	22 pF	C227/C228	3519101935	Ceramic tubular	0.022 uF
C134	3479310971	Electrolytic SG	1 uF	C230	3479310071	Electrolytic SG	50V M
C135	3519101935	Ceramic tubular	100 pF	C231	3519473935	Ceramic tubular	0.1 uF
C136	3519471935	Ceramic tubular	470 pF	C232	3479310121	Electrolytic SG	50V M
C137	3519223935	Ceramic tubular	0.022 uF	C233	3479347871	Electrolytic SG	0.47 uF
C138/C139	3479347041	Electrolytic SG	47 uF	C234	3679222120	Mylar	0.002 uF
C140	3479322131	Electrolytic SG	220 uF	C236	3519223935	Ceramic tubular	0.022 uF
C141	3479310071	Electrolytic SG	10 uF	C237/C238	3519101935	Ceramic tubular	100 pF
C142	3479310121	Electrolytic SG	100 uF	C239	3479310071	Electrolytic SG	10 uF
C143	3519103915	Ceramic tubular	0.01 uF	C240	3519473935	Ceramic tubular	0.047 uF
C144/C145	3479347041	Electrolytic SG	47 uF	C241	3519104935	Ceramic tubular	0.1 uF
C146	3519472915	Ceramic tubular	4700 pF	C242	3519223935	Ceramic tubular	0.022 uF
C148	3519101935	Ceramic tubular	100 pF	C243	3519102935	Ceramic tubular	0.001 uF
C149	3479347971	Electrolytic SA	4.7 uF	C244	3679104935	Ceramic tubular	0.1 uF
C150	3519101935	Ceramic tubular	100 pF	C245	3679104935	Ceramic tubular	0.1 uF
C151	3579220130	Ceramic Disc	22 pF	C246	3679104935	Ceramic tubular	0.022 uF
C152-C154	3479310121	Electrolytic SG	100 uF	C247	3519104935	Ceramic tubular	100 pF
C155/C156	3479347041	Electrolytic SG	47 uF	C248	3679104935	Ceramic tubular	100 pF
C157	3679153120	Mylar	0.015 uF	C249	3679512970	Carbon Film	100 Kohm
C158	3679472120	Mylar	0.005 uF	C250	3679104935	Carbon Film	150 Kohm
C159	3519223935	Ceramic tubular	0.022 uF	C251	3679104935	Carbon Film	47 Kohm
C160	3479310121	Electrolytic SG	100 uF	C252	3679512970	Carbon Film	100 Kohm
C161	3479310071	Electrolytic SG	10 uF	C253	3679104935	Carbon Film	10 Kohm
C162	3479333971	Electrolytic SG	3.3 uF	C254	3679512970	Carbon Film	100 Kohm
C163/C164	3519101935	Ceramic tubular	100 pF	C255	3679104935	Carbon Film	150 Kohm
C165-C168	3479310141	Electrolytic SG	100 uF	C256	3679512970	Carbon Film	100 Kohm
C170	3519102935	Ceramic tubular	0.001 uF	C257	3679512970	Carbon Film	100 Kohm
C171	3679104122	Mylar	0.1 uF	C258	3679512970	Carbon Film	100 Kohm
C172	3479322071	Electrolytic SG	22 uF	C259	3679512970	Carbon Film	100 Kohm
C173	3479333971	Electrolytic SG	3.3 uF	C260	3679512970	Carbon Film	100 Kohm
C174/C175	3519561935	Ceramic tubular	560 pF	C261	3679512970	Carbon Film	100 Kohm
C176	3679104122	Mylar	0.1 uF	C262	3679512970	Carbon Film	100 Kohm
C177	3679473120	Mylar	0.047 uF	C263	3679512970	Carbon Film	100 Kohm



Ref. No.	Part No.	Description	Q'ty	Ref. No.	Part No.	Description	Q'ty
Q140	2208206105	KTA1015Y/KTA1266Y, PNP	1				
Q141	2228406120	KTC1027, NPN	1		054041010050	<b>ASS'Y P.C.B RCA JACK</b>	
Q142	2208206113	MPSA56, PNP	1			<b>Miscellaneous</b>	
Q143	2208606114	MPSA06, NPN	1	60	4438103010	Jack RCA 2P	1
Q144	2228106107	KTA1023, PNP	1	74	6505139410	Bracket, Ground	1
Q145	2228406120	KTC1027, NPN	1				
Q146	2208206113	MPSA56, PNP	1			<b>Connector</b>	
Q147	2208606114	MPSA06, NPN	1		4428513460	Wafer 6P	1
Q148	2228106107	KTA1023, PNP	1				
Q149/Q150	2208606112	2SD1302S, NPN	2			<b>Capacitor</b>	
Q151/Q152	2238006103	KRA107M, PNP	2	C301	3519472915	Ceramic Tubular	4700 pF 16V J 1
Q153/Q154	2208206104	KTA1268 BL, PNP	2				
Q155/Q156	2208606108	KTC3200 BL, NPN	2				
Q157/Q158	2208206104	KTA1268 BL, PNP	2		054041010051	<b>ASS'Y P.C.B OPTICAL/DIGI-LINK</b>	
Q159/Q160	2208606108	KTC3200 BL, NPN	2			<b>Miscellaneous</b>	
Q161	2208606114	MPSA06, NPN	1	61	4438007510	Jack Mini 2P	1
Q162	2228106107	KTA1023, PNP	1	OPT101	2428000140	E/O PLT102, Converter, Digital Output	1
Q163	2208606114	MPSA06, NPN	1				
Q164	2228106107	KTA1023, PNP	1			<b>Capacitor</b>	
Q165	2228406120	KTC1027, NPN	1			Ceramic tubular	0.02 uF 50V J 1
Q166	2208206113	MPSA56, PNP	1	C225	3519223935		
Q167	2208606112	2SD1302S, NPN	1		R303	3069822970	
Q168	2228406120	KTC1027, NPN	1		R304	3069392970	Carbon Film 8.2 Kohm 1/5W J 1
Q169	2208206113	MPSA56, PNP	1		R305	3069101970	Carbon Film 3.9 Kohm 1/5W J 1
Q170/Q171	2208606112	2SD1302S, NPN	2		R306	3069473970	Carbon Film 100 ohm 1/5W J 1
Q172	2208206105	KTA1015Y/KTA1266Y, PNP	1		R307	3069470970	Carbon Film 47 Kohm 1/5W J 1
Q173/Q174	2208606112	2SD1302S, NPN	2		R308	3069271970	Carbon Film 47 ohm 1/5W J 1
		<b>ICs</b>					270 ohm 1/5W J 1
IC101	2168220103	NJM-4560D, OP Amp	1				
IC102	2138322177	DWP-311 CXP-82316-170Q, CPU	1				
IC103	2138000149	YM-3433B Digital Filter	1				
IC104	2138000194	SAA-7350GP/M3 D/A Converter	1	Q175	2238006103	<b>Transistor</b>	
IC105	2138022110	CXD-1167Q, DSP	1			KRA107M, PNP	2
IC106	2168220103	NJM-4560D, OP Amp	1				
IC107	2138022112	CXA-1082BS, SSP	1			<b>IC</b>	
IC108	2138022111	CXA-1081S, R.F Amp	1	IC110	2408000136	LTV-817	1
IC109	2168206103	KIA-4559S, OP Amp	1				
IC110	2168602108	KAT812, Regulator	1			<b>Inductor</b>	
IC111	2168602105	KAT805, Regulator	1	L101	2648610082	Coil, Fixed 10uH	1
IC112	2168602113	KAT7912, Regulator	1				
IC113	2168602112	KAT7905, Regulator	1	CNT111P	4428513440	<b>Connector</b>	
						Wafer 4P	1
		<b>Fluorescent</b>					
FIP101	2328130311	FIP 4EM6	1				
					054002008033	<b>ASS'Y P.C.B FRONT</b>	
		<b>Resonators</b>				<b>Miscellaneous</b>	
X101	3938101500	X-TAL, 16.9344 MHz	1			SW Tact, SKHV10910D01	
X102	3938124010	Resonator, 10 MHz, CST10.0MTW-TF01	1	66	4658003710		
				67	4658004410	SW Tact, EVQ-PJJ-05T	5
		<b>Inductors</b>					
L102-L104	2648610082	Coil, Fixed 10uH	3			<b>Connector</b>	
L110	2648610182	Coil, Fixed 100uH	1	CNT109P	436208123492	Lead Ass'y 8P 120mm to Main B'D	1
	2648707810	EMI Filter					
		<b>Connectors</b>					
CNT101	4428513450	Wafer 5P	1		054041010052	<b>ASS'Y P.C.B RMC/FUNCTION</b>	
CNT102	4428514710	Wafer 8P	1			<b>Miscellaneous</b>	
CNT103	4428525590	Wafer 9P	1	66	4658003710	SW Tact, SKHV10910D01	
CNT104	4428513440	Wafer 4P	1	RMC01	2138000208	SBX1610-02, Remote Sensor	1
CNT105	4428513450	Wafer 5P	1				
CNT106	4428513450	Wafer 5P	1			<b>Connector</b>	
CNT107	4428525540	Wafer 4P	1	CNT103P	4358509121	Lead Ass'y 9P 120mm to Main B'D	1
CNT108	4428525580	Wafer 8P	1				
CNT109	4428525580	Wafer 8P	1				
CNT110	4428525580	Wafer 8P	1				
CNT111	436104342181	Lead Ass'y 4P 340mm, to Optical/DIGI B'D	1		054041010053	<b>ASS'Y P.C.B. POWER SWITCH</b>	
CNT112	4428513430	Wafer 3P	1			<b>Miscellaneous</b>	
CNT114	436206248132	Lead Ass'y 6P 240mm, Shield to Output B'D	1	64	4628055810	SW Push Power	1
CNT115	436403223231	Lead Ass'y 3P 220mm, to CNT116 of MAIN B'D	1				
				CNT101P	4358105263	<b>Connector</b>	
						Lead Ass'y 5P 260mm, to Main B'D	1
	<b>054041010049</b>	<b>ASS'Y P.C.B SENSOR A</b>					
		<b>Connectors</b>					
CNT104P	4358104164	Lead Ass'y 4P 160mm, to Main B'D	1		054041010054	<b>ASS'Y P.C.B HEADPHONE</b>	
CNT120	4428515410	Wafer 4P	1	58	3208067210	<b>Miscellaneous</b>	
				59	4438005010	VR, Level	1
						Jack, Phone, ABS, Gold	1

Ref. No.	Part No.	Description	Q'ty				
CS01-C503	3519332935	<b>Capacitors</b> Ceramic Tubular	3300 pF	50V	J	3	
R501/R502	3069560970	<b>Resistors</b> Carbon Film	56 ohm	1/5W	J	2	
CNT112P	4358103129	<b>Connector</b> Lead Ass'y 3 P 120 mm, to Main B'D				1	
<b>054002008110 ASS'Y P.C.B POWER TRANS.</b>							
<b>Miscellaneous</b>							
F101 △ TRANS △	4255001010 4228001410 5508101421 2828001357	Clip Fuse Pin Solder Fuse, SB 350mA 125V (UL/CSA) Power transformer 120V 60Hz		1	2	1	1
LV101	4428525780	<b>Connector</b> LV BASE 2P				1	
<b>054041010055 ASS'Y P.C.B DISC SENSOR</b>							
<b>Miscellaneous</b>							
57	2408001111 4002517730	SG-2, Sensor Photo P.C.B Disc Sensor		1		1	
<b>Resistors</b>							
R301	3069151970	Carbon Film	150 ohm	1/5W	J	1	
R302	3069103970	Carbon Film	10 kohm	1/5W	J	1	
CNT201	4358103247	<b>Connector</b> Lead Ass'y 3P 200 mm, to Skip Motor B'D				1	

**The following parts are only for 230V version.**


P1 C303	054002008030 3579100130	<b>ASS'Y P.C.B MAIN</b> Ceramic Disc	10 pF	50V	J	1	
<b>054040480056 ASS'Y P.C.B POWER TRANS.</b>							
<b>Miscellaneous</b>							
F101 △ TRANS △	4255001010 4228001410 5508101421 2828100247	Clip Fuse Pin Solder Fuse TL 16mA 250V(SEMKO) Power transformer 230V 50Hz		1	2	1	1
LV101	4428525780	<b>Connector</b> LV BASE 2P				1	

**PRODUCT SAFETY NOTICE**


Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol  $\Delta$  in the parts list and the safety can be of special significance. When replacing a component identified with  $\Delta$ , use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

## IC FUNCTIONAL BLOCK DIAGRAM



CXA1082BS : IC107

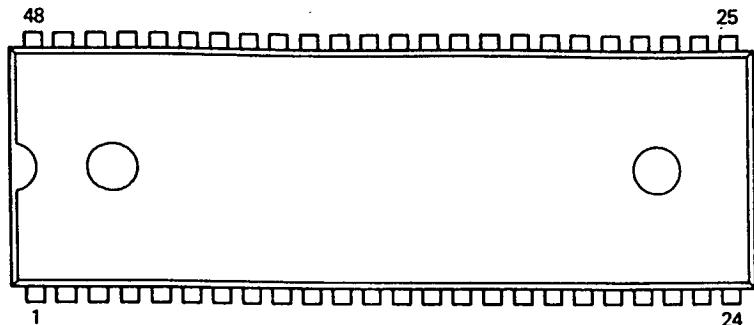



## Servo Signal Processor

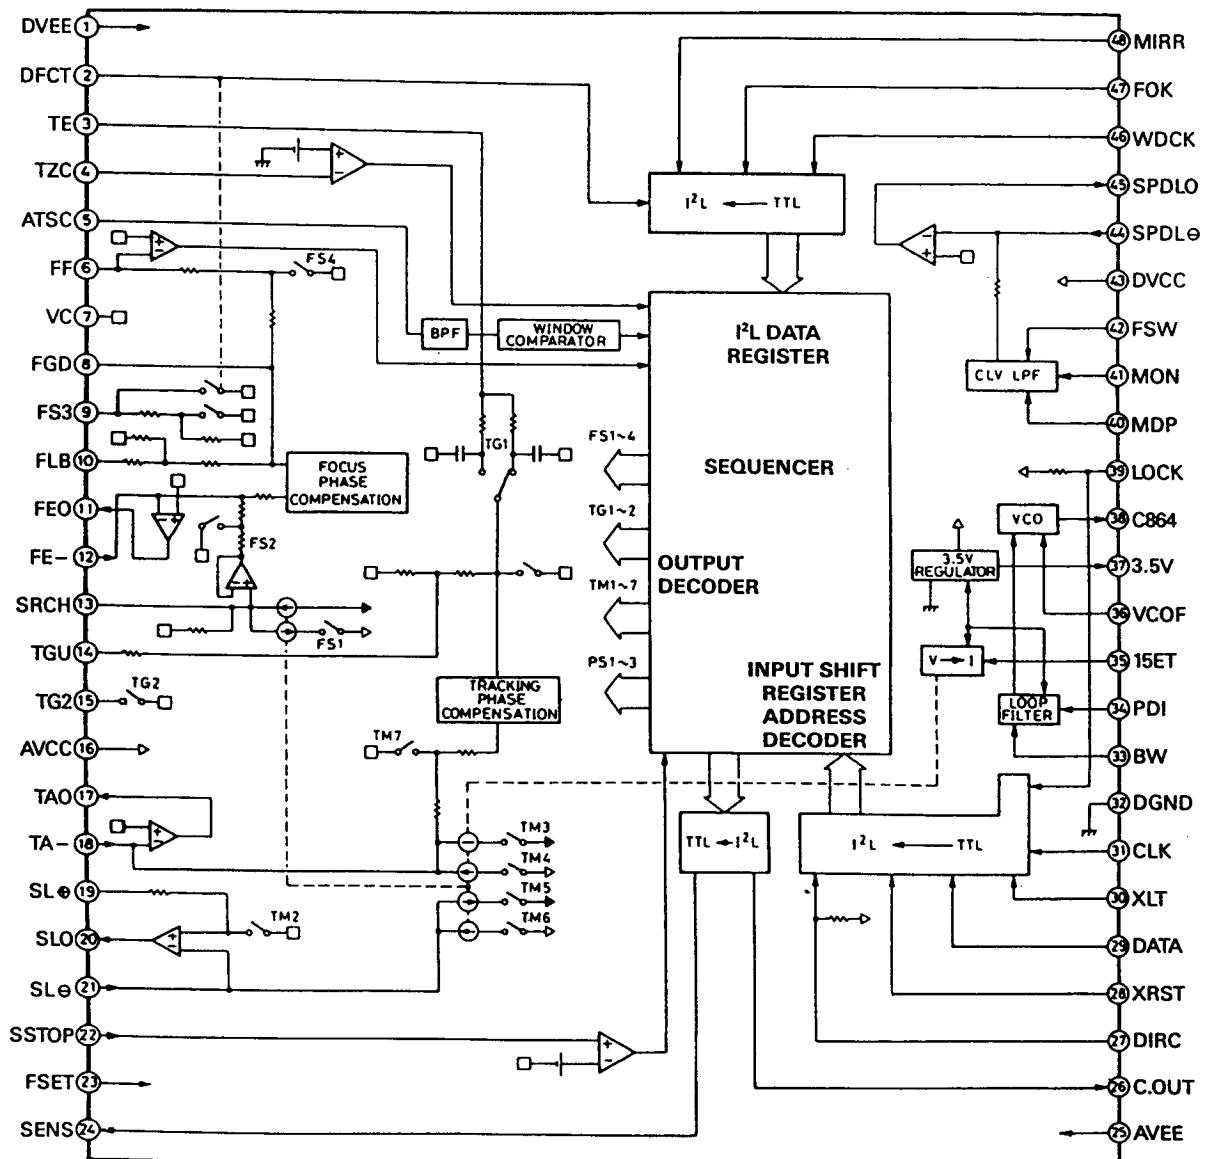



## CXD1167Q : IC105 (Digital Signal Processor)

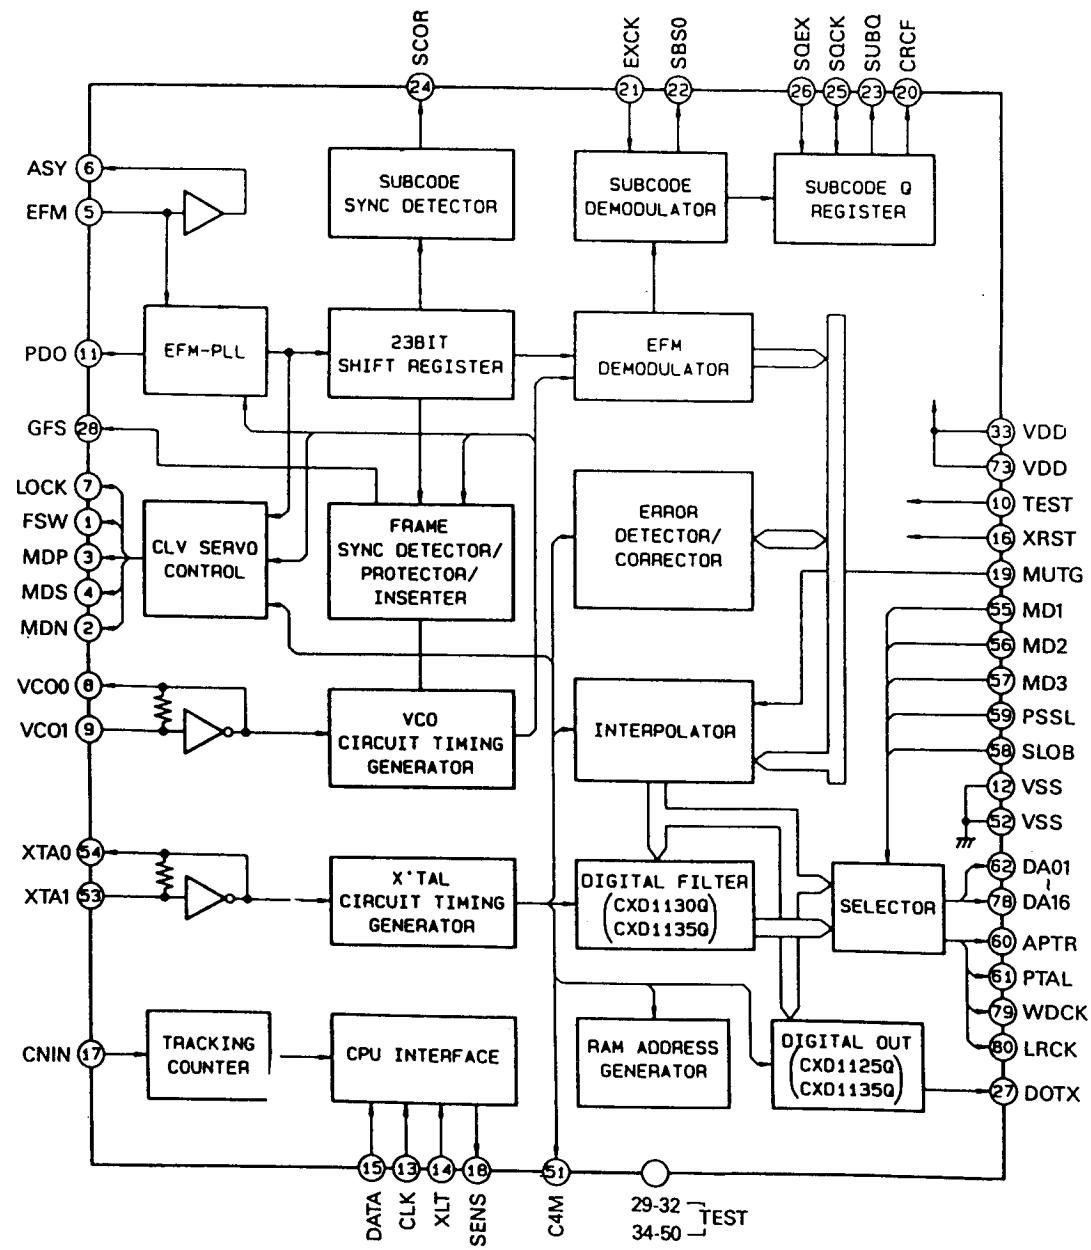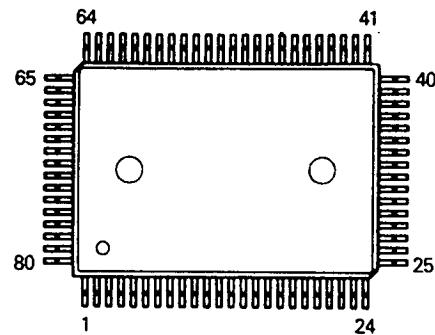


## GD78XX : IC110, IC111

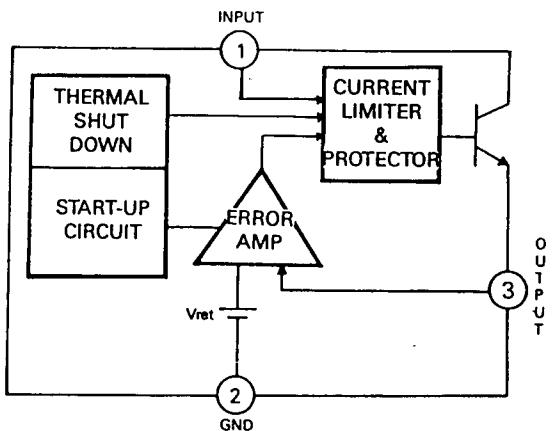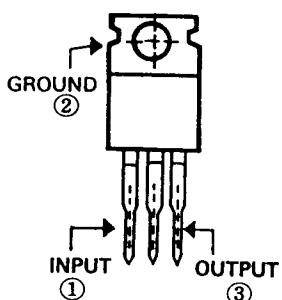


## GD79XX : IC112, IC113




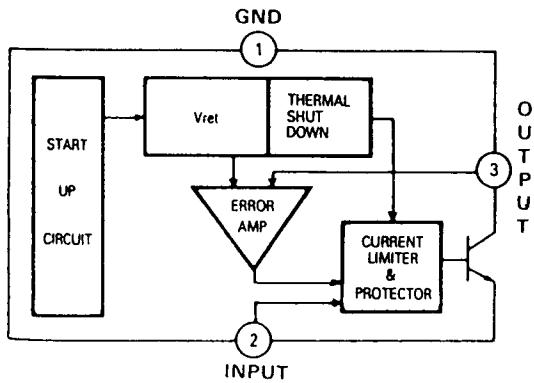
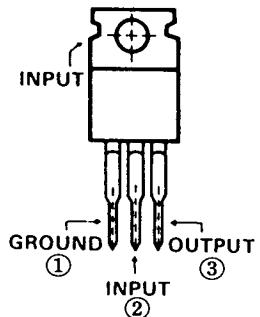


## YM3433B-D : IC103

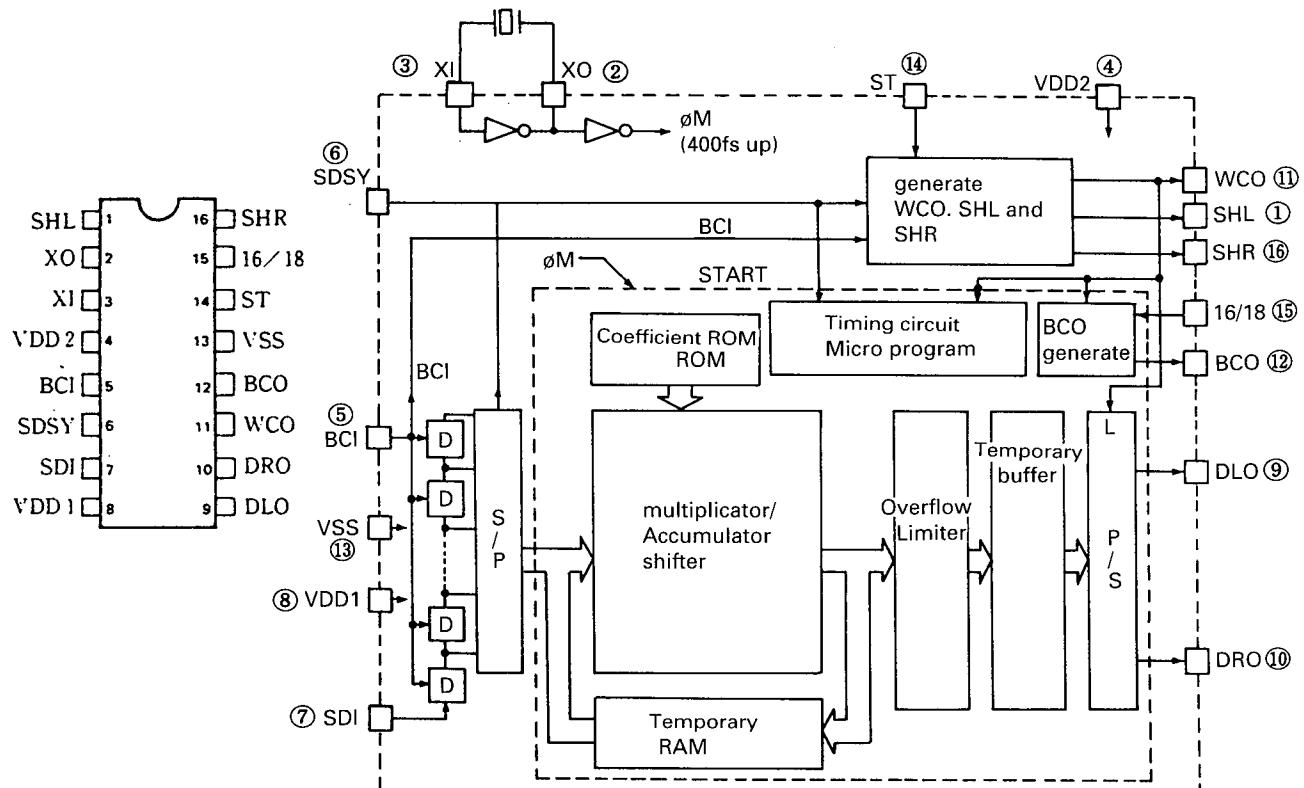



## CXA1081S : IC108

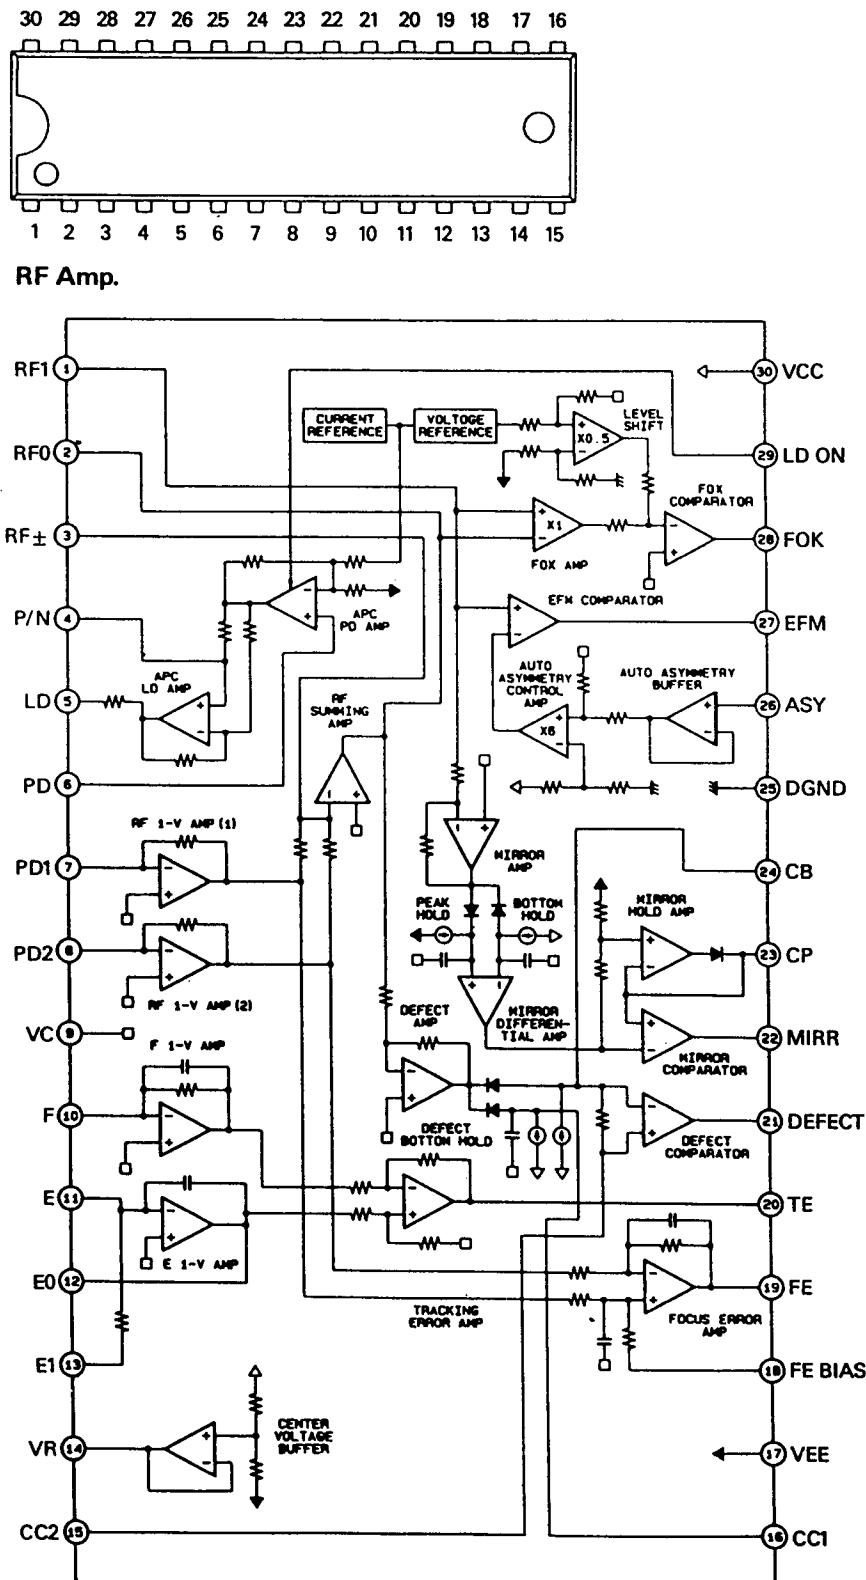

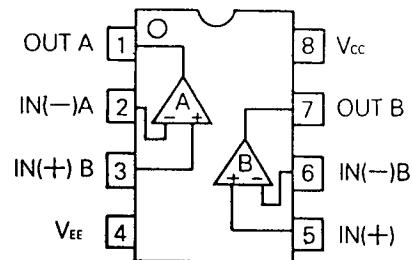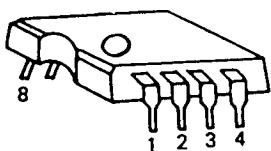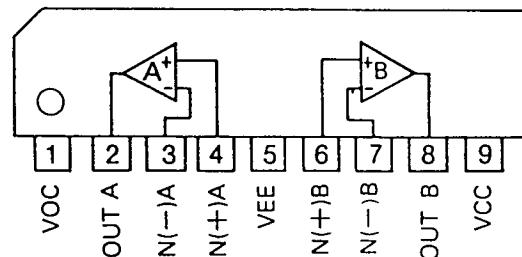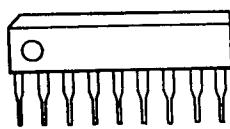
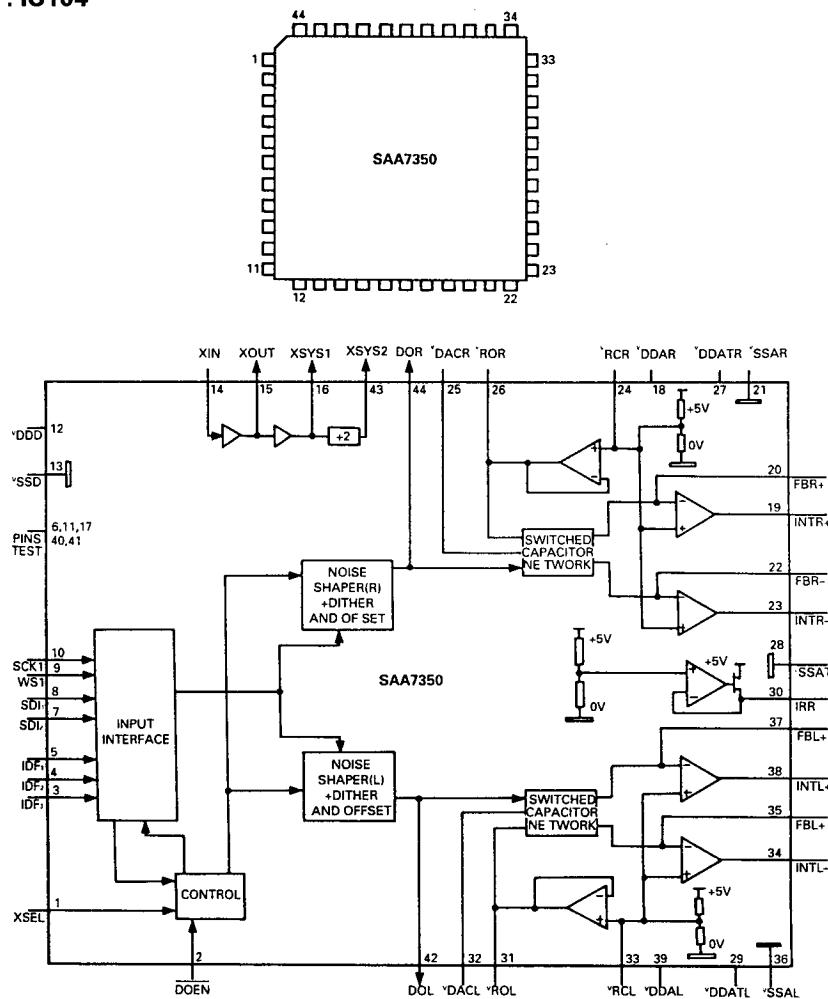
**NJM4560D : IC101, IC106****NJM4560S  
KIA4559S : IC109****SAA-7350GP/M3 : IC104**

## DWP 311, CXP 82316 CPU : IC102 (BLOCK DIAGRAM)


NOTE : Pin 73 is must be connected V<sub>DD</sub>

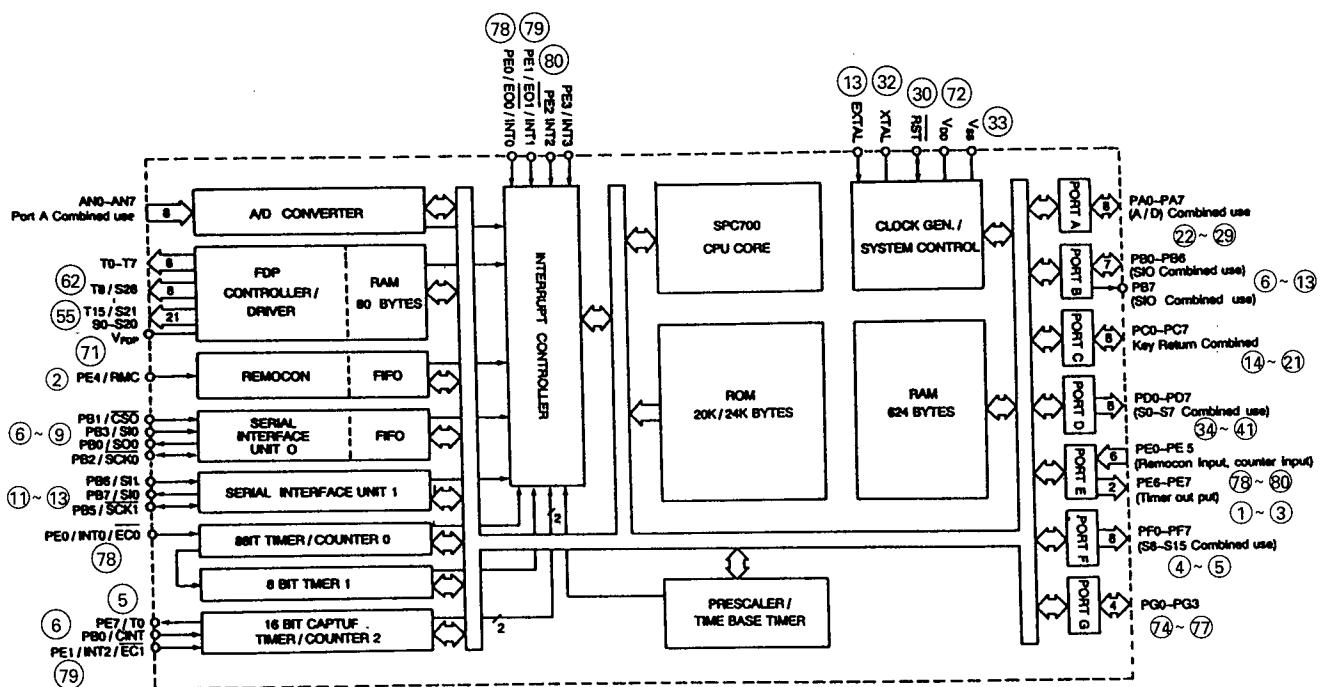
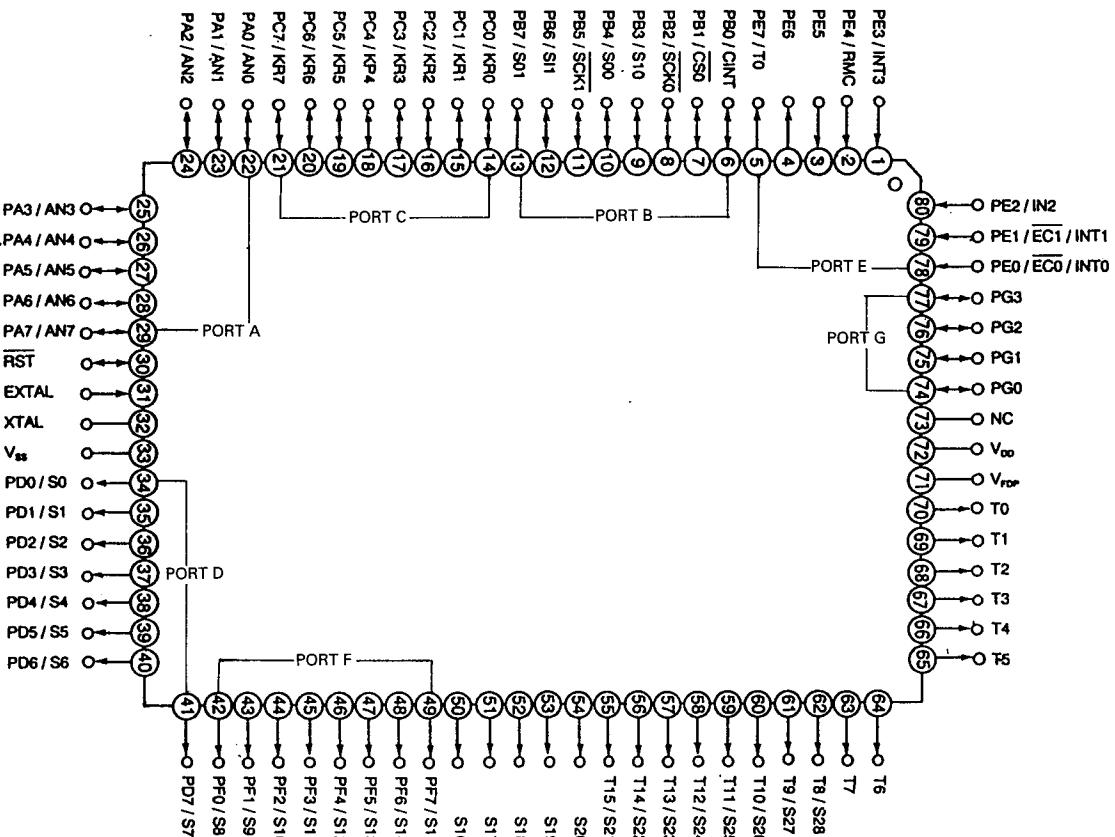


## PACKAGE

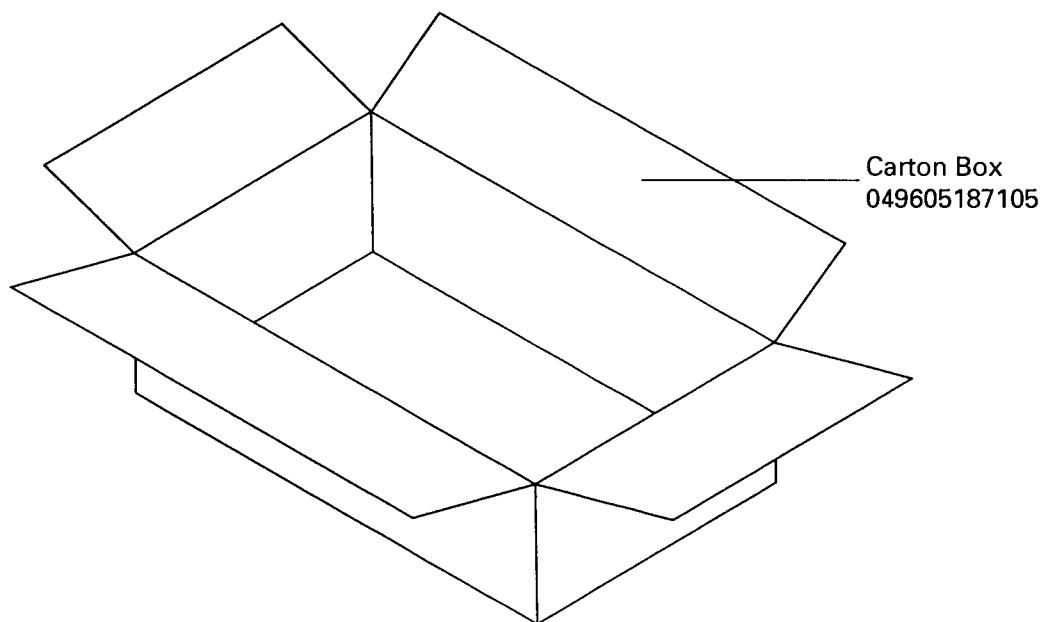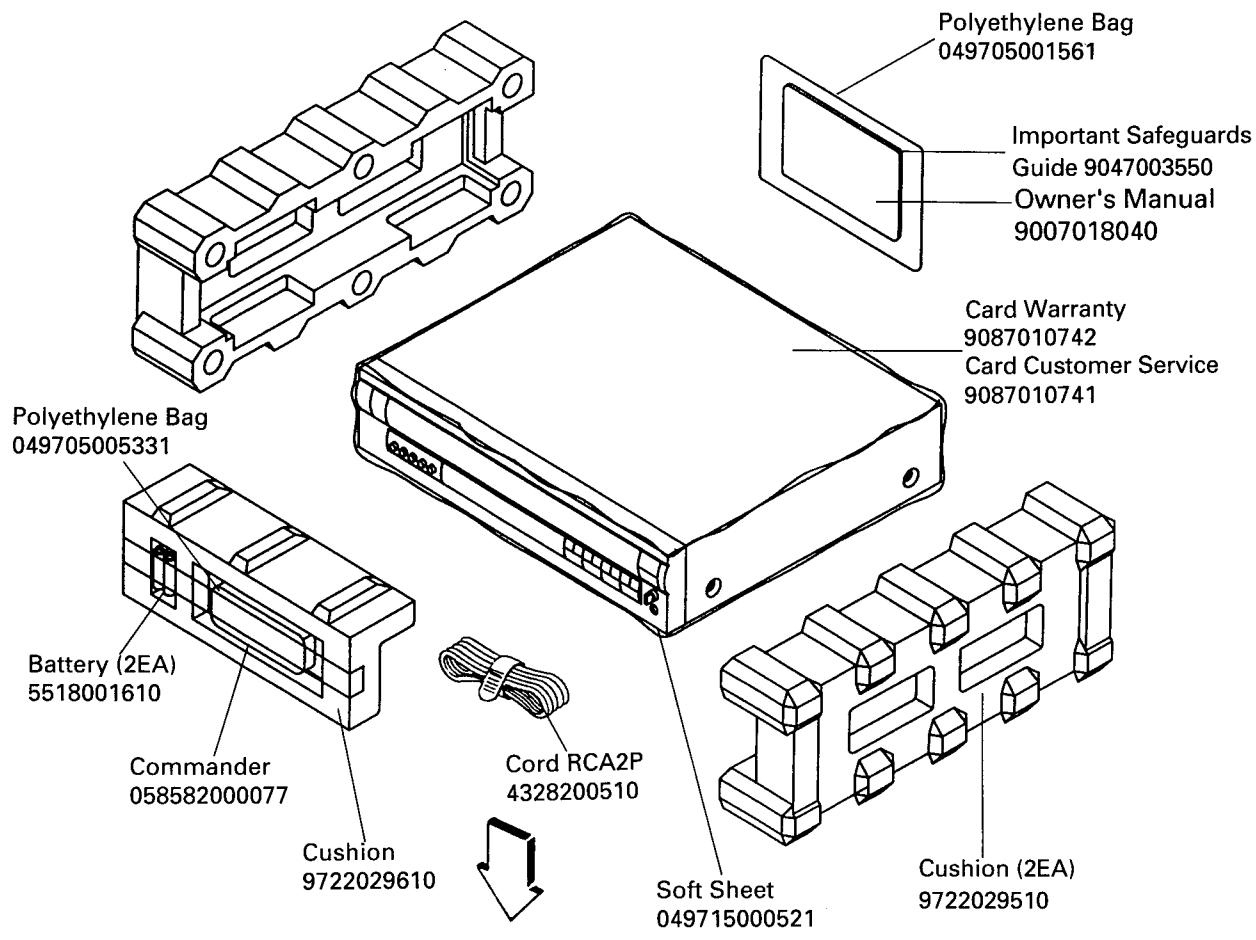


## TRANSISTOR LEAD IDENTIFICATION

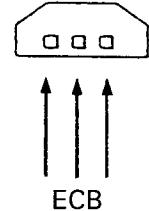
TRANSISTOR	FRONT VIEW	BOTTOM VIEW
KTA 1268BL KTC 2240B/KTC3200BL KTC 1815Y/KTC 3198Y KTA 1015Y/KTA 1266Y KTA 1302B 2SD 1302S KTC 2235Y/KTC1027 KTC 2236AY KTA965Y/KTA1023		
MPSA 06 MPSA56		
DTA 114YS/KRA107M DTC 114YS DTC 114TS DTC 144E		


DIODE	PACKAGE VIEW
1N 4148 1N 4002	
UN XX. XBSX	
TERMINAL NAME	
B : BASE C : COLLECTOR E : Emitter	


## SCHEMATIC DIAGRAM

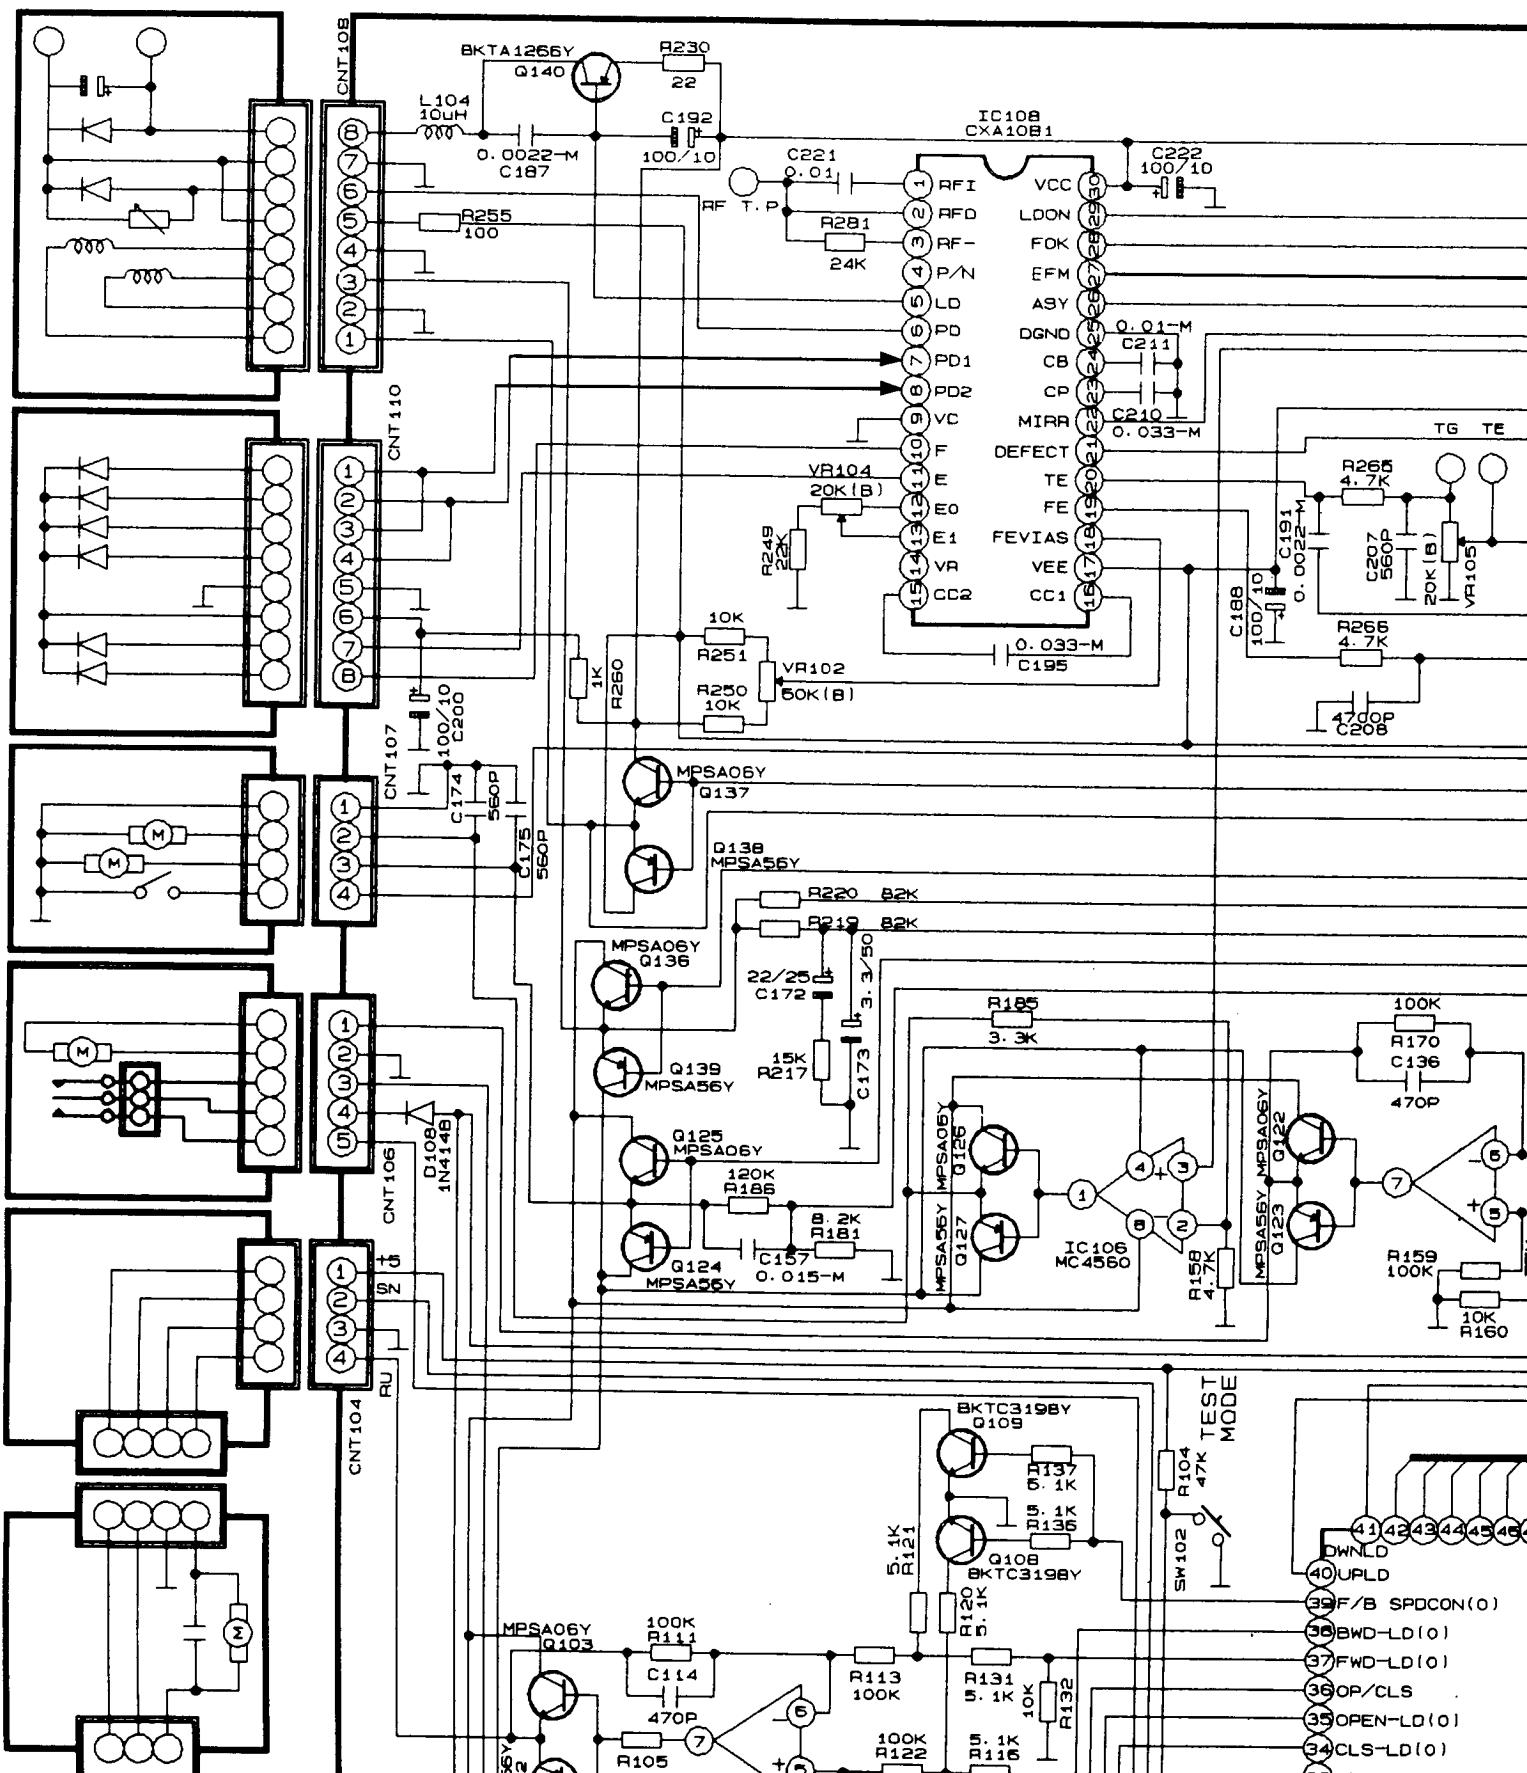

# MAIN B' D 4004500100

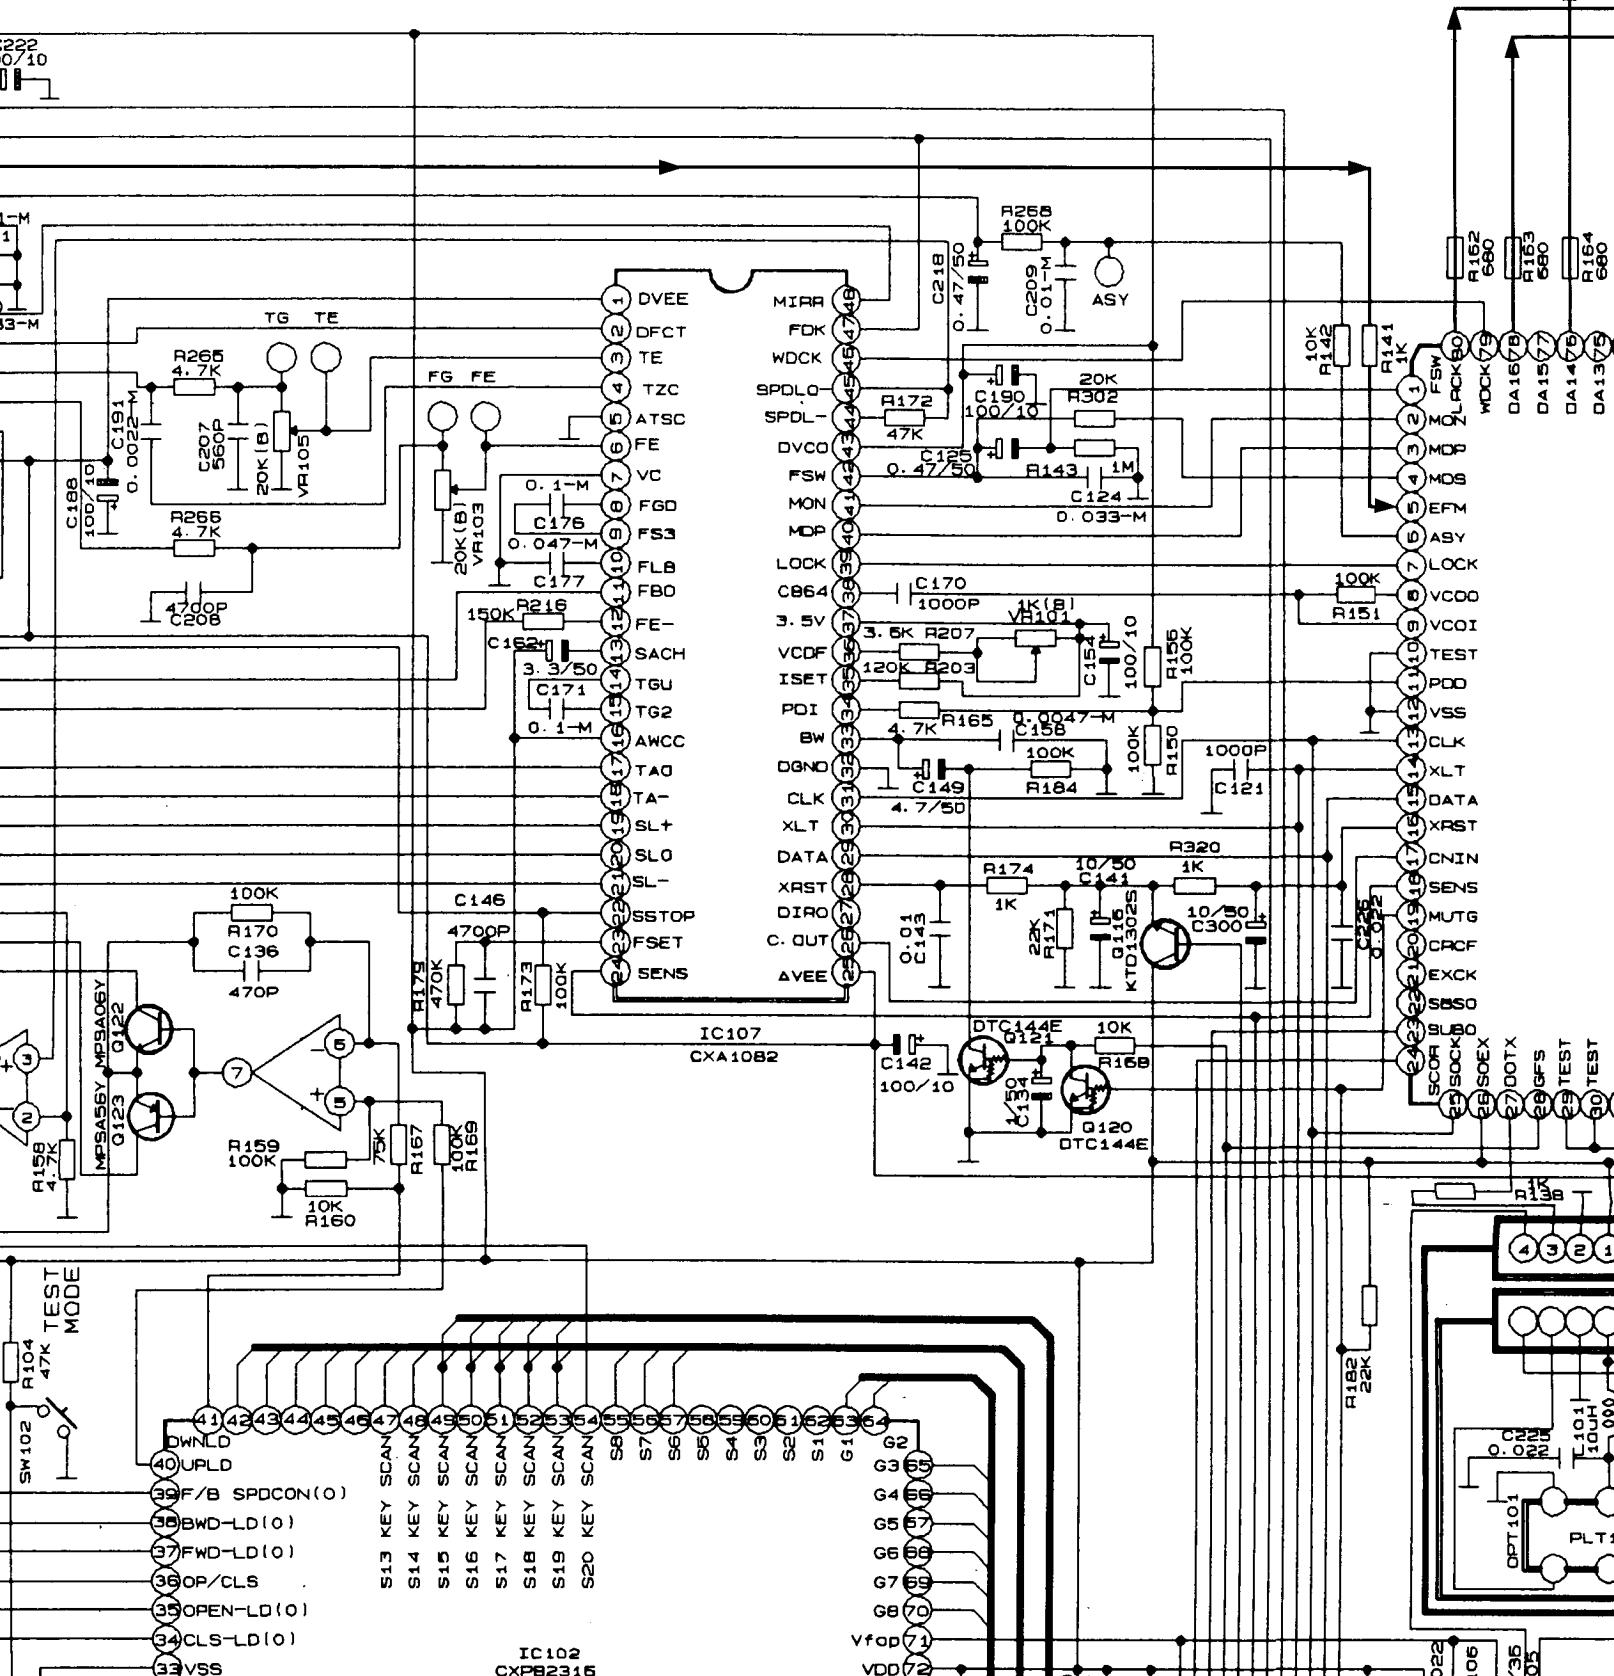

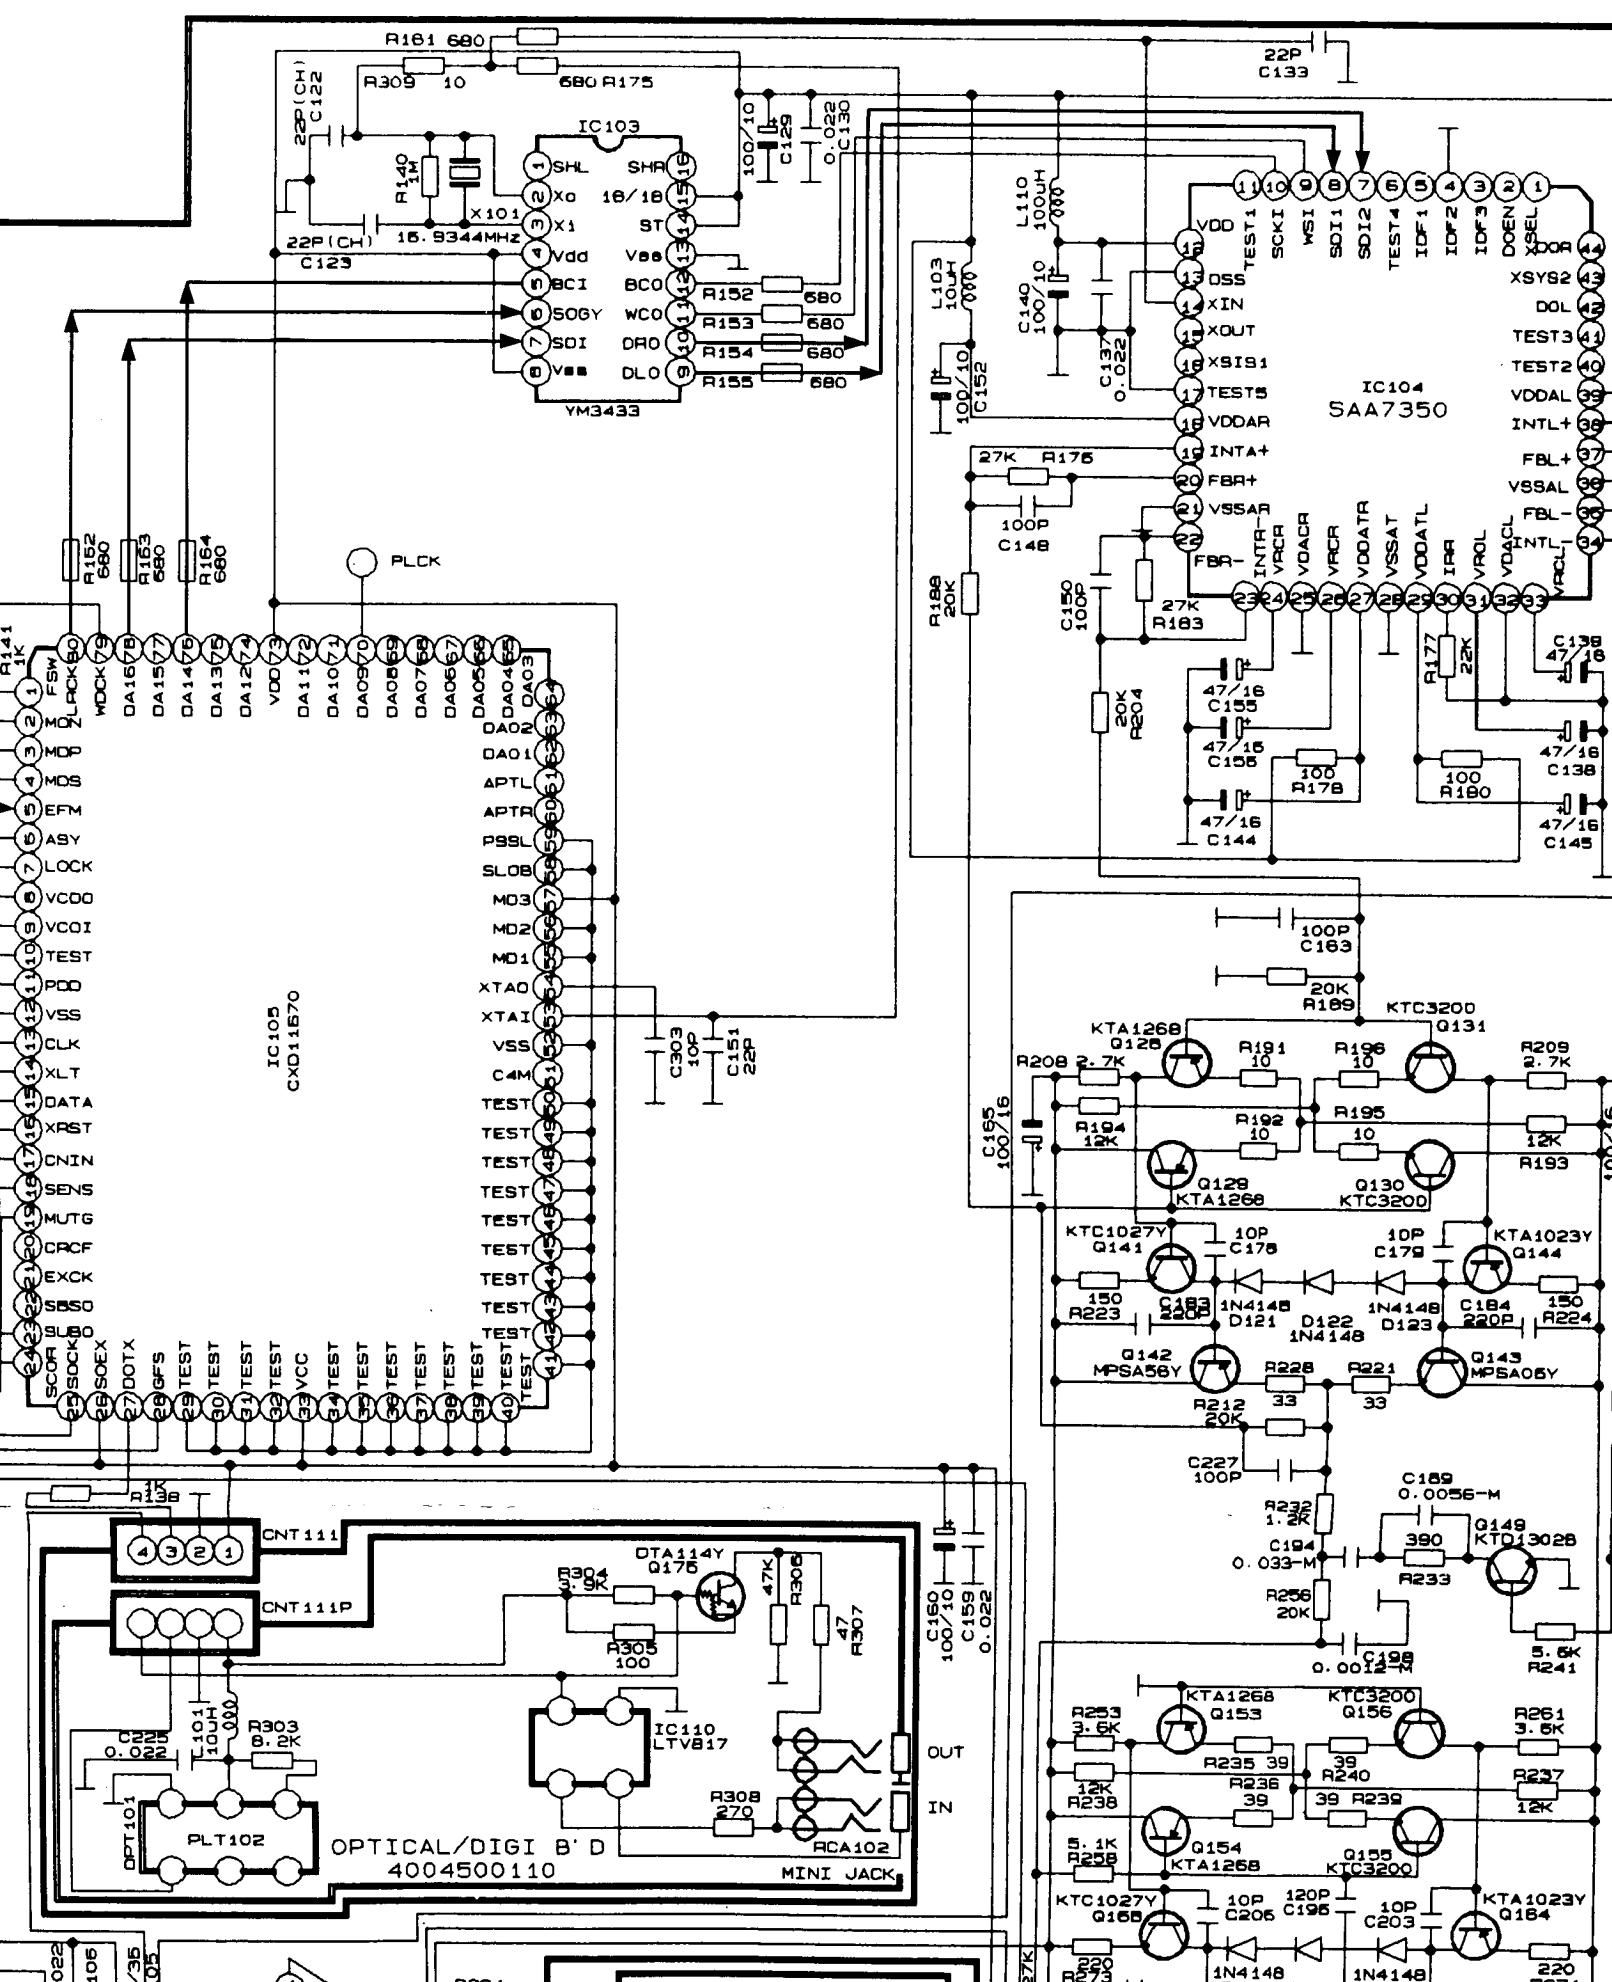

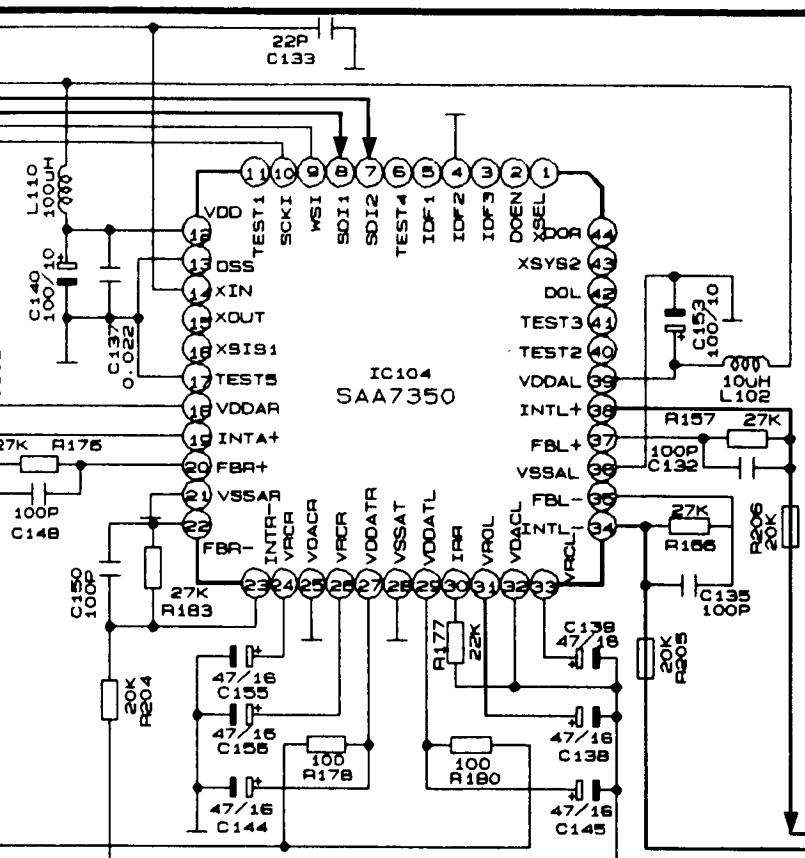



## NOTES

1. Resistor values are indicated in ohms unless otherwise specified  
[k=1,000 M=1,000,000]
2. Capacitor values are indicated in microfarads unless otherwise specified.  
[P=micro-microfarades]


## CAUTION



- Safety precaution to be followed during servicing
- 1) Since those parts marked with  $\Delta$  are critical parts for safety use only the one described in the parts list.
  - 2) Before returning the set to customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

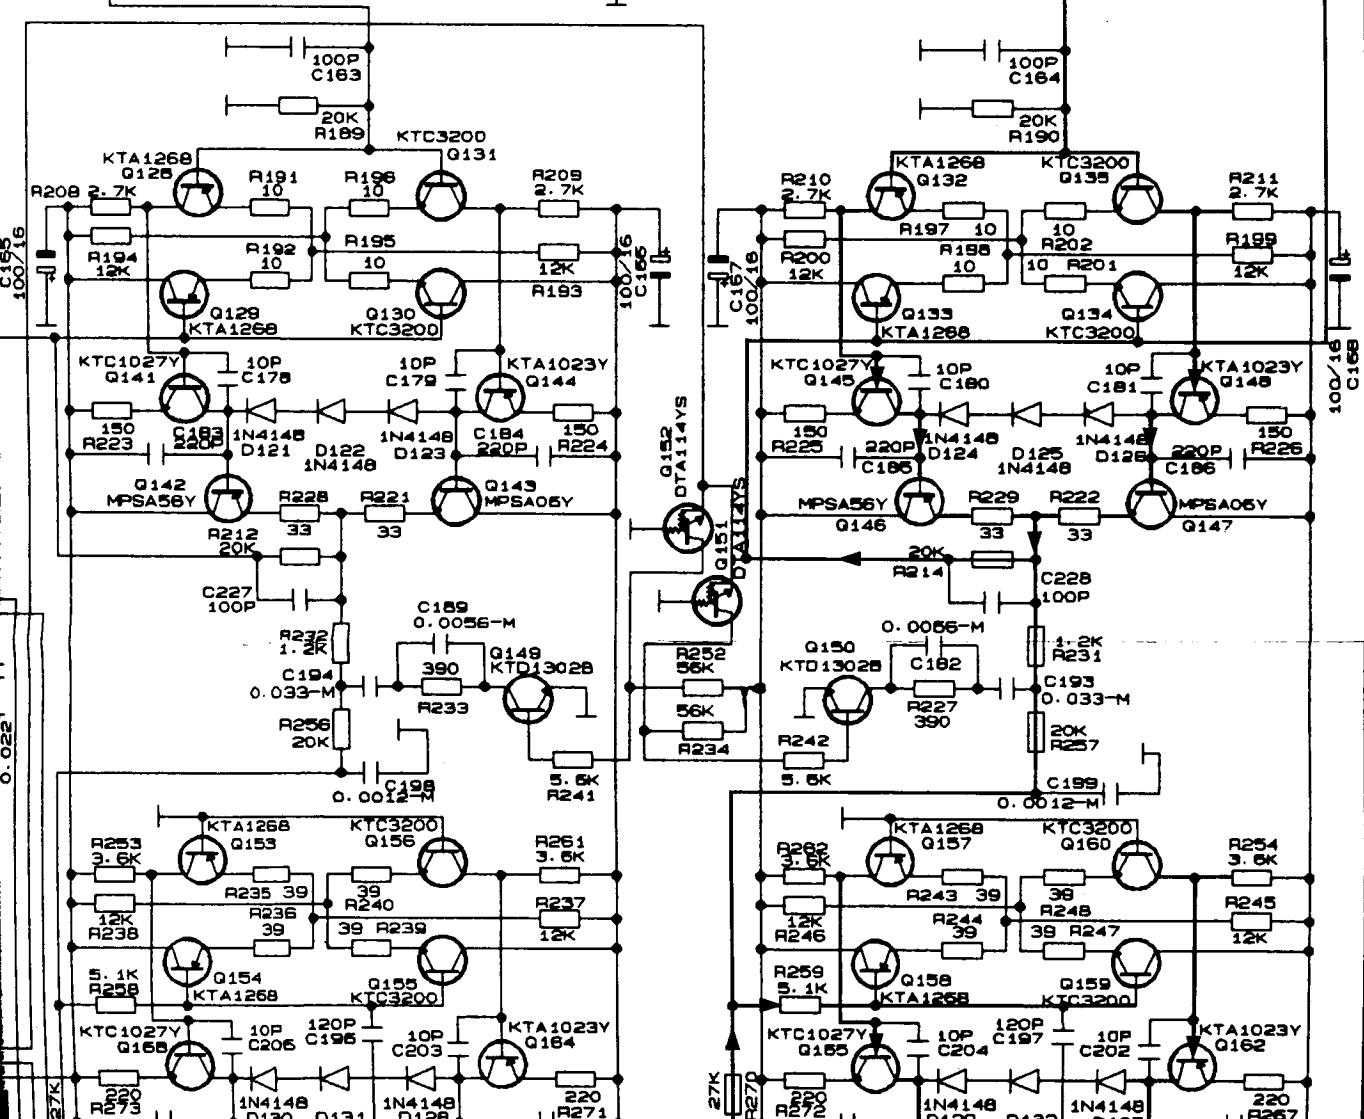


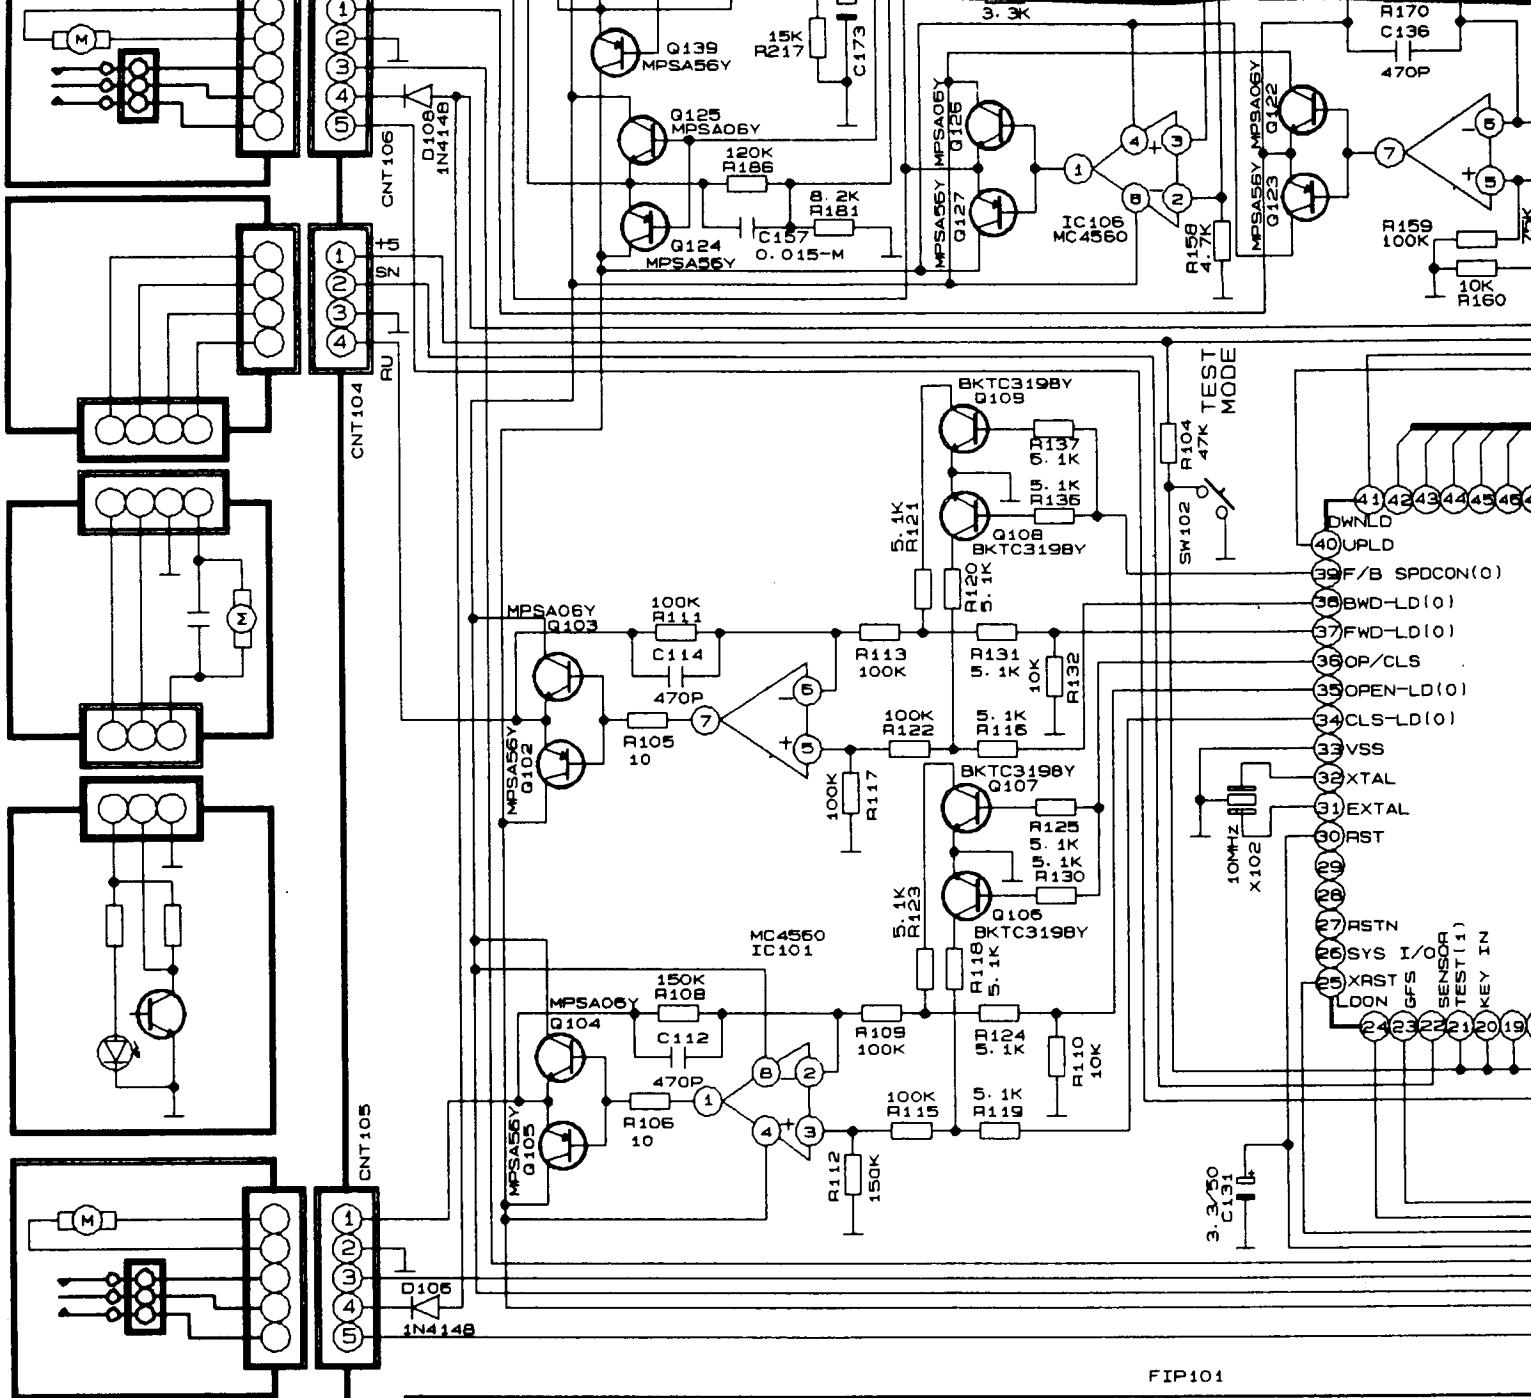


FIP101

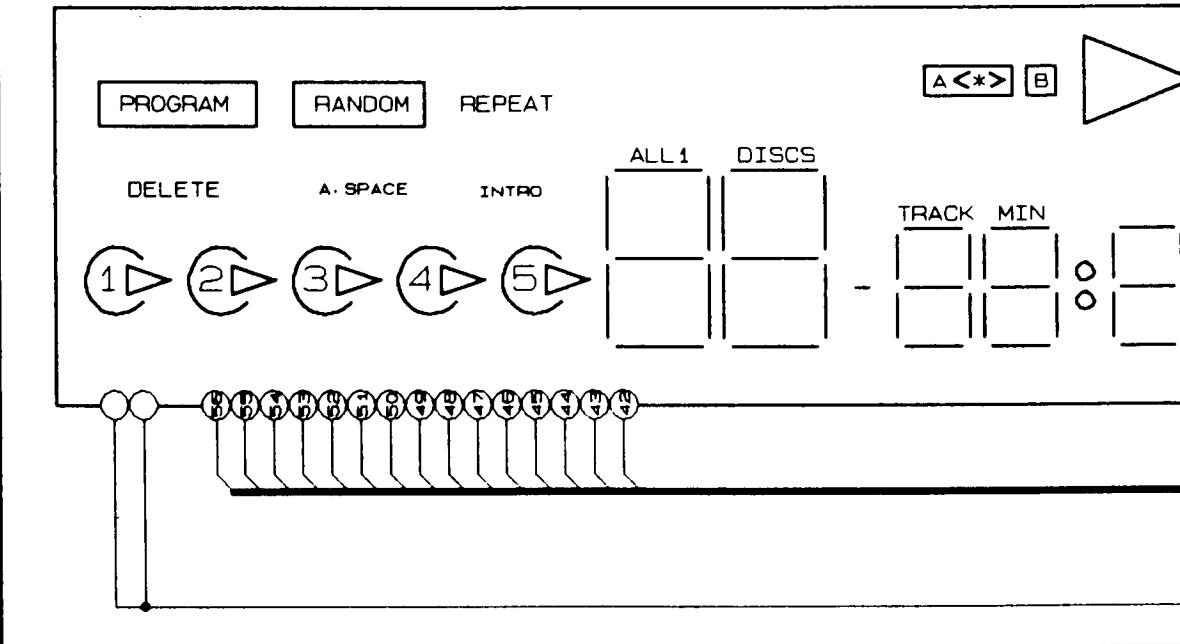

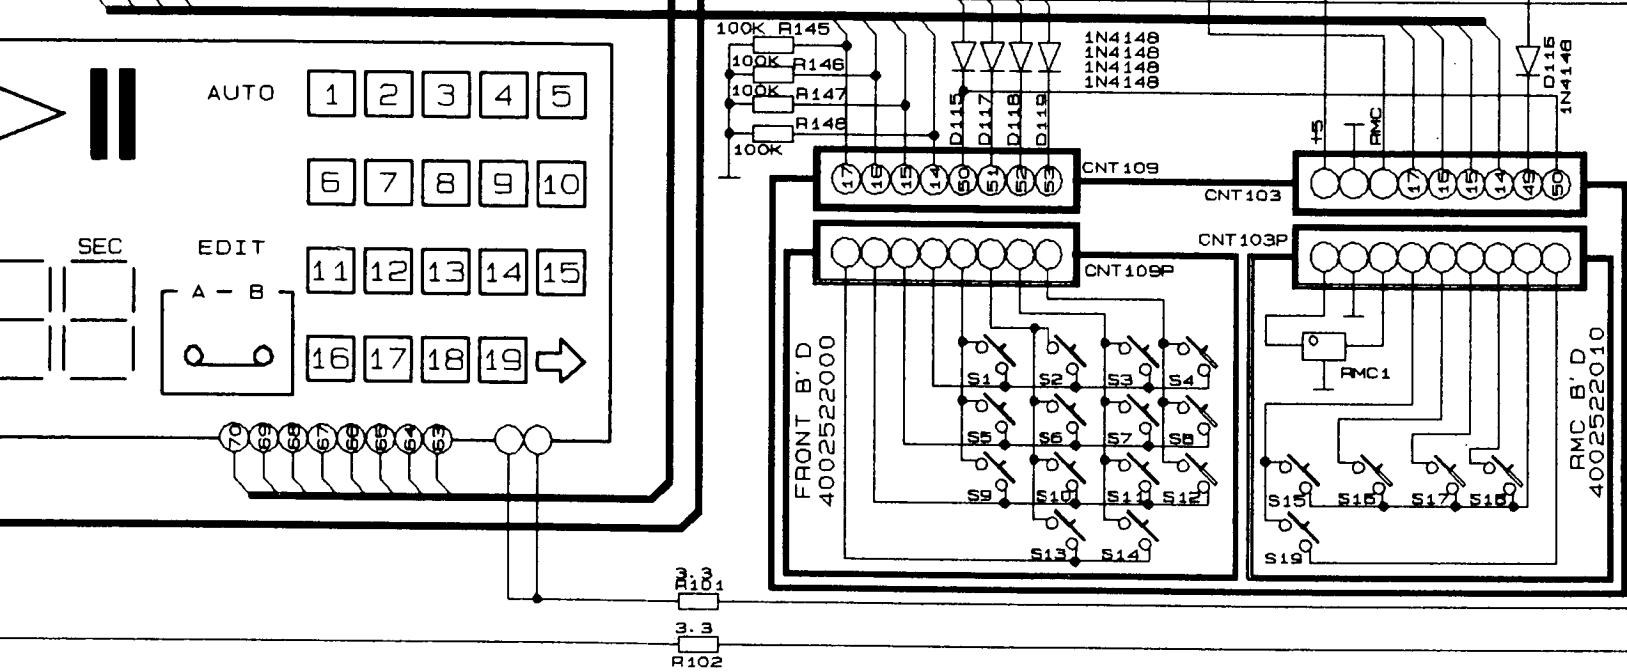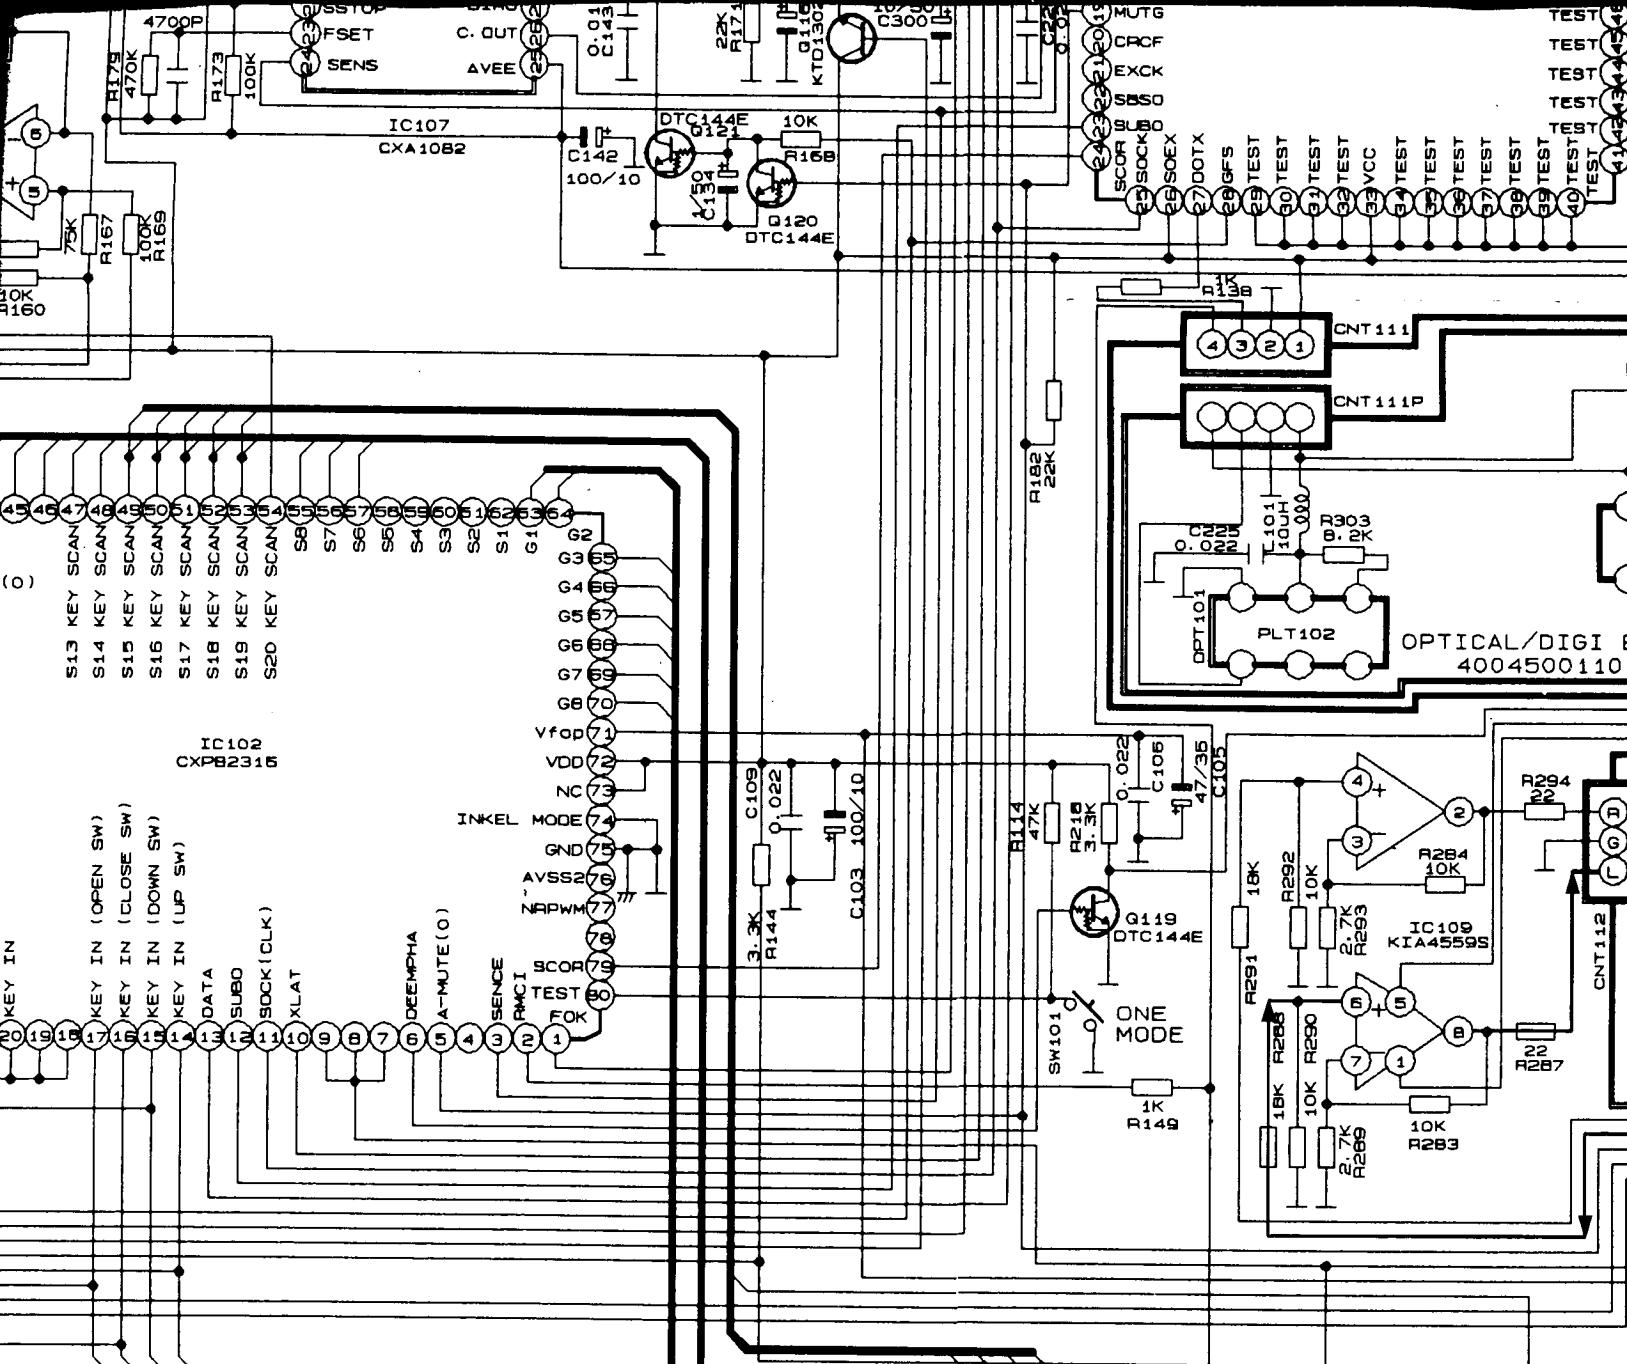

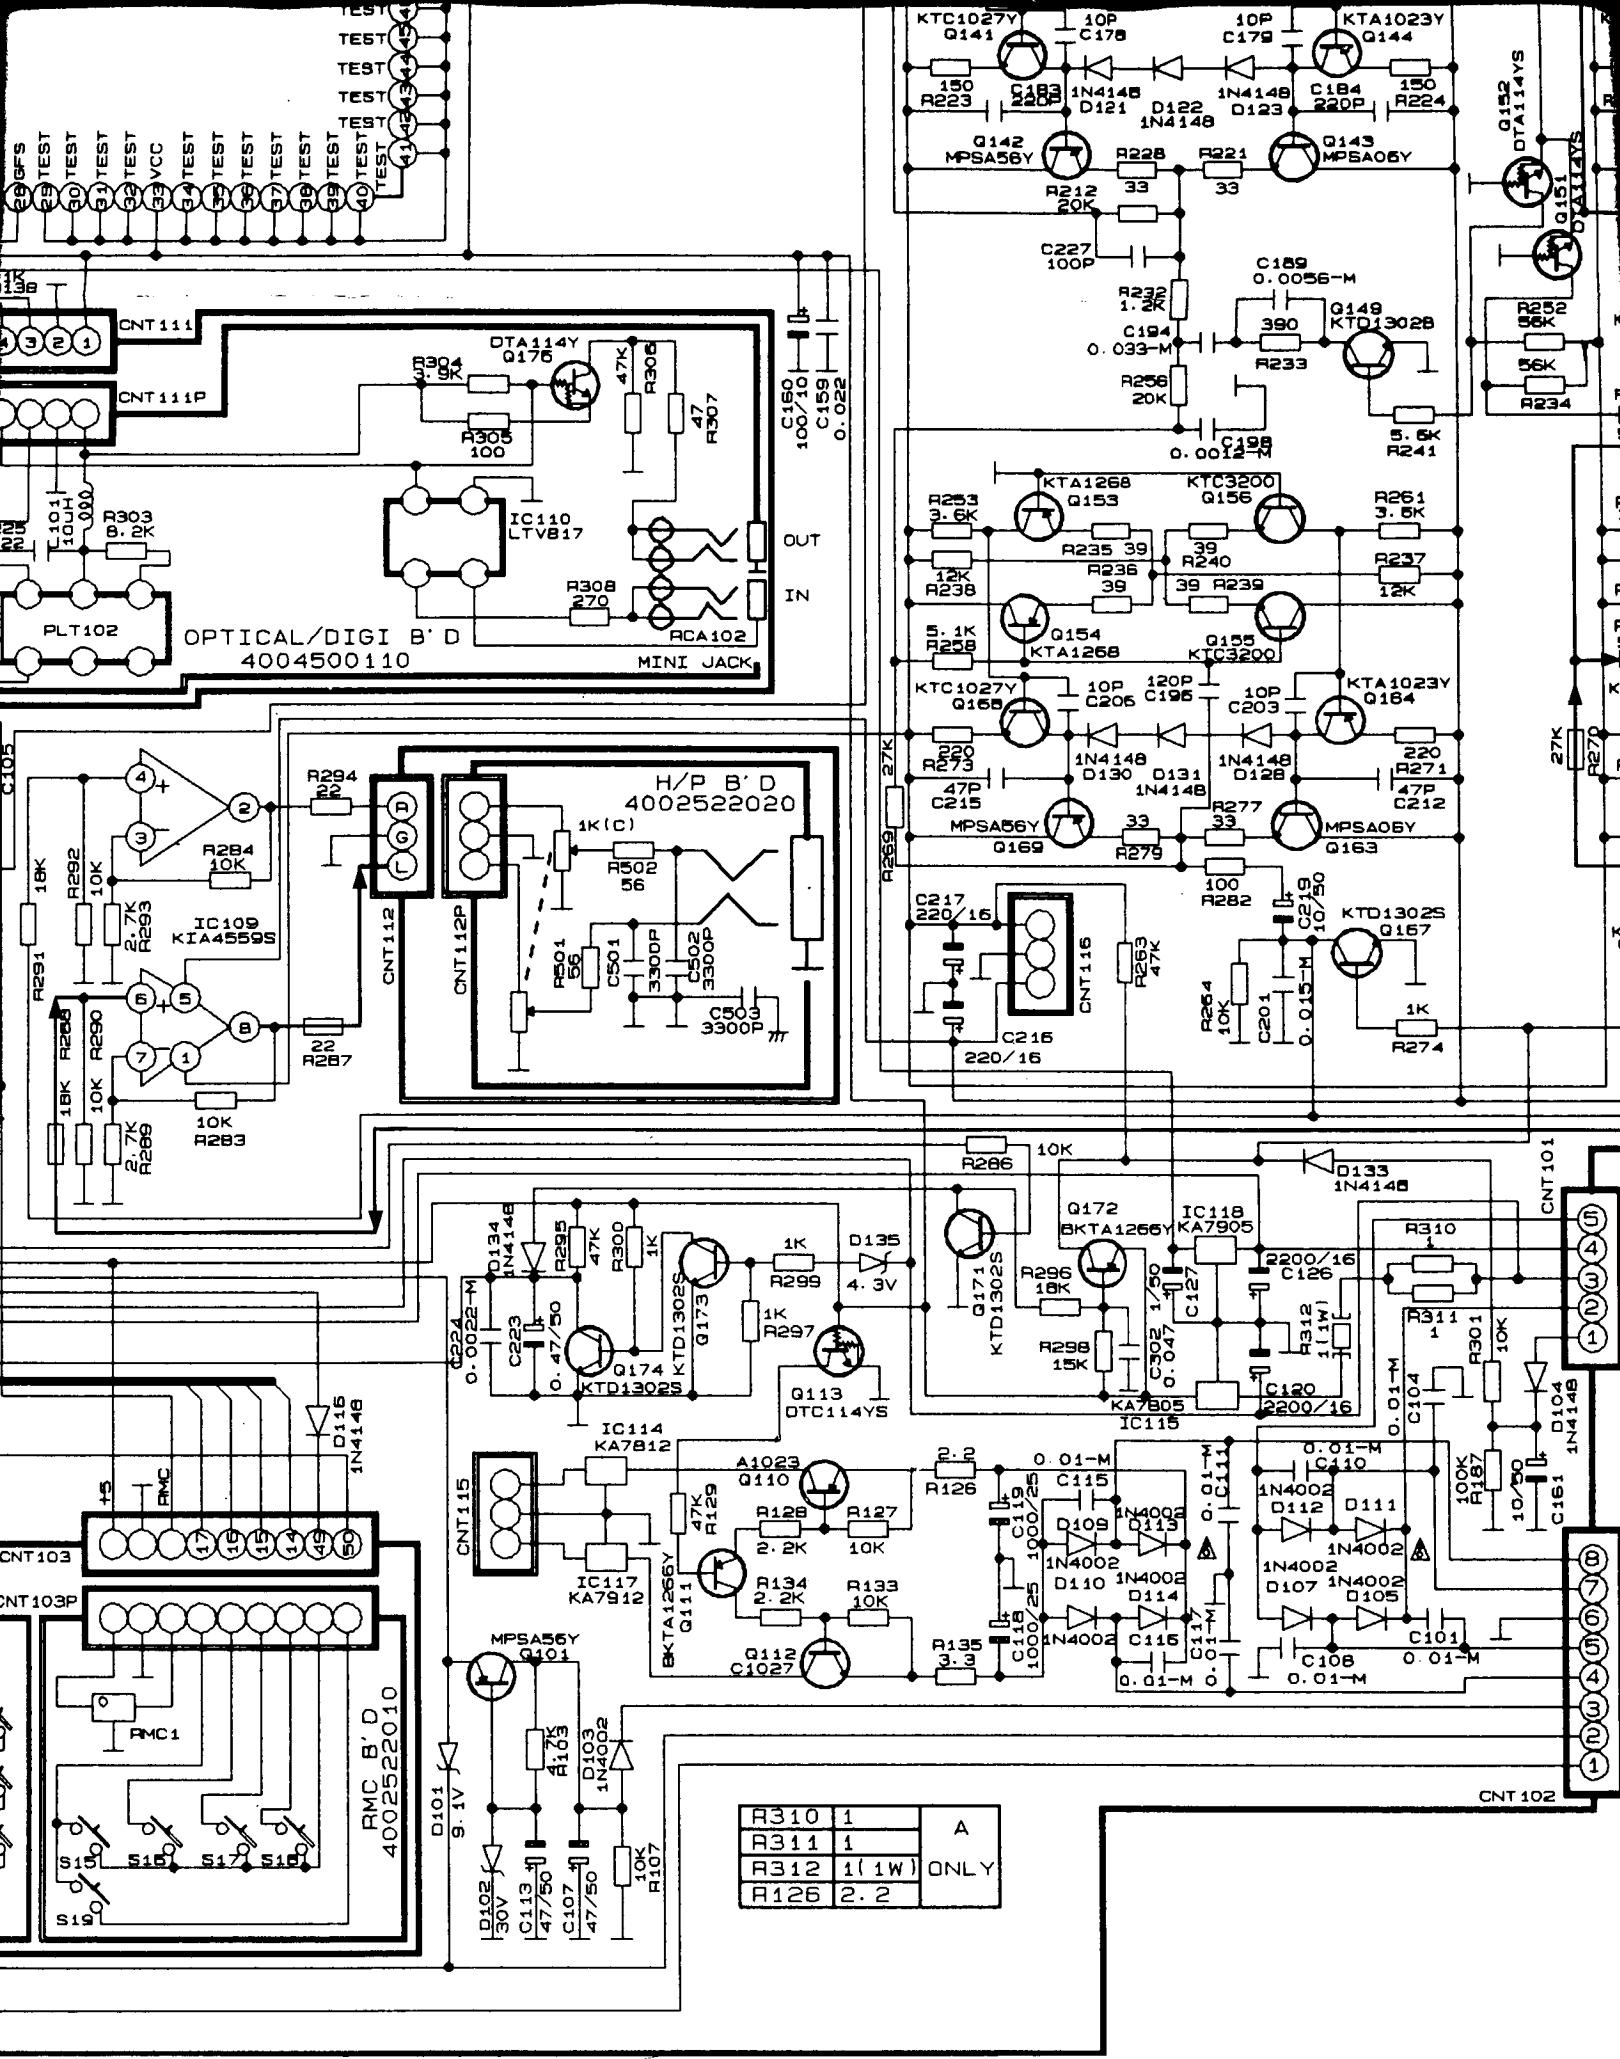

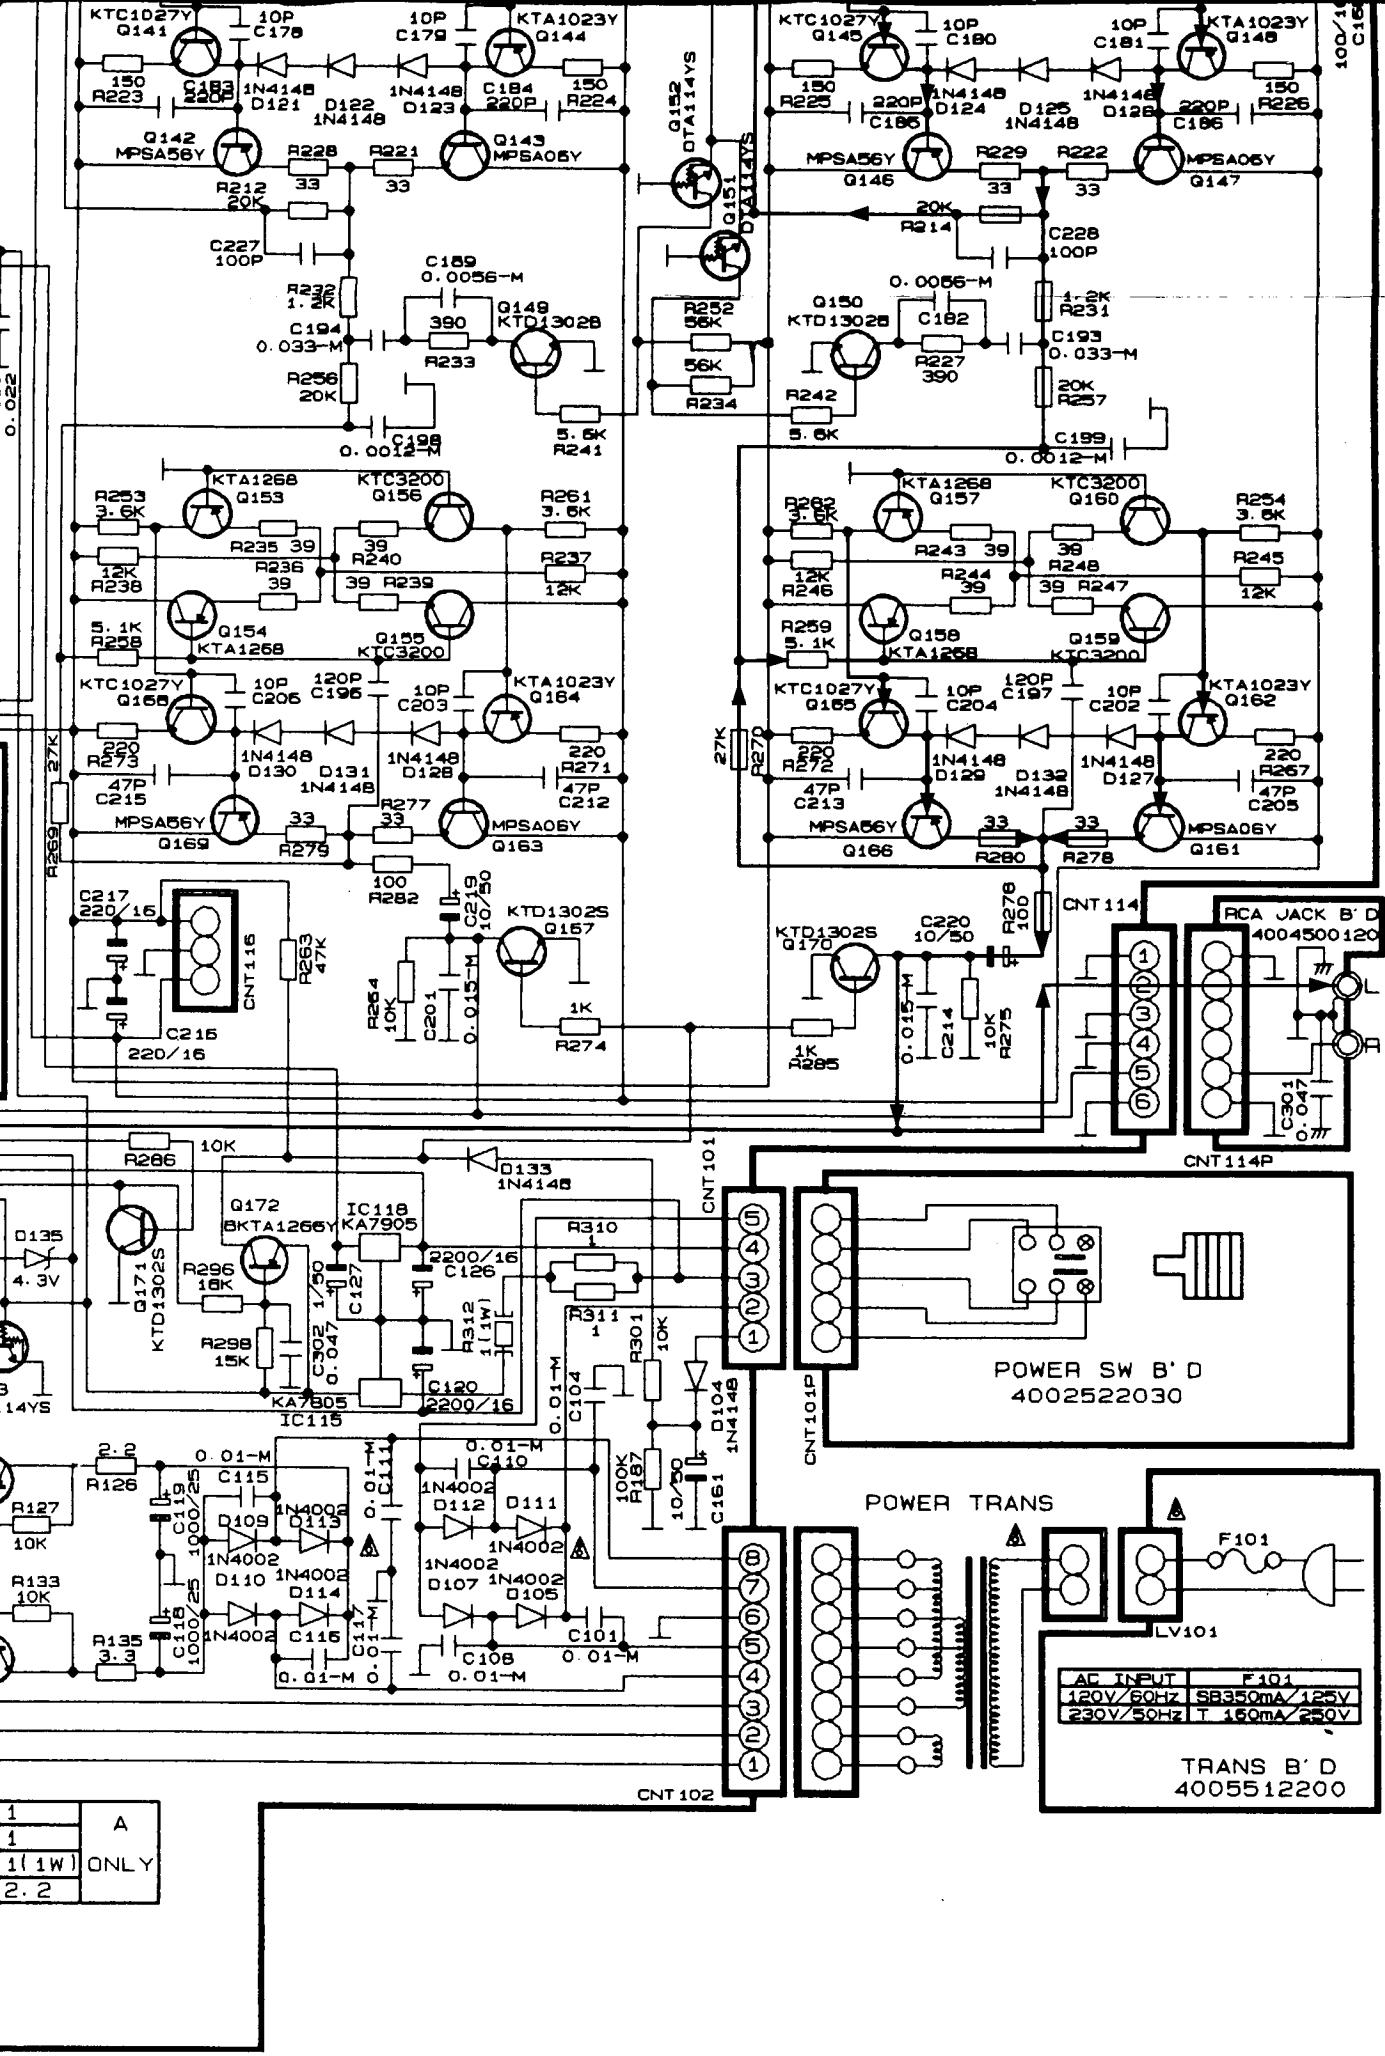

# WIRING DIAGRAM

